 
 
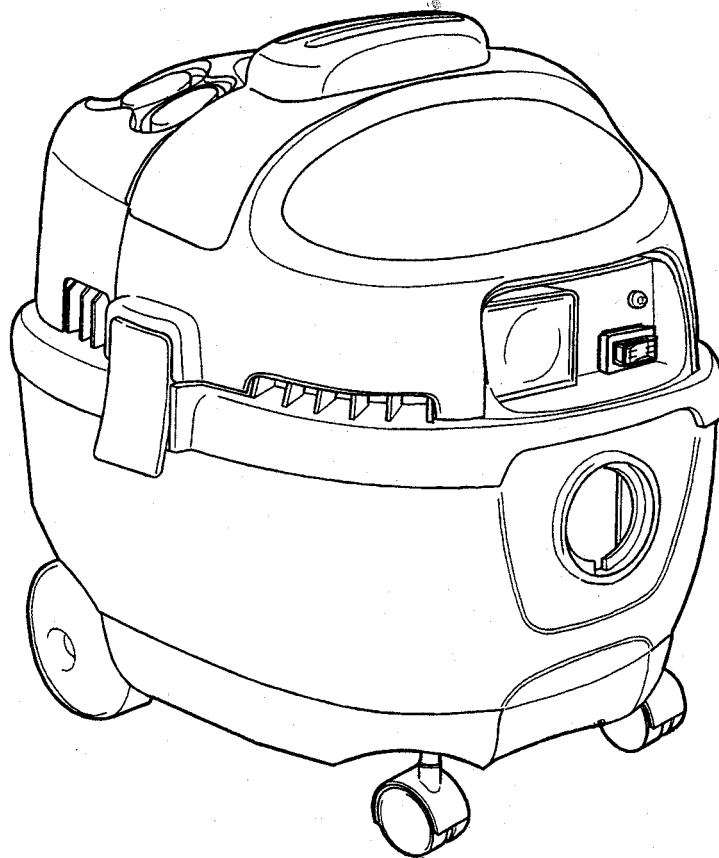 
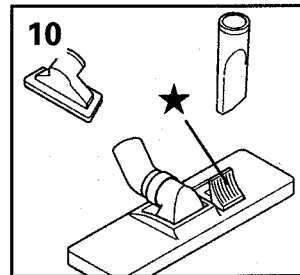 
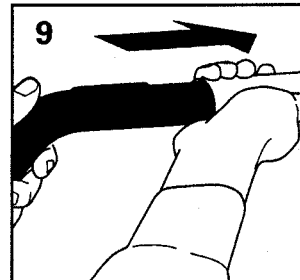 
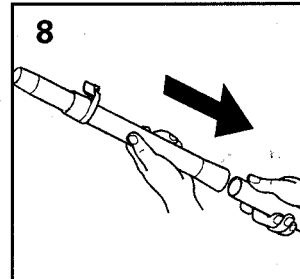 
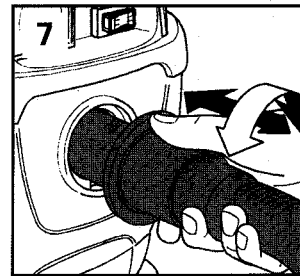 
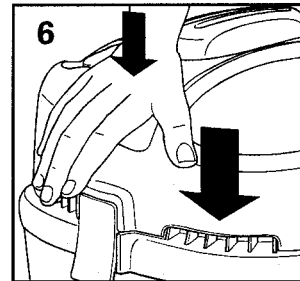 
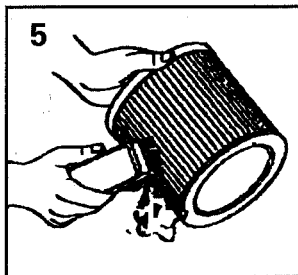 
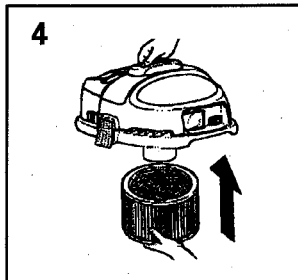 
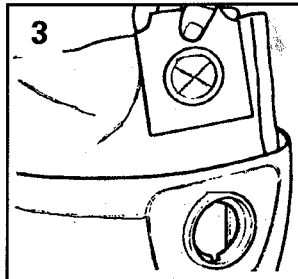 
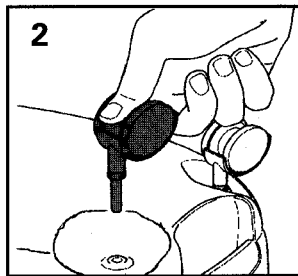 
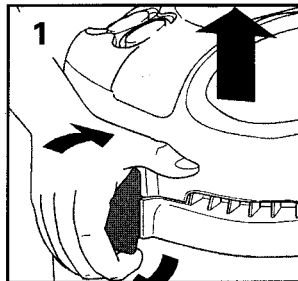 
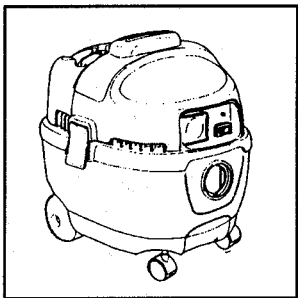 
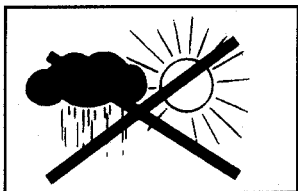 
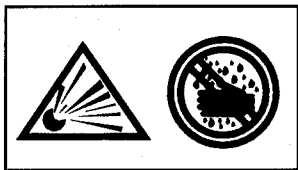 

















# **Electrolux**

## **FLEXIO**

               **INSTRUCTIONS FOR USE • HASZNÁLATI UTASÍTÁS  
GEBRAUCHSANLEITUNG • NOTICE D'EMPLOI  
INSTRUÇÕES DE UTILIZAÇÃO • INSTRUZIONI PER L'USO  
GEBRUIKSAANWIJZING • NÁVOD K OBSLUZE  
NÁVOD NA OBSLUHU • INSTRUCIUNI DE FOLOSIRE  
UPUTE ZA UPORABU • NAVODILA ZA UPORABO  
INSTRUKCJA OBSŁUGI • ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ  
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ**

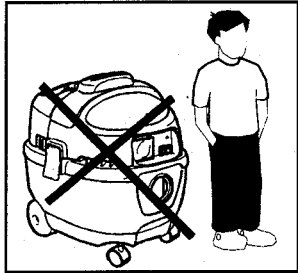

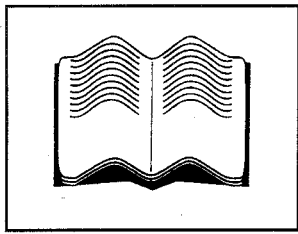

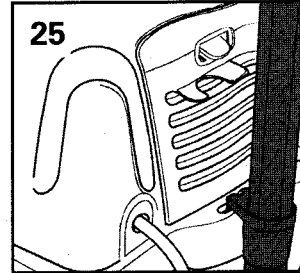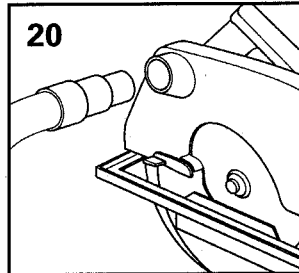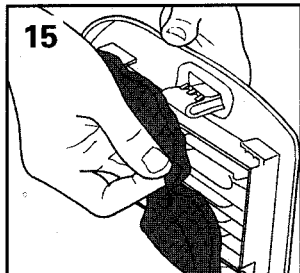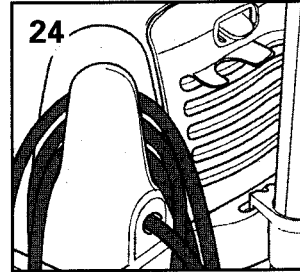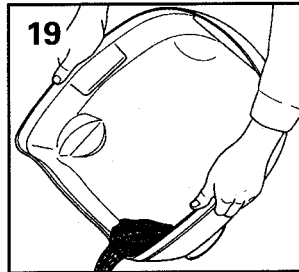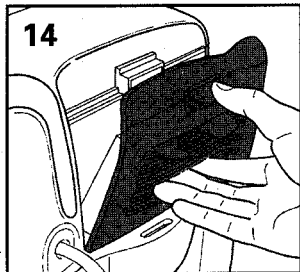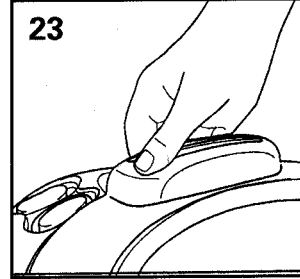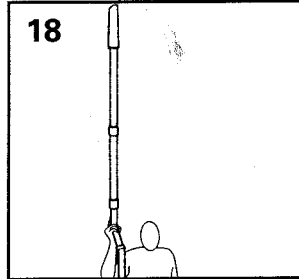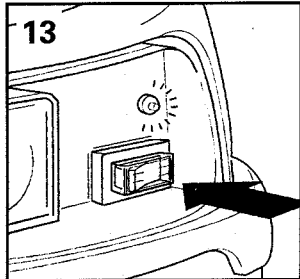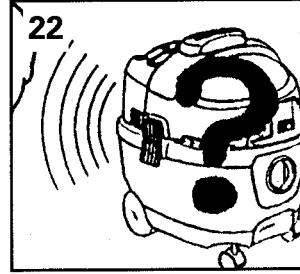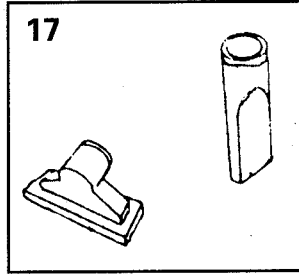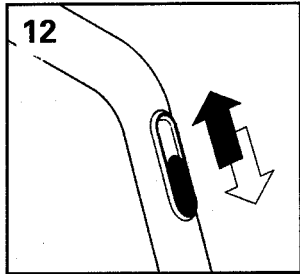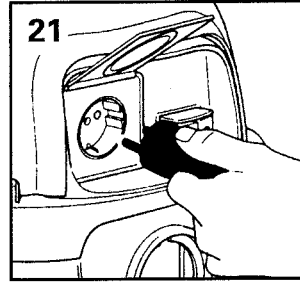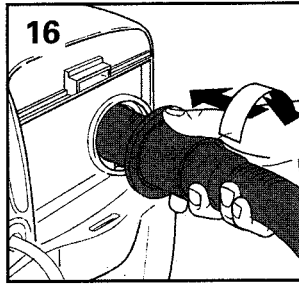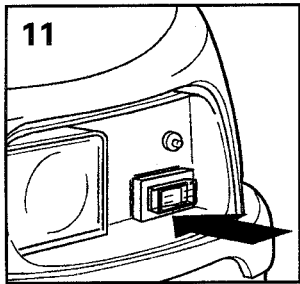

## ENGLISH

Thank you for choosing this appliance which has been designed and manufactured to ensure maximum safety and performance. We are sure you will be satisfied with using it.

### GENERAL SAFETY INSTRUCTIONS

- Carefully read these instructions regarding safety, assembly, use and maintenance of the appliance.
- Never use the appliance near flammable gases, liquids or hot, burning material.
- Keep this manual in a safe place. If you hand the appliance over to another person, remember to include the manual as well.
- Never leave the packaging around as it is potential source of risk to children.
- Keep the cable away from heat sources, oil, sharp edges and rough surfaces. Never pull on the cable to extract the plug from the socket or to move the appliance.
- Unplug the cable from the mains before opening up the appliance to change filter/dust bag or to empty the tank.
- The Flexio is only to be used by adults.
- All service and repairs must be carried out by authorised Electrolux service staff.

1. To open the appliance, press the two latches (5) and lift off the lid.

2. Fit the two front wheels (8) to the tank (7) by fully driving each pin into the holes under the tank.

### HOW TO USE THE APPLIANCE AS A DRY VACUUM CLEANER

3. Fit the dust bag (12) in the slots in the front part of the tank (7).

4. The Z 873 model is equipped with cartridge filter. Before using, please check if it fits properly.

5. When it is full of dust, brush the filter as shown.

6. Fit lid (4) to tank (7).

7. Fit the hose (13) to the appliance by inserting the hose connection in the tank (7). Turn the hose connection clockwise to lock it.

8. Fit the two tubes (20) by pushing them together.

9. Fit the handle (14) to the tubes (20).

10. Fit the floor nozzle (17) or the accessories (18, 19) to the tubes (20) as required. The appliance features storage slots where the two accessories can be stored when not used. These circular slots are located on top of the lid (4) behind the carrying handle. The floor nozzle is designed for use on hard floor and carpets. Switch mode by operating the pedal. For hard floors we recommend using the nozzle with the brushes down.

11. Connect the plug to the mains socket and press the on/off switch (1). The appliance is doubleinsulated, and does not need earthing.

12. The suction power is adjustable using the suction control (15) located on the handle (14).

13. Z873 model is equipped with electronic dust bag indicator (2). When the indicator is illuminated the dust bag (12) should be replaced.

14. The models are equipped with micro filter (11). This should be changed 3-4 times per year.

15. To change the micro filter remove the filter grille (10). The new micro filter easily slides into the slots on the filter grille.

16. The Flexio also features a blowing function. Remove the filter grille (10) and insert the hose connecting in the rear opening in the lid (4). Turn the hose connection clockwise to lock it.

### HOW TO USE THE APPLIANCE AS A WET VACUUM CLEANER

1. When using the cleaner for wet use the dust bag (12) must be removed. Open the appliance by pressing the two latches and lifting off the lid (4).

7. Remove the hose (13) by turning the hose connection counter-clockwise and

pulling it out. Remove the dust bag (12). Fit lid (4) to tank (7). Fit the hose (13) to the appliance by inserting the hose in the tank (7). Turn the hose connection clockwise to lock it.

8. Fit the two tubes (20) by pushing them together.

9. Fit the handle (14) to the tubes (20).

12. When you use the appliance as a wet vacuum cleaner without nozzle, please open the slider on hose handle.

17. For best cleaning result during wet use we recommend the accessories (18-19) to be used. Fit them to tubes (20) as required.

11. Connect the plug to the mains socket and press the on-off switch (1). The appliance is doubleinsulated, and does not need earthing.

18. Having used the cleaner for wet suction, please make sure no water is left in the tubes and hose. This is easily achieved by holding the tubes vertically for about 30 seconds, having the cleaner switched on.

19. When the tank is full the noise level will increase slightly and the cleaner loses all suction power. In this case switch off the cleaner and empty the liquid collected in the tank.

#### HOW TO USE THE APPLIANCE TOGETHER WITH POWER TOOLS

21. Z873 model is equipped with a power outlet socket (3). This feature allows electrical power tools to be connected to the cleaner.

**NOTE: When a power tool is connected to the socket the cleaner must be connected to a mains socket with earth connection.**

3. When the cleaner is used with a power tool the dust bag (12) must be fitted. After opening the appliance by pressing the two latches and lifting off the lid (4), the dust bag is fitted in the slots in front part of the tank (7).

16-20. Fit the hose for power tools (22) to the appliance by inserting the hose connection in the tank (7). Turn the hose connection clockwise to lock it. The tool connection is made from rubber and can easily be cut to fit your specific power tool. Fit the tool connection to the power tool by pressing it into the air outlet of the power tool.

21. Connect the plug of the power tool to the socket (3) on the lid (4). When the Flexio and the power tool are switched on the combination is ready for use.

#### SPECIAL REMARKS

22. If the tank is full of liquid a safety device interrupts suction and the noise level is increased appreciably; switch off the appliance; empty the tank and place the appliance upright. Wait for a few seconds, then switch it on again.

 
23. Only carry the cleaner by the handle on the lid (4).

24. In order to simplify storage the Flexio is equipped with an on-board cable storage.

25. The Flexio also features a parking slot for storing floor nozzle and tubes when not in use.

#### ECOLOGY

The symbols for the materials used in manufacturing, the packaging, components and accessories, as well as the recycling symbol, are stamped on the parts providing their size allows. Dispose of these objects through the appropriate network of disposal.

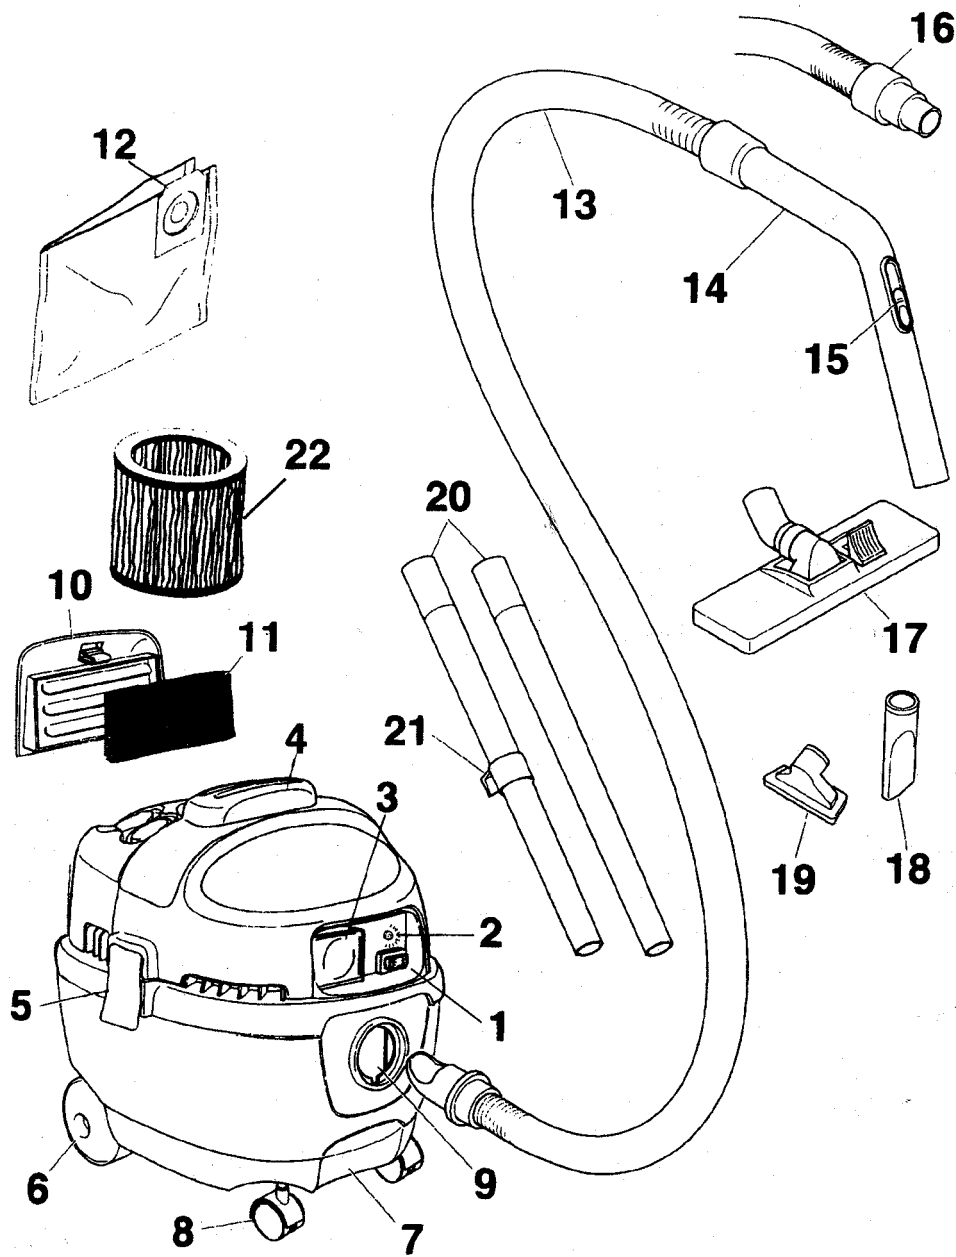

<b>FLEXIO</b>	<b>ENGLISH</b>		
1. On-off switch	7. Tank	16. Hose for power tools (some models)	
2. Dust bag indicator (some models)	8. Front wheels	17. Floor nozzle	
3. Power outlet	9. Suction outlet	18. Crevice nozzle	
4. Lid	10. Filter grill	19. Upholstery nozzle	
5. Latches	11. Micro filter	20. Tubes	
6. Rear wheels	12. Dust bag	21. Parking clip	
	13. Hose	22. Cartridge filter	
	14. Handle		
	15. Suction control		

<b>FLEXIO</b>	<b>MAGYAR</b>		
1. Bekapcsoló gomb	7. Tartály	16. Elektromos szerszámra csatlakoztatható szívócső (modelltől függő)	
2. Porzsák telítettség jelző (modelltől függő)	8. Elülső kerekek	17. Szívófej	
3. Szerszámcsatlakozó (modelltől függő)	9. Beszívó nyílás	18. Résszívó	
4. Tartályfedél	10. Mikroszűrő rács	19. Kis szívófej	
5. Kampók	11. Mikroszűrő (modelltől függő)	20. Szívócső hosszabbítók	
6. Hátsó kerekek	12. Porzsák	21. Rögzítő	
	13. Szívócső	22. Cartridge (filter)szűrő	
	14. Fogantyú		
	15. Szívásszabályzó		

<b>FLEXIO</b>	<b>DEUTCH</b>		
1. Ein-/Ausschalter	7. Behälter	15. Saugregulierung (je nach Modell)	
2. Filterwechselanzeige (je nach Modell)	8. Lenkrollen	16. Schlauch für Werkzeuganschluss (je nach Modell)	
3. Werkzeuganschluss (je nach Modell)	9. Schlauchanschluss	17. Bodendüse	
4. Deckel	10. Ausblasgrill	18. Fugendüse	
5. Verschlüsse	11. Mikrofilter (je nach Modell)	19. Kleine Düse	
6. Räder	12. Staubbeutel	20. Rohre	
	13. Schlauch Ø 32 mm	21. Rohrclip	
	14. Handgriff	22. Dauerfilter	

<b>FLEXIO</b>	<b>FRANÇAIS</b>		
1. Interrupteur Marche/Arrêt	7. Cuve	15. Réglage de débit d'air sur la poignée de flexible	
2. Indicateur de remplissage de sac (selon modèle)	8. Poulettes multidirectionnelles	16. Flexible bricolage	
3. Prise outillage électroporatif (selon modèle)	9. Orifice d'aspiration pour connexion du flexible	17. Suceur combiné tapis/sols durs	
4. Couverture avec poignée de transport	10. Grille de sortie d'air	18. Suceur long	
5. Crochets de verrouillage	11. Microfiltre (selon modèle)	19. Petit suceur	
6. Rouses	12. Sac à poussière	20. Tubes rigides	
	13. Flexible 32 mm Ø	21. Crochet de fixation tube	
	14. Poignée de flexible	22. Filtre "type automobile"	

<b>FLEXIO</b>	<b>PORTUGUÊS</b>		
1. Interruptor On/Off	8. Rodas da frente	mentas eléctricas (alguns modelos)	
2. Indicador para o saco do lixo (alguns modelos)	9. Saída de sucção	17. Escova	
3. Tomada eléctrica	10. Grelha do filtro	18. Peça para os cantos	
4. Tampa	11. Microfiltro (alguns modelos)	19. Peça para estofos	
5. Patilhas	12. Saco do pó	20. Tubos	
6. Rodas traseiras	13. Mangueira	21. Suporte de peças	
7. Reservatório	14. Pega	22. Filtro de cassete	
	15. Controlo de sucção		
	16. Mangueira para ferra-		

<b>FLEXIO</b>	<b>ITALIANO</b>		
1. Interruttore di accensione/ spegnimento	8. Rotelle anteriori	16. Tubo flessibile per utensili elettrici (in alcuni modelli)	
2. Spia del sacco della polvere (in alcuni modelli)	9. Presa di aspirazione	17. Bocchetta per i pavimenti	
3. Presa di corrente	10. Griglia del filtro	18. Bocchetta per le fessure	
4. Coperchio	11. Microfiltro (in alcuni modelli)	19. Bocchetta per le tappezzerie	
5. Ganci	12. Sacco della polvere	20. Tubi	
6. Rotella posteriori	13. Tubo flessibile	21. Gancio per riporre il tubo non in uso	
7. Serbatoio	14. Impugnatura	22. Filtro in cartuccia	
	15. Dispositivo di regolazione dell'aspirazione		

<b>FLEXIO</b>	<b>NEDERLANDS</b>		
1. aan/uit-toets	8. voorwielen	gereedschap	
2. stofzak-vol indicatie (sommige modellen)	9. aanzuigopening	(sommige modellen)	
3. contactdoos	10. filterrooster	17. zuigmond	
4. deksel	11. microfilter	18. kierenzuigmond	
5. grepen	12. stofzak	19. meubelzuigmond	
6. achterwielen	13. slang	20. buizen	
7. reservoir	14. pistoolgreep	21. parkeerhouder voor zuig- buis	
	15. schuif voor zuigkrachtregeling	22. Casettefilter	
	16. slang voor elektrisch		

<b>FLEXIO</b>	<b>ČESKY</b>		
1. Hlavní vypínač	7. Nádoba	16. Hadice pro elektrický nástroj (podle modelu)	
2. Indikátor prachového sáčku (některé modely)	8. Přední kolečka	17. Podlahová hubice	
3. Zásuvka síťového napětí	9. Vывod sání	18. Štěrbinová hubice	
4. Víko	10. Mřížka filtru	19. Hubice na čalounění	
5. Západky	11. Mikrofiltr (některé modely)	20. Trubice	
6. Zadní kolečka	12. Prachový sáček	21. Parkovací sponka	
	13. Hadice	22. Výměnný filtr	
	14. Rukojeť hadice		
	15. Regulace sání		

<b>FLEXIO</b>	<b>SLOVENSKY</b>		
1. vypínač Zap/Vyp	7. nádrž	16. hadica napojenia	
2. indikátor plnosti prachového vrečka (niektoré modely)	8. predné kolieska	prístrojov	
3. zásuvka elektrického príslušenstva	9. napojenie hadice	(niektoré modely)	
4. vrchná časť	10. kryt mikrofiltra	17. padlahová hubica	
5. západky	11. mikrofilter (niektoré modely)	18. štrbinová hubica	
6. zadné kolieska	12. prachové vrečko	19. hubica na čalúnenia	
	13. hadica	20. rúrky	
	14. rúčka hadice	21. držiak parkovacej polohy	
	15. regulator sanis	22. kotúčový filter	

<b>FLEXIO</b>	<b>GREEK</b>		
1. Διακόπτης On/Off	9. Άνοιγμα απορρόφησης	16. Σωλήνας για εξαρτήματα (μερικά μοντέλα)	
2. Δείκτης σακούλας (μερικά μοντέλα)	10. Σχάρα φίλτρου	17. Ρύγχος πατώματος	
3. Πρίζα	11. Μικροφίλτρο (μερικά μοντέλα)	18. Ρύγχος για έπιπλα	
4. Καπάκι	12. Σακούλα	19. Ρύγχος για ταπετσαρίες	
5. Πίσω ρόδες	13. Εύκαμπτος σωλήνας	20. Σωλήνας	
6. Γάντζοι	14. Χειρολαβή	21. Υποδοχή αποθήκευσης	
7. Δοχείο	15. Διακόπτης ελέγχου απορρόφησης	22. Εξοπλισμένο με φίλτρο	
8. Μπροστά ρόδες			

**FLEXIO****ROMÂN**

1. Comutator pornit/oprit
2. Indicator luminos pentru umplerea sacului de praf (la anumite modele)
3. Priza pentru echipamentul electric portativ
4. Capac
5. Cleme
6. Roțile din spate

7. Rezervor
8. Roțile din față
9. Orificiul de aspirație pentru conectarea furtunului
10. Grila cu filtru (pentru ieșirea aerului)
11. Micro filtru (la anumite modele)
12. Sac pentru praf
13. Furtun diametru 32 mm
14. Mâner

15. Reglajul debitului de aer
16. Furtun pentru accesorii putere
17. Duza pentru podea
18. Duza lungă pentru locuri greu accesibile
19. Duza pentru tapițerie
20. Tuburi
21. Clemă de fixare a tubului
22. Filtru tip cartus

**FLEXIO****HRVATSKI**

1. Predikač za uključivanje/isključivanje
2. Indikator za vrećicu za prašinu (kod nekih modela)
3. Utičnica napajanja
4. Poklopac
5. Kopče
6. Stražnji kotačići

7. Kućište se spremnikom
8. Prednji kotačići
9. Usisni otvor
10. Rešetkasti poklopac filtra
11. Mikro filter (kod nekih modela)
12. Vrećica za prašinu
13. Crijevo
14. Ručka
15. Kontrolni usisni otor

16. Crijevo za spajanje na alat (model Z 873)
17. Podna četka
18. Nastavak za uske otvore
19. Nastavak za tapecirani namještaj
20. Cijevi
21. Držać za odlaganje
22. Opremljen filterom

**FLEXIO****RUSSIA**

1. Кнопка ВКЛ/ВЫКЛ
2. Индикатор заполнения пылесборника (в зависимости от модели)
3. Разъем для подключения турбо-насадок
4. Крышка
5. Защелки
6. Задние колеса
7. Резервуар

8. Передние колеса
9. Отверстие для всасывания
10. Решетчатая крышка фильтра
11. Микрофильтр (в зависимости от модели)
12. Пылесборник
13. Шланг
14. Ручка шланга
15. Регулятор мощности всасывания

16. Шланг для работы с турбо-насадками (в зависимости от модели)
17. Насадка для чистки пола
18. Щелевая насадка
19. Насадка для чистки мебели
20. Трубки
21. Крепление для хранения трубок на корпусе пылесоса
- 22.

**FLEXIO****POLSKI**

1. Przycisk Włączony/Wyłączony (on/off)
2. Wskaźnik napięcia worka na kurz (tylko niektóre modele)
3. Gniazdko
4. Pokrywa
5. Zaczepy
6. Kółka tylne

7. Zbiornik
8. Kółka przednie
9. Gniazdo wlotowe
10. Kratka filtra
11. Microfiltr (tylko niektóre modele)
12. Worek na kurz
13. Wąż
14. Uchwyt
15. Regulacja siły ssania
16. 64 mm wąż (do nabycia

- jako wyposażenie dodatkowe)
17. Szczotka podłogowa
18. Ssawka do odkurzania np. trudno dostępnych miejsc
19. Ssawka do odkurzania mebli z tapicerką
20. Rury przedłużające
21. Klips do "parkowania" rur
22. Dodatkowy filtr

218788-10

 **The Electrolux Group.** *The world's No. 1 choice.*

*The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.*