

TROUBLE SHOOTING

Consumer Care

If your hood presents any malfunction, before calling the customer service, please check if the cause of failure can be easily and quickly corrected without assistance from technician.

When the suggested solutions are not enough, call the Electrolux Service Center.

Probable Causes / Solutions

<p>If Hood does not work (not Connect)</p>	<p>The power cord is not plugged in or is loose.Taken with bad contact.The circuit breaker is off or power failure.</p>	<p>Make sure the power cord is properly plugged into the outlet. Please correct the defect in the making.Turn the breaker or wait for the return of electricity.</p>
<p>Halogen bulb doesn't illuminate</p>	<p>Power outage. The light bulb is blown out.</p>	<p>Replace the bulb.</p>
<p>Air filtration is not satisfactory</p>	<p>The aluminum filter is saturated.The activated carbon filter doesn't remove odors</p>	<p>Wash or replace the aluminum filter. Replace the activated carbon filter.</p>