

**EN** Refrigeration

User Manual

2

**HK** 冷藏室

使用手冊


2

**Enjoy peace of mind.  
Register your appliance today.**

Stay updated on better living services,  
safety notices and shop for accessories.

- 1. Open the camera app on your smartphone and point at the QR code to scan**

Product Registration QR code is located on the front of the door or internal side wall of your fridge.

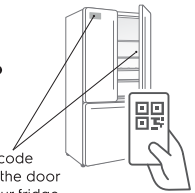

- 2. Tap the notification or link to open the registration form**

- 3. Complete your details and enjoy peace of mind**



**Electrolux**

## CONTENTS

1. SAFETY INFORMATION .....	3
2. DESCRIPTION OF THE APPLIANCE.....	5
3. INSTALLING YOUR NEW APPLIANCE.....	6
4. TEMPERATURE CONTROL.....	9
5. USING YOUR REFRIGERATOR .....	14
6. GENERAL INFORMATION .....	17
7. FOOD STORAGE GUIDE.....	18
8. TROUBLESHOOTING.....	19
9. NOISES.....	23

## WE'RE THINKING OF YOU

Thank you for choosing Electrolux. We have designed this product to make your life simpler and deliver impeccable performance for many years. Please spend a few minutes reading this document to get the best from your new Electrolux appliance.

### Visit our website to:



Get usage advice or service information:  
[www.electrolux.com](http://www.electrolux.com)



Register your product for better service:  
[www.electrolux.com/support/register-warranty](http://www.electrolux.com/support/register-warranty)

## CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information.

 General information and tips.

 Environmental information.

Subject to change without notice.

# 1. SAFETY INFORMATION

**Note:** You must read these warnings carefully before installing or using the refrigerator. If you need assistance, contact your customer care center. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.



## WARNING

- It is essential the electric outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Unplug the refrigerator before cleaning or moving it to avoid electric shock.
- Never unplug the refrigerator by pulling the electrical cord as this may damage it. Grip the plug firmly and pull straight out.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't use a steam cleaner. If live components come into contact with condensing steam, they may short-circuit or cause an electric shock.
- Do not store explosive substances such as aerosol cans with a flammable propellant this appliance. If pressurized aerosol containers bear the word 'flammable' and/or a small flame symbol, do not store them inside any refrigerator or freezer. If you do so you may cause an explosion.
- Do not damage the refrigerant circuit
- This appliance contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.
- If you wish to discard this refrigerator, please contact your local authorities and ask for the correct method of disposal.
- When you dispose of your old refrigerators and freezers, remove any doors. Children can suffocate if they get trapped inside.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



## WARNING

R600a refrigerant warning



This appliance contains flammable R600a refrigerant. Avoid safety hazards by carefully installing, handling, servicing and disposing of this appliance.

- Ensure that the tubing of the refrigerant circuit is not damaged during transportation and installation.
- Leaking refrigerant may cause eye injuries or ignite.
- The room for installing appliance must be at least 1m<sup>3</sup> per 8g of refrigerant. The amount of refrigerant in the appliance can be found on the rating plate inside the appliance.
- If you are unsure of the refrigerant check the rating plate inside the refrigerator compartment
- It is hazardous for anyone other than an Authorized Service Person to service this appliance. In Queensland Australia the Authorization Service Person **MUST** hold a Gas Work Authorization for hydrocarbon refrigerants to carry out servicing or repairs which involve the removal of covers.
- Keep ventilation openings in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.




## WARNING

Stable Footing

When your refrigerator is in place, you need to stabilize it. Lift the front of the refrigerator to take the weight off each stability foot and make small quarter turns to each foot until it is in firm contact with the floor. If you intend to move the refrigerator, remember to wind up each foot so that you can move it freely. Repeat the process of the foot adjustment once you have settled on the new location of the refrigerator.

Side View

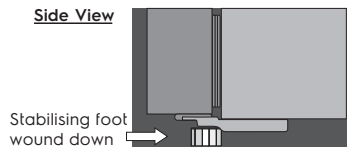

## GENERAL WARNINGS

Read the following carefully to avoid damage or injury. It is important to use your refrigerator safely. Check these safety points before using your refrigerator.

- The appliance must be plugged into its own dedicated electrical outlet.
- The plug must be accessible when the refrigerator is in position.
- It is essential the power point is properly earthed to ground. Consult a qualified electrician if you are unsure.
- Don't use extension cords or adapter plugs with this refrigerator.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Unplug the appliance before cleaning and before changing the light bulb(when fitted) to avoid electric shock.
- Never unplug the refrigerator by pulling the electrical cord as this may damage it. Grip the plug firmly and pull straight out.
- Choose a location for your refrigerator that isn't too cold. The ambient room temperature should be above 10°C.
- Stand your refrigerator in a dry place avoid areas of high moisture or humidity.
- Don't put the refrigerator in frosty or unprotected areas like a garage or on the verandah.
- Don't plug your refrigerator into a timer fitted to the powerpoint.
- Do not put the refrigerator in direct sunlight, near stoves, fires or heaters.
- Do not put the refrigerator on an uneven surface.
- Do not store flammable materials on or under the appliance, e.g. aerosols.
- Never store fizzy drinks in the freezer compartment.
- Never try to repair the refrigerator yourself, only use a qualified or authorized service person for repairs.
- Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.
- When transporting and installing the refrigerator, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- If the appliance is equipped with an Ice maker or a water dispenser, fill them with potable water only.

- If the appliance requires a water connection, connect it to potable water supply only.
- When installed correctly, your refrigerator should:
  - Have adequate space at the back and sides for air circulation.
  - Be vertically aligned to the surrounding cupboards.
  - Have doors that will self-close from a partially open position.

**NOTE:** *You must read these warnings carefully before installing or using the refrigerator. If you need assistance, contact your Customer Care Department. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.*




### Environmental information.

This appliance is intended to be used in household and similar applications such as,

- The kitchen areas in shops, office and other working environments;
- Farm house and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications;

## 2. DESCRIPTION OF THE APPLIANCE

### QUATTRO FRENCH DOOR REFRIGERATOR FEATURES

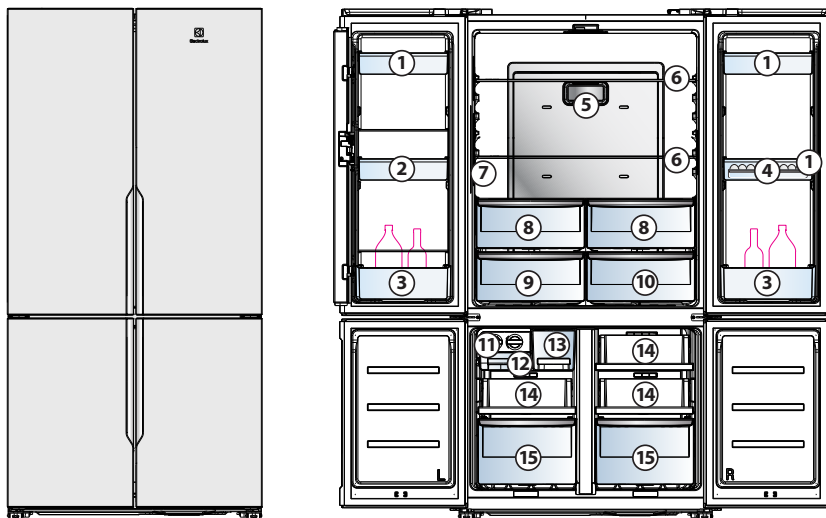

EQE5700C illustrated

The details of the refrigerator feature:

<b>1</b>	Door Bins*	<b>8</b>	Crisper Drawer With AHC
<b>2</b>	Door Bin Small*	<b>9</b>	Muti Chill Drawer
<b>3</b>	Bottle Storage Bins	<b>10</b>	Deli Drawer
<b>4</b>	Egg Tray	<b>11</b>	Twist & Serve Ice Maker
<b>5</b>	Air Filter	<b>12</b>	Ice Container bin
<b>6</b>	Glass Shelves	<b>13</b>	Ice Storage bin
<b>7</b>	UI Control Panel (on the left side wall)	<b>14</b>	Pull Out Tray Freezer
		<b>15</b>	Drawer storage freezer

#### NOTE:

\* Door bin (2) is the slightly smaller than Door bin (1), Position must be installed as per above picture.

Features may vary depending on model. Not all models will have features listed.

### 3. INSTALLING YOUR NEW APPLIANCE

#### UNPACKING



##### Environment

Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.

Important – check for any damages or marks. If you find the refrigerator is damaged or marked, you must report it within 7 days should you wish to claim for damage/ marks under the manufacturers warranty. This does not affect your statutory rights.

Clean your refrigerator thoroughly following the instructions in the “Cleaning” section and wipe off any dust that has accumulated during shipping.

#### LOCATING THE REFRIGERATOR



##### CAUTION


Automatic aerosol systems (such as insect control) should not be located adjacent to the product as the spray may cause long term damage to the external plastics of the appliance.

Do not put the refrigerator in a location that is too cold or is unprotected, for example in a garage or on a veranda. The ambient temperature should be above 10°C.

Put the refrigerator in a dry place avoiding areas of high moisture or humidity.

Ensure the refrigerator is located on an even surface.

#### INSTALLING YOUR REFRIGERATOR

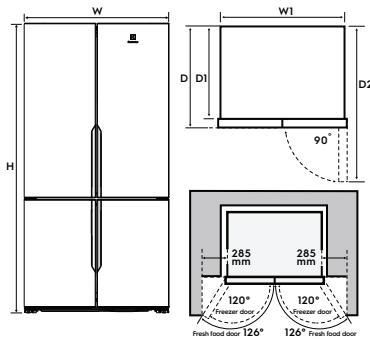

#### Product Dimensions

Total width (W)	mm	896
Total depth (D)	mm	726
Maximum height (H)	mm	1795
Cabinet width (W1)	mm	890
Cabinet depth (D1)	mm	640
Depth door open 90° (D2)	mm	1104


When positioned in a corner area, spacing of at least 285mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

#### Installation options for optimal aesthetics :

##### Minimum side clearance kitchen cabinet

Fridge body must sit 10mm proud of kitchen cabinetry.

Minimum cabinetry opening (WxDxH) : 900mm x 649mm x 1800mm

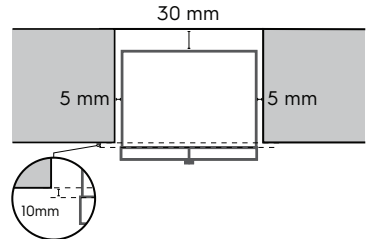


##### Front of fridge body in line with kitchen cabinet

Side clearance must be 25mm either side of fridge body, to have the fridge doors sitting proud of the kitchen cabinetry.

Minimum cabinetry opening (WxDxH) : 940mm x 659mm x 1800mm


Note : Spacers supplied to assist

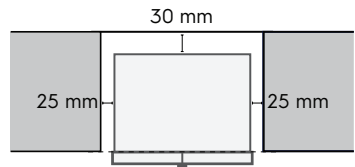

### Fridge door flush with the cabinetry


Side clearance must be 90mm either side of the fridge body, to have the fridge doors sitting flush with the kitchen cabinetry.

Minimum cabinetry opening (WxDxH) :  
1070mm x 741mm x 1800m

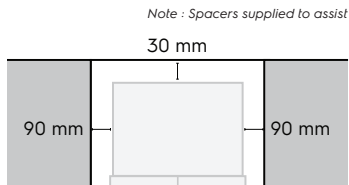


**Note :** Top gap all 5 mm.


1. Roll the refrigerator into place.  
The rollers are designed for forward or backward movement only. They are not castors. Moving the refrigerator sideways may damage your floor and the rollers. Before moving your refrigerator ensure height adjusting nut and the stability foot are fully wound up off the floor.
2. Wind the large height adjusting nut under door hinge down until the refrigerator is tilted back by 10mm (see diagram).

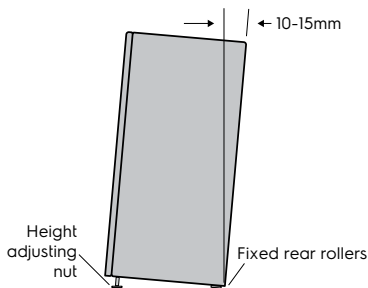

 3. Wind the large height adjusting nut on the handle side down until the refrigerator is level and stable. If you have difficulty winding the nut or height adjusting foot down, have someone tilt the refrigerator back so you have better access.




4. Check the alignment of the refrigerator to the surrounding cupboards to see if it is level. You can adjust the level as detailed in step 2 and 3.

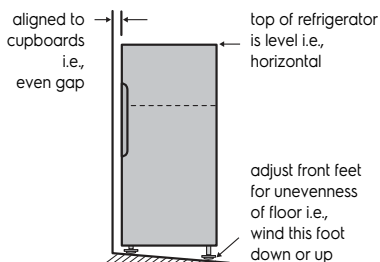

5. If you find your refrigerator rocks from corner to corner, it means your floor is uneven. Find a piece of plastic or hardboard etc. and pack it firmly under the roller.
6. You may now need to fine-tune the installation by repeating steps 3, 4 and 5.
7. When you have the appliance in its final position, it needs to be stabilised. Wind the stability foot under the door hinge down to the floor until it just makes contact with the floor. Lift the front of the appliance to take the weight off the stability foot, then turn it half a turn further to ensure firm contact with the floor. Wind the large height adjusting nut back up to ensure all the weight is now on the front stability foot. Wind the large height adjusting nut back up to ensure all the weight is now on the front stability foot.

#### Front view

 

8. Repeat step 7 for the stability foot on the handle side. Whenever you need to move the appliance, be sure to wind the feet back up so that the appliance can roll freely and be sure to reset it when reinstalling.
9. Plug your refrigerator straight into its own power point and never use a double adapter. If you need to roll the refrigerator to get to the plug, remember to raise the stability foot first.
10. Before you put any food in your refrigerator, it's recommended you leave it on for 2 or 3 hours to check it is running properly.

## DOOR OPENING

Your refrigerator should be positioned to allow easy access to a counter when removing food. For best use of refrigerator drawers and freezer baskets, the refrigerator should be in a position where both door can be fully opened.

### Cabinet Levelling & Refrigerator Door

#### Alignment (if necessary)

All four corners of the cabinet must rest firmly on the floor

- The front should be slightly elevated to ensure that doors close and seal properly.
- Doors should align with each other and be level.


Most of these conditions can be met by raising or lowering the adjustable front rollers.

#### To level the cabinet using the front rollers:


1. Lower anti-tip legs until they are both touching the floor. Use a pair of pliers to adjust

To raise: turn leg clockwise.

To lower: turn leg counterclockwise.

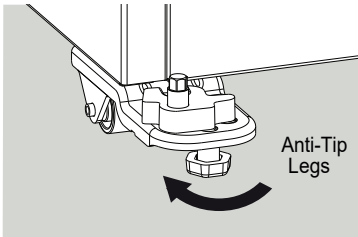


2. Ensure both doors are bind-free with their seals touching the cabinet on all four sides and that cabinet is stable.

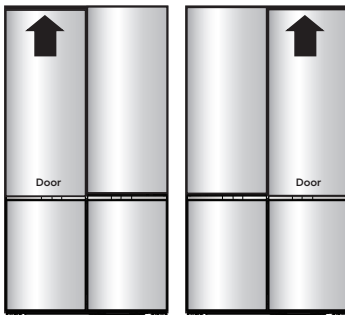


After you level the unit, lower the anti-tip leg until it firmly contacts the floor. You may need to use an adjustable wrench for adjustment.

If the doors are not aligned, lift the lower door up and insert the washer (two are included in the plastic bag in the Crisper) on the center hinge pin. This will raise the door to be aligned with the other door.

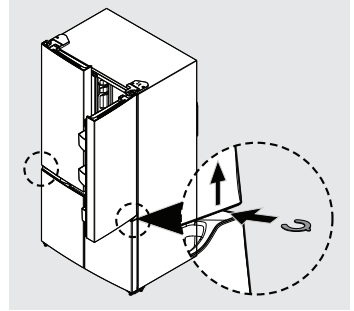

## FLIPPER MULLION

Adjust Flipper Mullion for proper connection with the mullion guide by ensuring the flipper mullion is folded and perpendicular to the fresh food door. If the mullion guide is not in the correct position, it could prevent the door from closing completely.

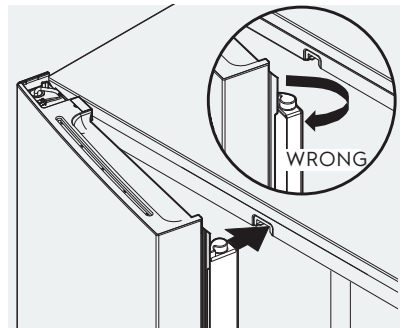

## FITTING THE HANDLES

For models with 'Pole' handles, the handles are supplied prepackaged inside your refrigerator and will require fitting. Refer to the instructions provided in the pack.

Congratulations! You have successfully installed your new refrigerator

## 4. TEMPERATURE CONTROL

The following pages explain the various functions of the user interface to help you better understand how to get the most out of your new refrigerator.



### IMPORTANT


**NOTE:** When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Ensuring that you make only small adjustments and wait at least 24 hours to see if the new temperature is correct to your liking.








Checking the softness of ice cream is a good indication that your freezer is the right temperature, while checking the temperature of water kept in the refrigerator is a good way of checking the temperature of the food compartment.

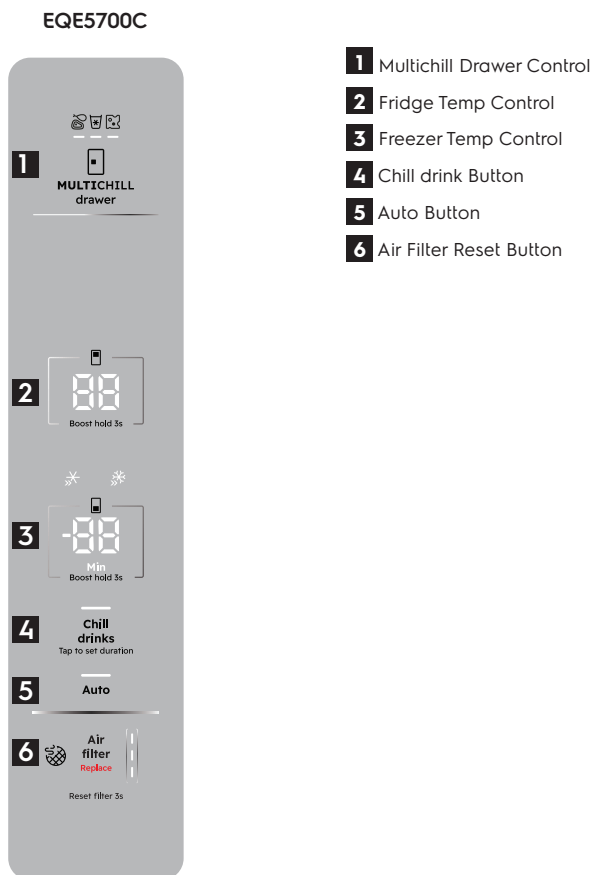

Temperatures inside each compartment may vary, depending on how much food you store and where you place it.



High or low room temperature may also affect the actual temperature inside the refrigerator.

### 4.1 FUNCTIONS OF THE USER INTERFACE



Function	Operation (depending on model)
<p><b>1 Multichill Drawer Control</b></p> <p>Meat &amp; Fish</p>  <p>Cold Drinks mode</p>  <p>Delisnacks mode</p> 	<p>Tap on MULTICHILL drawer button, Activates the next mode. The LED of the next mode lights up.</p> <p>MULTICHILL drawer has 3 temperature modes:</p> <p>-2°C Meat &amp; Fish</p> <p>-0°C Cold Drinks</p> <p>3°C Deli snacks</p>
<p><b>2 Fridge Temp Control</b></p> 	<p>Taps on the display to cycle through the temperature range supported by the Fridge.</p> <p>From 7°C</p> <p>To 1°C</p> <p>Default 3°C</p>
<p><b>3 Freezer Temp Control</b></p> 	<p>Taps on the display to cycle through the temperature range supported by the Freezer.</p> <p>From -14°C</p> <p>To -23°C</p> <p>Default -19°C</p>
<p><b>4 Chill drink Button</b></p>  <p>Chill Drinks timer indicator</p> 	<p>The Drinks Chill timer is used to quickly chill a bottle inside the freezer compartment and to warn the user when it ends.</p> <p>Tap on Drinks Chill button, Freezer display shows 20, "Min" and Drink Chill LED turns on.</p> <p>The timer option is from 20 minutes and the user can add time in 5 min intervals up to 45 minutes. After it starts the timer will show the countdown minute by minute.</p> <p><b>NOTE:</b> When timer countdown is in progress, the timer duration cannot be adjusted. User will need to deactivate Drinks Chill and activate Drinks chill again to set a new timer.</p>

Function	Operation (depending on model)
<p><b>5 Auto Button</b></p>  <p>When AutoSense is activated</p> 	<p>This feature is OFF by factory default.</p> <p><b>Activate AutoSense</b></p> <ol style="list-style-type: none"> <li>1. Short press on the button to activate</li> <li>2. Key Confirm Tone for the press</li> <li>3. Fade in LED above 'Auto' button</li> <li>4. Fridge &amp; Freezer temperature display 'Au'</li> <li>5. On going boost features (Fridge boost, Freezer boost, drink chill) will be interrupted.</li> </ol> <p><b>Deactivate AutoSense</b></p> <ol style="list-style-type: none"> <li>1. Short press on the 'Auto' button to deactivate AutoSense</li> <li>2. Key Cancel Tone for press</li> <li>3. Fade out LED above 'Auto' button</li> <li>4. Fridge &amp; freezer temperature fade in current set temperature</li> </ol> <p>User can also trigger other actions or features that will deactivate AutoSense completely or temporarily, check the section C for more detailed specification.</p> <p>When AutoSense is activated, using following features will <b>interrupt and override</b> AutoSense :</p> <ul style="list-style-type: none"> <li>• Temperature adjustment for fridge and freezer</li> </ul> <p>When AutoSense is activated, using following feature will <b>temporarily override</b> AutoSense. After the action is completed, fridge will activate AutoSense again :</p> <ul style="list-style-type: none"> <li>• Fridge boost (Quick chill)</li> <li>• Freezer boost (Quick freeze)</li> <li>• Drink chill</li> </ul> <p>Following features are still available with AutoSense, user can interact as normal for those actions:</p> <ul style="list-style-type: none"> <li>• MULTICHILL drawer setting</li> <li>• Filter indicator and reset (Air, Water, Produce keeper)</li> <li>• Alerts</li> </ul> <p><b>Check current set temperature when AutoSense is active</b></p> <p>When AutoSense is active, user can check current set temperature by pressing the 'Au' digits in fridge or freezer compartment</p> <ol style="list-style-type: none"> <li>1. Short press on 'Au' button (in fridge / freezer digits display)</li> <li>2. Key Accept Tone for the press</li> <li>3. Fade out 'Au' in selected compartment digit display</li> <li>4. Fade in current set temperature in both digits displays</li> </ol> <p>If user press the digits display during 4 seconds timeout, AutoSense is interrupted and be taken over to manual control</p> <ol style="list-style-type: none"> <li>1. Key Accept Tone</li> <li>2. Fade out LED above 'Auto' button</li> <li>3. Fade out set temperature and 'Au' in digits display</li> <li>4. Fade in next set temperature in sequence</li> </ol> <p>After 4 seconds (without interaction)</p> <ol style="list-style-type: none"> <li>1. Fade out current set temperature in both digits displays</li> <li>2. Fade in 'Au' in selected compartment digit display</li> <li>3. Key Confirm Tone</li> </ol>

Function	Operation (depending on model)
<p data-bbox="208 217 415 260"><b>6</b> Air Filter Alert and Reset</p>  <p>The image shows a control panel display with a circular icon containing a filter symbol. To the right of the icon, the text reads 'Air filter' in bold, 'Replace' in red, and 'Reset filter 3s' at the bottom.</p>	<p data-bbox="474 212 1023 272">Replace air filter indicator will light up every 6 months. Reseting air filter is a secondary feature, by long pressing on the Air filter button.</p> <p data-bbox="474 284 964 304">Long press on the Air filter button to reset the filter status</p> <ol data-bbox="474 309 1050 475" style="list-style-type: none"><li>1. Short press on the button</li><li>2. Key Accept Tone for press</li><li>3. After holding the button for 3 seconds, filter status is reset</li><li>4. Fade out indicator </li><li>5. Key Confirm Tone</li><li>6. After resetting is completed, the timer of the filter starts to count down again.</li></ol>

## 4.2 ALERT AND ALARMS

### Door alarm

When any of the door is left open for 2 minutes. The alarm will sound, and all LEDs that are currently on.

The alarm is turned off by closing the door or resetting the countdown by pressing any key on the control panel.

### High Temperature alert

In the event of high temperature condition, audio alarm is played every 10 seconds until the alert is acknowledged.

The alarm by pressing any key on the control panel.

Display and blink "HI" in the correspondent compartment display, whichever is in the high temperature condition.



High Temp indicator on **Fridge display**



High Temp indicator on **Freezer display**

### Water filter alert and reset

Water Filter alert warns user that the Water filter have to be changed as soon as possible.

When water filter is used for 6 months or 120 gallons (about 454 litres) of water has been dispensed since the last filter reset, LED "Replace" will automatically illuminate.

#### Note:

1. Users could reset the filter when alert is not visible. Play tone\_Confirm once it is reset.
2. LED "Replace" remains visible during sleep mode, except when door is closed

### Air filter alert and reset

Air Filter alert warns user that the Air filters have to be changed as soon as possible.

When air filter is used for 6 months since the last filter reset, the LED "Replace" will automatically turn ON.

#### Note:

1. Users could reset the filter when alert is not visible. Play tone\_Confirm once it is reset.
2. LED\_air filter remains visible during sleep mode, except when door is closed.

### Error codes

Both Fridge & Freezer displays are used to communicate problems by code.

When error codes are displayed in the numeric display, the unit requires service attention.

"Er" shows up on **Fridge display**



Various error codes on **Freezer display**



Error code table	
Communication error	CE
FZ Cavity NTC	T1
FZ Evaporator NTC	T2
FF Cavity NTC	T3
Third cavity NTC	T5
FZ Ice maker NTC	T8

## 5. USING YOUR REFRIGERATOR

Refrigerators work by transferring heat from the food inside to the outside air. This operation makes the back and sides of the refrigerator feel warm or even hot particularly at start-up and on warm days – this is normal.

Avoid placing food against the air vents in the refrigerator as it affects efficient circulation. If the door is opened frequently, a light frosting will occasionally occur on the freezer's interior. This is normal and will clear after a few days. If the freezer door is accidentally kept open, a heavy frost will coat the inside walls and should be removed.


Your new refrigerator uses a high-speed compressor, along with other energy-efficient components, which may make unusual sounds and be more noticeable at night and quieter times. These sounds simply indicate your refrigerator is working how it should. They include:

- Compressor running noises;
- Air movement noise from the small fan motor;
- A gurgling sound, similar to water boiling;
- A popping noise, heard during automatic defrosting; and
- A clicking noise, prior to compressor start-up. Further details can be found in the Troubleshooting Guide



### IMPORTANT

Ensure all freezer drawers and shelves are pushed back completely to prevent them from keeping the door open.

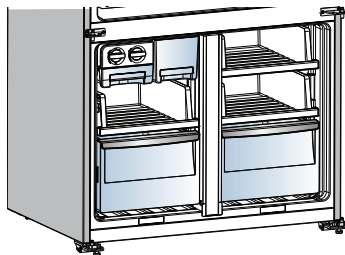

### CAUTION


#### LED lighting

Your appliance is fitted with long life LED lighting. In the unlikely event the LED lights should fail, then the LED lights should be serviced by the service agent, to avoid a safety hazard. Refer to the warranty page for contact details.

### GLASS SHELVES

To remove the shelves, gently pull them forward until the shelf comes clear of the shelf guides.

To return the shelf, make sure there is nothing behind that may obstruct movement. Gently push the shelf, into the cabinet and back into position.

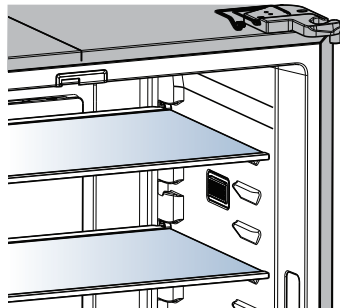

### CAUTION

To avoid personal injury or property damage, handle tempered glass shelves carefully. Shelves may break suddenly if nicked, scratched, or exposed to sudden temperature change. Allow the glass shelves to stabilize to room temperature before cleaning. Do not wash in dishwasher.


### DRAWERS

Your refrigerator includes a variety of storage drawers.

#### Crisper

Removal (standard Crisper Bins):

1. Empty food from the Drawer. On some models it will be necessary to remove the bottle storage bins.
2. Remove the Drawer by pulling forward, then up and forward again.
3. For top mount and single door, remove the crisper shelf by lifting the catches on the left and right underside of the shelf and pulling the shelf forward.

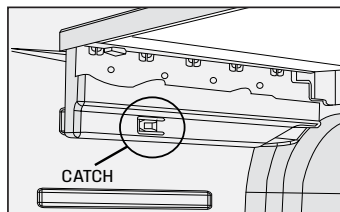

### Drawers fitted with telescopic slides

To remove the drawer for cleaning.

1. Empty food from the drawer.
2. Remove the drawer by pulling it forward and lifting the front to unhook it from the slides. Once you have removed the drawer, ensure the slides are pushed back so they are fully closed.



#### WARNING


Never close the door while the telescopic slides are extended. This may damage the slide and/or refrigerator or cause the slide to become disengaged from the refrigerator.

#### To replace the drawer:

1. Ensure the telescopic slides are pushed in all the way.
2. Slide the drawer into place over the slides and push the bin in until it stops.
3. Drop drawer into position.

### Crisper (with automatic humidity control)


Crisper drawers are designed for storing fruits, vegetables, and other fresh produce. Crispers have an auto humidity control (with replaceable membrane) on the back of each crisper under the humidity control cover.

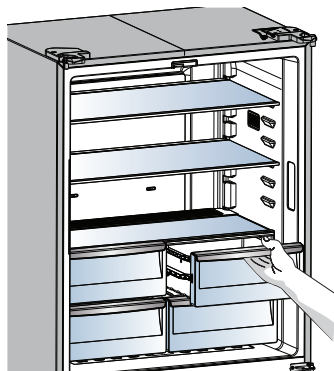

#### To remove the auto humidity control membrane:

1. Reach to back of humidity control cover.
2. Pull up on cover.
3. Pull cover towards back of cabinet and remove.
4. Replace humidity membrane.


5. Replace cover by reversing the steps above. Repeat for both crispers.

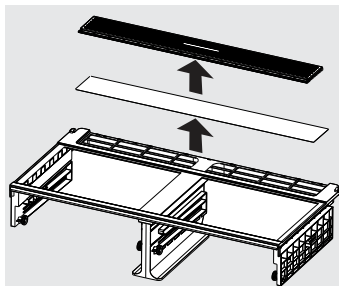

#### Remove the auto humidity control membrane

#### To remove the crisper for cleaning:

1. Pull the drawer out until it stops.
2. Lift the front slightly and remove the drawer.

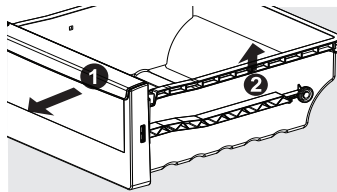


#### Removing Crisper

## FREEZER STORAGE

#### To remove freezer drawers:

All freezer drawers are removable.

1. Open doors completely to gain access to drawers.
2. Pull the drawer to the stopper. Lift up and pull to remove it from the cabinet.
3. Reverse the steps to reinstall drawer

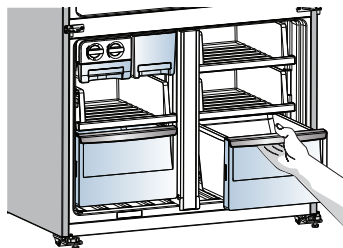

## DOORS


### Storage bins

The doors to your fresh food compartment use a system of modular storage bins. All of these bins are removable for easy cleaning. Bins can be adjusted to your needs.

Door bins are ideal for storing jars, bottles, cans, and large drink containers. They also enable quick selection of frequently used items.

### To remove the door bin:


1. Lift and unlock from lugs to remove.
2. Replace by lift up and push bin down until the support lugs lock it in place.

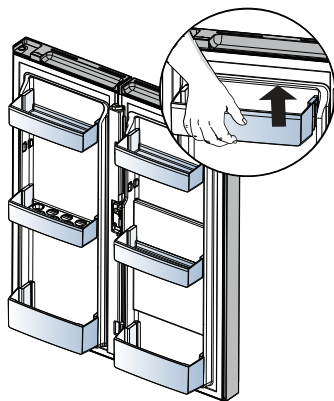


Removing door bin

## TWIST & SERVE ICE BIN

1. Prior the first use clean the ice tray.
2. Fill the water up to max level of the ice tray.

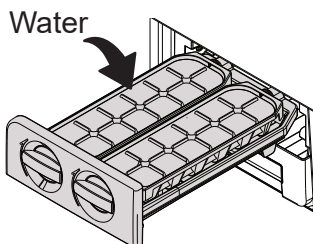

3. Put the ice tray in place.
4. Rotate ice twist clockwise to release the ice from ice tray.

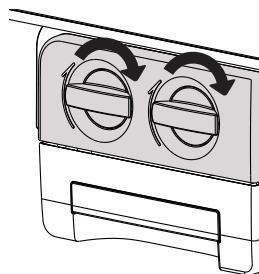

## 6. GENERAL INFORMATION

### CLEANING YOUR REFRIGERATOR



#### WARNING

**BEFORE CLEANING:** Turn the refrigerator off at the power point and unplug the cord to prevent any chance of electrocuting yourself.

#### Doors and exterior (white and silver):

You should only clean the doors with lukewarm soapy water and a soft cloth.

#### Vinyl Coated Material (Silver and Black)

Your VCM refrigerator is manufactured from mark-resistant stainless steel. This stainless steel has a special advanced protective coating that eases the removal of marks such as fingerprints and water spots. To keep its appearance, clean it regularly with lukewarm soapy water and a soft cloth.

#### Interior

Clean the inside of your refrigerator regularly with a soft cloth, unscented mild soap and lukewarm water. Thoroughly dry all surfaces and removable parts and avoid getting water on the controls. Replace removable parts, plug power cord in and switch the power on before returning the food.

#### Ice and water

Clean the components of the ice maker/water dispenser regularly with a soft cloth, unscented mild soap and rinsing thoroughly with lukewarm water. For further information on the care and cleaning of your ice maker, ice dispenser or water dispenser refer to the section "Ice and Water Models"

#### Door seals

Always keep door seals clean by washing them with a mild detergent and warm water, followed by a thorough drying. Sticky food and drink can cause seals to stick to the cabinet and tear when you open the door.



#### CAUTION

Never use hot water, solvents, commercial kitchen cleaners, aerosol cleaners, metal polishes, caustic or abrasive cleaners, or scourers to clean your refrigerator. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. Use only a soft cloth with an unscented mild soap and lukewarm water.



#### CAUTION

To clean a crisper or freezer bin with telescopic extension slides, simply wipe with a damp cloth and warm soapy water. Never immerse the cover in water, as this could affect the operation of the slide.

#### Switching off your refrigerator

If you switch off your refrigerator for an extended period, follow these steps to reduce the chances of mould.

1. Remove all food.
2. Remove the power plug from the power point
3. Thoroughly clean and dry the Interior.
4. Ensure that all the doors are wedged open slightly for air circulation.

### CHANGING THE FILTER


#### Air Filter (select models)

The air filter is located in the top center of the fresh food compartment.

#### Replacing your Air Filter

To ensure optimal filtering of refrigerator odors, you should change the air filter six months (The filter status light on the Touch Panel prompts you to replace the filter after six month)

1. Remove the air filter cover by squeezing the sides of the cover together and removing from liner
2. Remove the old filter and discard it
3. Unpack the new filter and slide it into the housing. The open face must (carbon media) of the filter should be installed facing the air port (hole) in the multi-flow.
4. Replace the air filter cover by squeezing the sides and snapping it back into place.
5. Press and hold the "Reset Air Filter" button on the control panel for three seconds. When the LED turns off, the status has been reset.

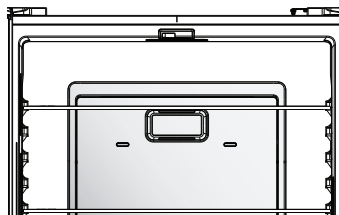

## 7. FOOD STORAGE GUIDE

Category	Product	Refrigerator	Freezer	Storage tips
Meat	Sausages and Mince	1-2 Days	2-3 Months	Keep cold meat at the back of the refrigerator where it is coldest.
	Chops and Steak	3-4 Days	4-6 Months	
	Cold Meats	3-5 Days	4-6 Months	Plastic can cause meat to sweat if stored in refrigerator for more than a day.  Roast can take up to 48 hours to defrost properly, transfer frozen roast to the refrigerator 2 days before use.
	Roasts	3-5 Days	12 Months	
Poultry	Chicken	1-2 Days	2 Months	If poultry takes on a smell or colour you are unsure about it is best to throw it out
	Roast Chicken	3-5 Days	12 Months	
	Eggs	6 Weeks	Not Suitable	Whole eggs are not suitable for freezing, slightly beaten eggs may be frozen for four months.
Seafood	Whole fish and fillets	2-3 Days	2 Months	Store in an airtight container or foil.
	Lobster and Crab	1-2 Days	2 Months	Never freeze prawns in salty water as this will dehydrate the flesh.
	Prawns	1-2 Days	2 Months	
Dairy	Milk	Until Expiry Date	Not Suitable	If dairy takes on a smell or colour and you are unsure about it, it is best to throw it out
	Yogurt	7- 10 Days	Not Suitable	
	Hard Cheeses	2 Weeks - 2 Months	2 Months (Grated)	Depending on the variety hard cheese can last from 2 weeks to 2 months. * Texture may change depending of the type of soft cheese
	Soft Cheeses	1-2 Weeks	Not Suitable	
	Butter	8 Weeks	12 Months	
Fruit & Vegetables	Every fruit and vegetable has a different shelf life. Some stay fresh for a couple of days e.g. beans, others can last for a couple of months e.g. onions.		8-12 Months When freezing chop and blanch in small portions.	Keep vegetables in the crisper and away from the air vents to avoid freezing.
				If you wash fruit and vegetables before storing them make sure they are dry or wrap in absorbent paper before storing in the refrigerator as this can make them susceptible to rotting.
				Try to keep fruit and vegetables separated as fruits that give off high levels of ethylene (the ripening agent) can prematurely ripen and spoil surrounding vegetables
Left Overs	Homemade meals	3-4 Days	2-6 Months	Store in sealed container.
				Freeze meal in small portion sizes to limit wastage.



### IMPORTANT

Please note, use this information as a guide only, actual storage times will vary depending on how you use your refrigerator, climatic conditions and the freshness of the food.

## 8. TROUBLESHOOTING

### Appliance does not operate at desired temperature

In a modern frost free refrigerator / freezer, cold air is circulated around the various compartments through air vents using a high efficiency fan.

CONCERN	WHAT TO DO
Refrigerator is too warm	<ul style="list-style-type: none"> <li>Adjust the refrigerator to a colder setting</li> <li>Ensure food is allowed to cool before placing inside the refrigerator.</li> <li>Ensure the appliance is set up as per instructions</li> <li>Ensure that contents are not obstructing the cooling vents.</li> <li>Ensure the door is not held open or is being opened too frequently.</li> </ul>
Freezer is too warm	<ul style="list-style-type: none"> <li>Adjust temperature to a colder setting.</li> <li>Ensure food is allowed to cool before placing inside the freezer.</li> <li>Ensure the appliance is set up as per instructions</li> <li>Ensure that contents are not obstructing the cooling vents.</li> <li>Ensure the door is not held open or is being opened too frequently.</li> </ul>
Food is freezing in the refrigerator	<ul style="list-style-type: none"> <li>Adjust temperature to a warmer setting.</li> <li>Ensure that fruit and vegetables are stored in the crisper. Items with a high water content should not be placed near the cooling vents.</li> </ul>
Unable to change temperature settings	<ul style="list-style-type: none"> <li>Refer to sections "temperature control".</li> </ul>

### Door operation

CONCERN	WHAT TO DO
Freezer door pops open.	<ul style="list-style-type: none"> <li>This is normal and should re-close. This happens when the refrigerator door is closed too quickly.</li> <li>If the freezer door stays open, it indicates that the appliance needs to be tilted backwards a little further. Refer to section "Installing your new appliance".</li> </ul>
Self close not working.	<ul style="list-style-type: none"> <li>Check if your appliance has self closing hinges as not all models do.</li> <li>It indicates that the appliance needs to be tilted backwards a little further. Refer to section "Installing your new appliance".</li> </ul>
Door not sealing properly	<ul style="list-style-type: none"> <li>Ensure there is nothing that is preventing the door from closing such as appliance contents or items placed near the appliance.</li> <li>Ensure that the crisper/freezer bin is closed completely. Refit if required as referred to in the section "Using your refrigerator".</li> <li>Ensure the appliance is set up as per recommendations.</li> </ul>
Door difficult to open and close	<ul style="list-style-type: none"> <li>If the door is difficult to open just after you have closed it this is due to the pressure equalising, the door will open normally after a few minutes.</li> </ul>

### Crisper Operation

CONCERN	WHAT TO DO
Excess moisture build up in crisper  It is normal for there to be some moisture and humidity in the crisper bin.	<ul style="list-style-type: none"> <li>• Ensure that the crisper is not over packed.</li> <li>• Adjust crisper humidity slides.</li> <li>• Recommend using food wrapper (Cling film) as below shared picture or zip lock bag.</li> </ul>
Crisper bin can not be removed	<ul style="list-style-type: none"> <li>• If crisper bin interferes with the door bins, remove door bins before removing crisper.</li> <li>• Position cabinet so that the door can be fully opened.</li> </ul>
Freezing items in the crisper	<ul style="list-style-type: none"> <li>• Adjust temperature to a warmer setting.</li> </ul>

### Appliance noise

Your new refrigerator may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, like the floor, walls and cabinets, can make the sounds seem louder than they actually are. The following describes the kinds of sounds and what may be making them.

CONCERN	WHAT TO DO
Motor noise (compressor)	Nothing. This is normal as your new refrigerator uses a high-speed compressor which switches on and off during operation.  Note that the compressor noise may seem louder at the start of the on cycle.
Motor noise (compressor);	These refrigerators are fitted with a variable speed compressor and fan. At start up and on warm days they run at a higher speed to provide additional cooling. When less cooling is required the compressor and fan will run at a lower speed. As a result it is normal for sound levels to change depending on operating conditions.
A clicking noise heard just before the compressor starts.	Nothing. This is normal as your new refrigerator has an automatic switching action of the temperature control, turning the compressor on and off.
Occasional gurgling, similar to water boiling.	Nothing. As each cycle ends, you may hear a gurgling sound due to the refrigerant flowing in your refrigerator system.  Nothing, this is normal as your new refrigerator uses high efficiency fans to circulate air. Fan speed and noise may increase during periods of heavy usage or hot weather.
Rattling and other noises.	<ul style="list-style-type: none"> <li>• Ensure that the cabinet is level and stable, refer to Installation Instructions</li> <li>• Check the surrounds of the appliance to ensure there is nothing touching or placed on top of the appliance.</li> <li>• Ensure that contents of the appliance are not placed in such a way that they are vibrating (such as bottles).</li> </ul>

## Refrigerator operation

CONCERN	WHAT TO DO
<p>Appliance will not run</p> <p>It is normal for the freezer fan not to operate during the automatic defrost cycle, or for a short time after the appliance is switched on.</p>	<ul style="list-style-type: none"> <li>• Ensure that the cord is plugged into a live power outlet and outlet is switched on.</li> <li>• Ensure that the household circuit breaker has not tripped or that the fuse has not blown.</li> <li>• The appliance maybe in defrost mode, check again in half an hour.</li> </ul>
<p>Compressor motor seems to run too long</p> <p>At normal room temperatures, expect your motor to run about 40% to 80% of the time. Under warmer conditions, expect it to run more often.</p>	<ul style="list-style-type: none"> <li>• Ensure that the doors are not held open.</li> <li>• Check that large amounts of warm food have not just been placed inside the appliance.</li> <li>• Note that the appliance will run more than normal just after you install it or when adjusting the temperature setting changes.</li> </ul>
<p>Compressor motor seems to run too long. These appliances use a variable speed compressor, which by design can run for long periods of time, this is normal</p>	<ul style="list-style-type: none"> <li>• The variable speed compressor and fan that at start up and on warm days, runs at high speeds to provide additional cooling. When less cooling is required the compressor and fan will run at a lower speed, but still may not switch off. This is normal.</li> <li>• It is possible that the only time the compressor and fan will stop is when the refrigerator is defrosting which is approximately once per day.</li> </ul>
<p>The exterior of the appliance is warm or hot to touch</p> <p>This is normal because the appliance transfers heat from the inside out through the outer panels and the divider between the doors.</p>	<ul style="list-style-type: none"> <li>• Ensure the appliance has the external clearances recommended in the section "Installing your new appliance".</li> <li>• The exterior of the cabinet will be much warmer on warmer days it may even feel hot to touch, as the appliance is working harder.</li> </ul>
<p>Alarms Sounding</p>	<ul style="list-style-type: none"> <li>• Check that all doors are fully closed.</li> <li>• Ensure that the over temperature alarm is not being activated by hot food placed in the freezer.</li> </ul>
<p>Frost build up</p>	<ul style="list-style-type: none"> <li>• Check that all doors are fully closed.</li> <li>• Ensure that the doors are not opened too often.</li> <li>• Ensure that the return air vents are not blocked with packaging.</li> <li>• Ensure the seals are clean and not obstructed.</li> </ul>
<p>Odours</p>	<ul style="list-style-type: none"> <li>• The interior may need cleaning, refer to cleaning guide.</li> <li>• Ensure that food is stored correctly as some food, containers and wrapping properly can avoid odours issue</li> <li>• Check appliance for old or unusual food.</li> <li>• Ensure replacement of the air filter every 6 months.</li> </ul>

CONCERN	WHAT TO DO
<p>Lights not working</p> <p>The LED lighting is designed to turn on gradually. The LED lighting is designed to dim automatically if the door is left opened for more than 5 minutes and turn off completely if the door is open for more than 7 minutes. Closing the door will reset the timer.</p>	<ul style="list-style-type: none"> <li>• Ensure that the cord is plugged into a live power outlet and outlet is switched on.</li> <li>• Ensure that the household circuit breaker has not tripped or that the fuse has not blown.</li> <li>• Check that the Refrigerator Temp setting is not in Sabbath Mode, refer to control instructions.</li> </ul>

### Ice & Water system

CONCERN	WHAT TO DO
<p>Ice maker does not produce ice or not enough ice</p> <p>The icemaker is designed to produce a tray of ice approximately every 3 hours, depending on the conditions.</p>	<ul style="list-style-type: none"> <li>• Ensure that the cord is plugged into a live power outlet and outlet is switched on.</li> <li>• Ensure that water is connected and turned on and there are no kinks in the water line.</li> <li>• Ensure that the Ice Maker is switched on at the user interface.</li> <li>• Check that the water filter is not blocked or out of date.</li> <li>• Check the water supply flow rate.</li> <li>• If the freezer compartment is too warm, refer to "freezer is too warm" then wait 24 hours for the freezer to reach ideal temperature.</li> <li>• Turn the unit off at the mains and leave for 2 minutes then turn the appliance back on (this will reset the icemaker unit). Check for ice production after 24 hours.</li> <li>• Check that there is no obstruction under the ice maker and ensure the ice bin is fitted correctly.</li> </ul>
<p>Water dispenser not functioning</p>	<ul style="list-style-type: none"> <li>• Ensure that the cord is plugged into a live power outlet and outlet is switched on.</li> <li>• Ensure that water is connected and turned on and there are no kinks in the water line.</li> <li>• Ensure that the Water Dispenser is switched on at the user interface.</li> <li>• Ensure water line is purged refer to "Connecting the water supply".</li> <li>• Check that the water filter is not blocked or out of date.</li> <li>• Check the water pressure, refer to "Connecting the water supply".</li> </ul>
<p>Ice or water has bad odour or taste</p>	<ul style="list-style-type: none"> <li>• Cover food to ensure ice does not absorb foreign odours.</li> <li>• Check that the water filter is not out of date.</li> <li>• Interior of appliance or ice bin may require cleaning.</li> <li>• Discard stale ice monthly and allow ice maker to produce a fresh supply.</li> </ul>





#### If you still require service

If you have a problem, and the problem persists after you have made the checks mentioned, contact your nearest Electrolux approved Service Centre or the dealer you bought the refrigerator from. Be ready to quote the model number, the 9-digit PNC and 8-digit serial number, which is stated on the label inside the refrigerator compartment.

## 9. NOISES

### Appliance noise

Your new refrigerator may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, like the floor, walls and cabinets, can make the sounds seem louder than they actually are. The following describes the kinds of sounds and what may be making them.

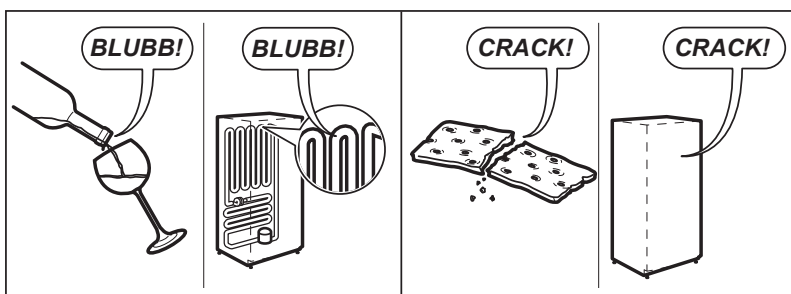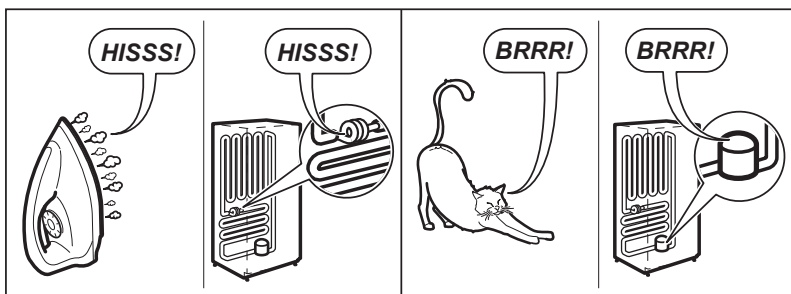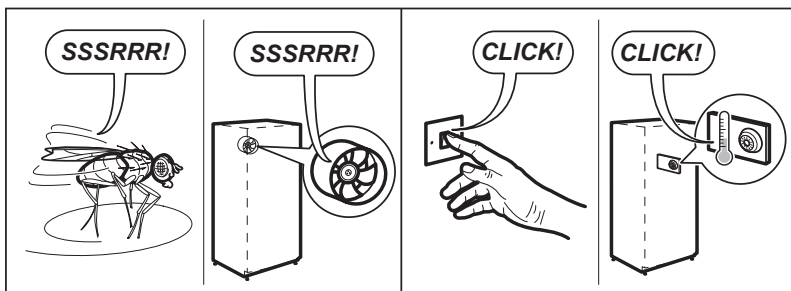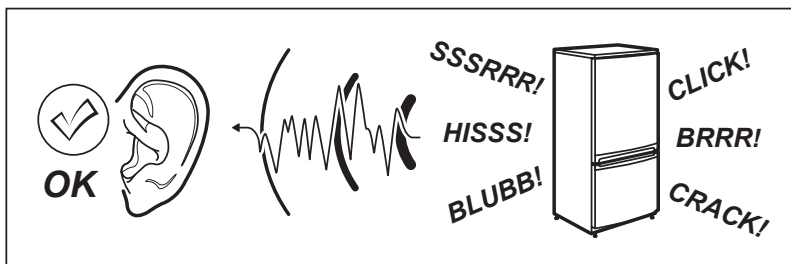

## 目錄

1. 安全資訊 .....	3
2. 設備說明 .....	5
3. 安裝新設備 .....	6
4. 溫度控制 .....	9
5. 使用冷藏室 .....	14
6. 一般資訊 .....	17
7. 食物存放指南 .....	18
8. 故障排查 .....	19
9. 噪聲 .....	23

## 我們一心為您

感謝您選擇 Electrolux。Electrolux 冷藏室讓您的生活變得更加簡單舒適，使用多年後依然保持出色效能。請抽出幾分鐘時間仔細閱讀本手冊，以獲得這台全新 Electrolux 設備的最佳使用體驗。

**敬請瀏覽產品網站：**



獲取使用建議或服務資訊：  
[www.electrolux.com](http://www.electrolux.com)





註冊產品以獲得更優質的服務：  
[www.electrolux.com/support/register-warranty](http://www.electrolux.com/support/register-warranty)

## 客戶關懷與服務

務必使用原廠備件。

聯絡我們的授權服務中心時，請確保提供以下資料：型號、PNC 碼、序號。  
此資訊位於產品銘牌上。

 警告 / 安全注意事項。

 一般資訊與貼士。

 環境資訊。

如有變更，恕不另行通知。

# 1. 安全資訊

註：安裝或使用冷藏室之前，務必仔細閱讀該警告資訊。如需協助，請聯絡客戶服務中心。若忽略本手冊中的說明或其他任何安全警告，由此造成的後果製造商概不負責。

## 警告

- 請務必確保電氣插座正確接地。若無法確定，請諮詢符合資質的電氣檢修員。
- 切勿在設備的食物儲藏室內使用電氣設備，除非製造商推薦使用。
- 清潔或移動本設備之前，請先拔下電源插頭以防止觸電。
- 拔下電源插頭時切勿拖拉電源線，此舉可能會損壞電源插頭。緊緊抓住插頭並保持水平拔出。
- 如電源線已損壞，必須由製造商、服務代理商或其他符合資質的人士予以更換，以免造成危險。
- 禁止使用蒸汽清潔器。當帶電元件接觸到冷凝的蒸汽時，可能會形成短路或造成觸電。
- 禁止儲藏易爆物質，例如將氣溶膠罐連同易燃推進劑一起存放在本設備中。若加壓氣溶膠容器帶有「易燃」字樣及/或小火焰符號，禁止將其存放在任何冷藏室或冷凍室內。否則可能引致爆炸。
- 禁止破壞製冷系統。
- 此設備包含由可燃發泡劑形成的絕緣層。請小心棄置本設備以免造成危險。
- 若需要棄置本冷藏室，請聯絡當地相關機構以獲取正確的棄置方法。
- 棄置廢棄的冷藏室時及冷凍室時，請拆除所有冷藏室門。若兒童被困於冷藏室內，可能會窒息。
- 放置冷藏室時，確保電源線未扭結或受損。
- 禁止在本設備後方放置多個可攜式插座或可攜式電源。
- 應對兒童進行監管，確保其不會玩耍本設備。
- 身體殘障、感官或精神功能減退或缺乏相關知識及經驗的人員（包括兒童）不適合使用本電器，除非有負責其安全的人員在他們使用本機時給予監督或指導。



## 警告

R600a 冷凍劑警告



本設備包含易燃 R600a 冷凍劑。請小心安裝、處理、維修及棄置本設備以免造成危險。

- 確保在運輸與安裝期間冷凍劑管路完好無損。
- 冷凍劑洩漏可能導致眼部受傷或起火。
- 設備的安裝空間必須至少保證在每 8g 冷凍劑 1m<sup>3</sup>。設備的冷凍劑總量位於設備內側的銘牌上。
- 若不確定冷凍劑總量，可查閱冷藏室內的銘牌。
- 若由非授權維修人員維修本設備，可能會造成危險。澳洲昆士蘭規定，授權維修人員必須持有碳氫冷凍劑的氣體作業許可證，方可進行拆除蓋板等維修工作。
- 保持設備外殼或內置結構中的通風口暢通無阻。
- 禁止使用非製造商推薦的機械裝置或其他方式加速除霜過程。




## 警告

穩定支腳

放置好冷藏室後，務必將其固定。抬起冷藏室的前部以減輕每隻穩定支腳的重量，然後旋轉每隻支腳四分之一圈，直至它們與地面牢固接觸。若要移動冷藏室，請記住擰緊每隻支腳，以便可以自由移動設備。將冷藏室放置到新的位置後，多次重複調節每隻支腳，直至將其牢固地固定在新位置。

側視圖

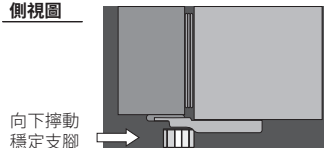

## 一般警告

仔細閱讀下文警告以避免損壞或人員受傷。安全使用冷藏室至關重要。使用冷藏室前請務必查閱這些安全注意要點。

- 本設備必須使用專屬電源插座。
- 放置冷藏室時必須確保可接觸到插頭。
- 請務必確保電源插座正確接地。若無法確定，請諮詢符合資質的電氣檢修員。
- 禁止對本設備使用延長線或轉接插頭。
- 如電源線已損壞，必須由製造商、服務代理商或其他符合資質的人士予以更換，以免造成危險。
- 清潔前及更換燈泡（如已安裝）前請先拔下本設備插頭，以免觸電。
- 拔下電源插頭時切勿拉扯電源線，此舉可能會損壞電源插頭。緊緊抓住插頭並保持水平拔出。
- 避免將冷藏室放置在溫度過低處。室內環境溫度應高於 10°C。
- 確保冷藏室周圍乾燥，避免將冷藏室放置在潮濕處。
- 禁止將冷藏室放置在結霜或無保護的區域，例如車庫或陽台。
- 禁止將冷藏室插頭插入帶計時器的電源。
- 禁止將冷藏室置於陽光下，靠近火爐、明火或熱源。
- 禁止將冷藏室置於不平坦的表面。
- 禁止在本設備上方或下方存放易燃材質，例如氣溶膠。
- 禁止將碳酸飲料置於冷凍室內。
- 禁止擅自嘗試維修冷藏室，僅由符合資質或授權之專業維修人士進行維修。
- 禁止使用電加熱器或吹風機為冷凍室除霜，此舉可能會造成觸電。
- 運輸或安裝冷藏室時，需小心以確保製冷電路完好無損。
- 如果本機配備製冰機或飲水機，請僅注入飲用水。

- 如果本機需要連接水管，請僅接駁至飲用水供應。
- 正確安裝後，冷藏室應：
  - 後方及兩側留有足夠空間以確保空氣流通。
  - 與周圍的櫥櫃垂直對齊。
  - 冷藏室門處於部分打開位置時能夠自動關閉。

**注意：**安裝或使用冷藏室之前，務必仔細閱讀該警告資訊。如需協助，請聯絡客戶服務部門。若忽略本手冊中的說明或其他任何安全警告，由此造成的後果製造商概不負責。




## 環境資訊。

本設備旨在用於家庭及類似應用場景，例如：

- 商店、辦公室及其他工作環境的廚房區域；
- 農舍及酒店、汽車旅館及其他居民場所；
- 餐飲及住宿場所；
- 餐飲及類似的非零售應用場景；

## 2. 設備說明

### QUATTRO 法式櫃門冷藏室功能

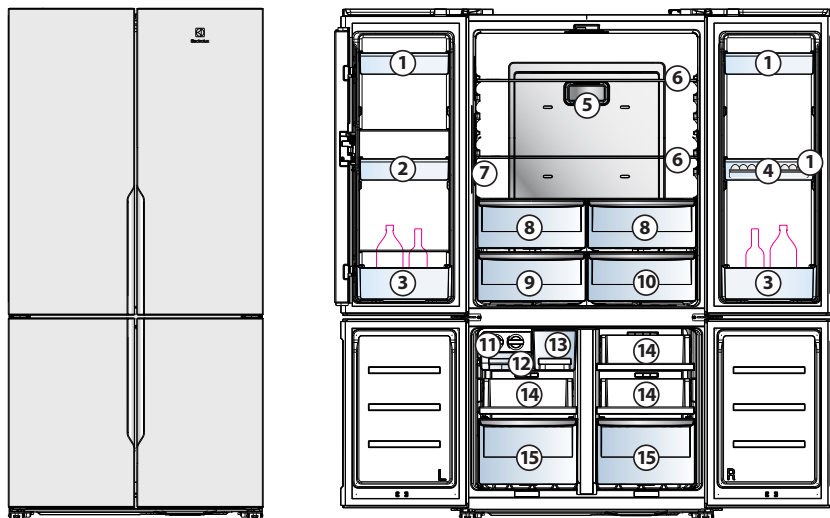

EQE5700C 圖示說明

冷藏室功能的詳細資訊：

1	櫃門儲物盒*	8	具有自動濕度控制功能的保鮮格
2	櫃門小號儲物盒*	9	多功能保鮮格
3	瓶架	10	熟食格
4	雞蛋儲存格	11	旋轉式製冰機
5	空氣過濾器	12	儲冰盒
6	玻璃架	13	冰盒架
7	使用者介面控制面板 (左側壁上)	14	拉出式冷凍格
		15	抽屜式儲存冷凍格

注意：

\* 櫃門儲物盒 (2) 略小於櫃門儲物盒 (1)，必須按照上圖所示位置安裝。

功能視具體型號而異。並非所有型號均含上述功能。

### 3. 安裝新設備

#### 拆除包裝



##### 保護環境

大部分包裝材料均可回收。請將該等材料放入您當地的回收站或將它們放入適當的收集容器中。

**重要提示** — 檢查是否有任何損壞或劃痕。如發現冷藏室受損或有劃痕，必須在 7 日內提交報告方能就製造商保固範圍內的損壞/劃痕提出索償。這不會影響您的法定權利。

按照「清潔」部分的說明徹底清潔冷藏室，擦掉在運輸期間積聚的任何灰塵。

#### 放置冷藏室



##### 小心


本产品附近不適合放置自動氣霧劑系統（例如殺蟲裝置），因為噴霧可能會對本冷藏室的外部塑料造成長期損壞。

切勿將冷藏室放置於過冷或無保護的地方，例如車庫或陽台。環境溫度應高於 10°C。

將冷藏室放置於乾燥環境下，避免將冷藏室放置在潮濕處。

確保冷藏室位於平整表面。

#### 安裝冷藏室

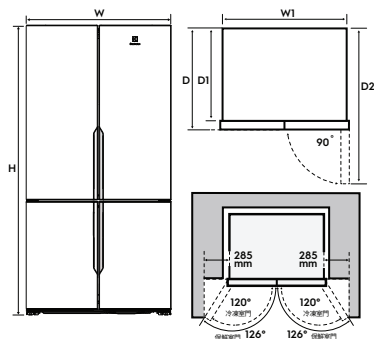

#### 產品尺寸


總寬度 (W)	mm	896
總深度 (D)	mm	726
最大高度 (H)	mm	1795
櫃體寬度 (W1)	mm	890
櫃體深度 (D1)	mm	640
櫃門打開 90° 時的深度 (D2)	mm	1104

當放置在角落區域時，鉸鏈側的間距要求為至少 285mm，這是冷藏室門能打開到足以取出儲物盒及層架的距離。

#### 最佳美學安裝選項：距離廚櫃最小邊距

冷藏室必須高出櫥櫃 10mm。

最小櫥櫃開口（寬×深×高）：  
900mm x 649mm x 1800mm

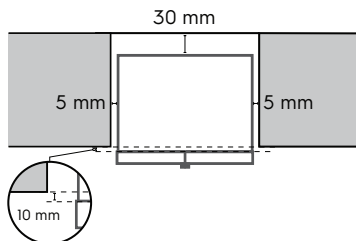


#### 櫃體正面與櫥櫃保持齊平

要使冷藏室門突出於櫥櫃，櫃體任一側的側隙必須保持在 25mm。

最小櫥櫃開口（寬×深×高）：  
940mm x 659mm x 1800mm

註：配備分隔器提供輔助

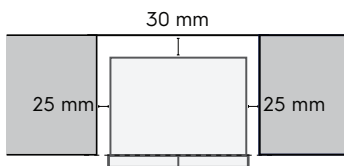


### 冷藏室門與櫥櫃齊平

要使冷藏室門與櫥櫃齊平，櫃體任一側的側隙必須保持在 90mm。

最小櫥櫃開口（寬x深x高）：

1070mm x 741mm x 1800mm

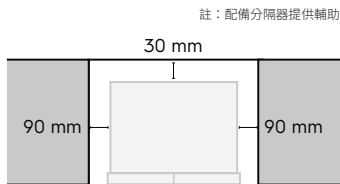


註：頂部空隙 5 mm。


#### 1. 將冷藏室滾動至放置位。

滾輪的設計僅允許向前或向後移動。它們並不是腳輪。橫向移動冷藏室可能會損壞地面和滾輪。在移動冷藏室之前確保高度調節螺母和穩定支腳完全脫離地面。


#### 2. 向下轉動櫃門鉸鏈下方的大號高度調節螺母，直至冷藏室向後傾斜 10mm（見圖）。

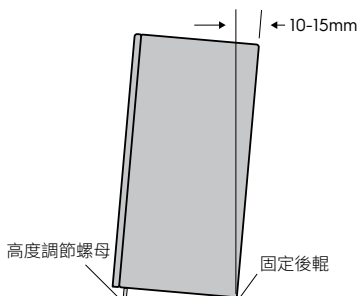

#### 3. 向下擰動把手側的大號高度調節螺母，直至冷藏室平穩落地。如果難以將螺母或高度調節支腳向下擰動，讓另一個人將冷藏室向後傾斜，這樣便於您更好地操作。

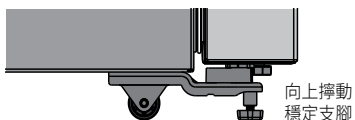

#### 4. 檢查冷藏室與周圍櫥櫃的對齊情況，看是否保持齊平。可以根據第 2 步和第 3 步進行調平。

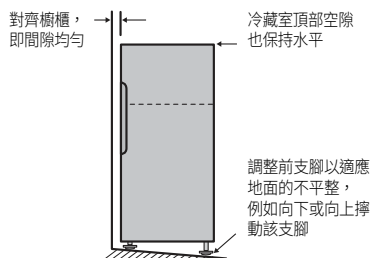


#### 5. 如果發現冷藏室在角落之間滾動，則表示地面不平整。找一塊塑膠或硬板等，將其包裹在滾輪下方並保持牢固。

#### 6. 現在，可能需要重複第 3、4、5 步以進行微調。

#### 7. 當本機最終放置到位後，需要確保其穩固。將門鉸鏈下方的穩定腳向下纏繞到地板上，直至其剛好與地板接觸。抬起冷藏室的前部以減輕穩定支腳的重量，然後旋轉半圈，以確保與地面牢固接觸。回向擰動大號高度調節螺母，以確保所有重量現在都在前穩定腳上。回向擰動大號高度調節螺母，以確保所有重量現在都在前穩定腳上。

#### 正視圖

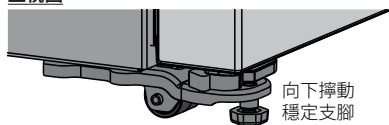

#### 8. 對手柄側的穩定支腳重複第 7 步。每當您需要移動設備時，請務必將支腳向後捲起，以便設備可以自由滾動，並確保在重新安裝時將其重置。

#### 9. 將冷藏室直接插入專用電源插座，切勿使用雙適配器。如果需要滾動冷藏室才能接觸到插頭，請務必先抬起穩定腳。

#### 10. 在將任何食物放入冷藏室之前，建議您先將其開啟 2 或 3 小時，以檢查其運行是否正常。

## 櫃門打開

冷藏室的放置位置應便於您將食物取出並放置於櫃檯上。為能夠最大程度地利用冷藏室抽屜和冷凍籃，您應考慮將冷藏室放置於能夠完全打開二者門的位置。

### 櫃體調平與冷藏室門

#### 對齊（如有必要）

櫃體的所有四個角落都必須穩固地落於地面。

- 前部應略微抬高，以確保櫃門能夠正確關閉和密封。
- 櫃門應彼此對齊並保持水平。


抬起或降低可調節前滾輪即可滿足上述大部分條件。

#### 使用前滾輪調平櫃體：


1. 降低防傾支腳，直至它們都接觸到地板。使用鉗子進行調整。

升高：順時針轉動支腳。

降低：逆時針轉動支腳。

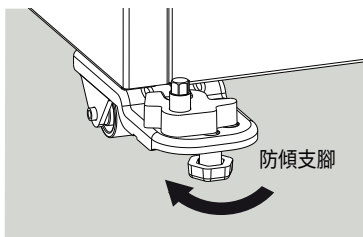


2. 確保兩扇櫃門均未卡住，封條都接觸到櫃體的所有四個側邊，且櫃體保持穩定。

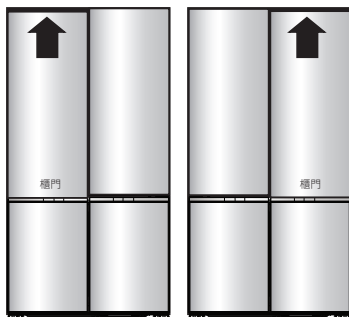


當您將機身調至水平後，請降低防傾支腳直至其穩固接觸地面。您可能需要使用可調式扳手進行調整。

若門體未對齊，請向上抬起下方的那扇門，並將墊圈（保鮮格內膠袋中附有兩個）安裝於中央鉸鏈軸上。此操作可抬升門體使其與另一扇門對齊。

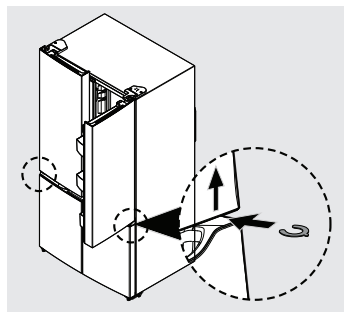

## 翻轉式中柱

調節翻轉式中柱，確保翻轉式中柱折疊並垂直於保鮮櫃門，從而正確連接門樑導軌。如果門樑導軌不在正確位置，將導致櫃門無法完全關閉。

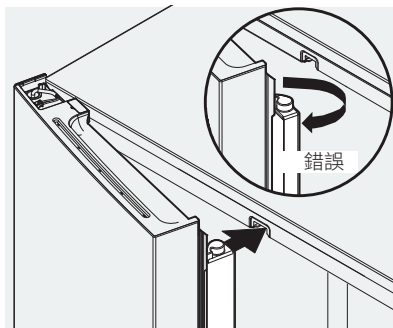

## 安裝手柄

對於配有「立柱式」手柄的型號，手柄已預先包裝放置於冷藏室內，需自行安裝。請參閱包裝內附的安裝說明。

恭喜！您已成功安裝新冷藏室

## 4. 溫度控制

下頁介紹使用者介面的各項功能，以幫助您最大限度地利用新冷藏室。



### 重要


注意：設定溫度時，為整個冷藏室設定一個平均溫度。確保只進行小幅調整並等待至少 24 小時，看看新溫度是否符合您的使用喜好。

檢查雪糕的柔軟度是判斷冷凍室溫度是否正確的一個好方法，而檢查冷藏室內水的溫度是判斷食物儲藏室溫度的一個好方法。

每個儲藏室的溫度可能不同，具體取決於您存放的食物量以及放置食物的位置。



室溫的變化可能也會影響冷藏室內部的實際溫度。
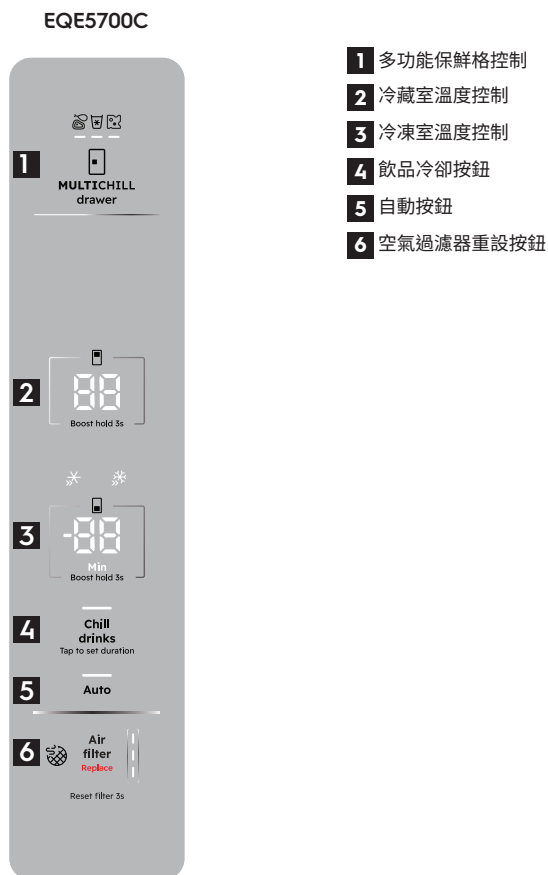
### 4.1 使用者介面的功能



功能	操作 (視乎型號而定)
<p><b>1 多功能保鮮格控制</b></p> <p>肉類與魚類</p>  <p>冷飲模式</p>  <p>小食儲存模式</p> 	<p>輕觸多功能保鮮格按鈕，啟用下一個模式。</p> <p>下一個模式的 LED 燈亮起。</p> <p>多功能保鮮格有 3 種溫度模式：</p> <p>-2°C 肉類與魚類</p> <p>-0°C 冷飲</p> <p>3°C 熟食小食</p>
<p><b>2 冷藏室溫度控制</b></p> 	<p>輕觸螢幕以在冷藏室的預設溫度範圍內切換。</p> <p>從 7°C</p> <p>至 1°C</p> <p>預設 3°C</p>
<p><b>3 冷凍室溫度控制</b></p> 	<p>輕觸螢幕以在冷凍室的預設溫度範圍內切換。</p> <p>從 -14°C</p> <p>至 -23°C</p> <p>預設 -19°C</p>
<p><b>4 飲品冷卻按鈕</b></p>  <p>飲品冷卻定時器指示燈</p> 	<p>飲品冷卻定時器用於快速冷卻冷凍室內的飲品，並在結束時提醒使用者。</p> <p>輕觸飲品冷卻按鈕，冷凍室螢幕將顯示 20, 「Min (最低)」和飲品冷卻 LED 燈亮起。</p> <p>定時器選項從 20 分鐘開始，使用者可以按 5 分鐘的間隔增加時間，最長 45 分鐘。啟動後，定時器將逐分鐘顯示倒計時。</p> <p><b>注意：</b>定時器倒計時過程中，不能調整定時器時長。使用者需要停用飲品冷卻並再次啟用飲品冷卻功能以設定新的定時器。</p>

功能	操作（視乎型號而定）
<p><b>5 自動按鈕</b></p> <div data-bbox="218 263 400 335" style="text-align: center; background-color: #cccccc; padding: 10px; margin-bottom: 10px;">  </div> <p>啟動 AutoSense 時</p> <div data-bbox="218 422 400 542" style="text-align: center; background-color: #cccccc; padding: 10px; margin-top: 10px;">  </div>	<p>此功能出廠設定為關閉狀態。</p> <p><b>啟動 AutoSense</b></p> <ol style="list-style-type: none"> <li>1. 輕按按鈕即可啟動</li> <li>2. 按鍵確認音提示</li> <li>3. 「自動」按鈕上方的 LED 燈漸亮</li> <li>4. 冷藏室與冷凍室溫度顯示轉為「Au」</li> <li>5. 進行中的加速功能（冷藏室加速、冷凍室加速、飲品冷卻）將會中斷。</li> </ol> <p><b>停用 AutoSense</b></p> <ol style="list-style-type: none"> <li>1. 輕按「Auto」鍵以停用 AutoSense 功能</li> <li>2. 按鍵取消音提示</li> <li>3. 「自動」按鈕上方的 LED 燈漸暗</li> <li>4. 冷藏室與冷凍室溫度在當前設定溫度下逐漸下降</li> </ol> <p>使用者亦可觸發其他會完全或暫停停用 AutoSense，欲了解更詳細的規格說明，請參閱 C 章節。</p> <p>當啟動 AutoSense 功能時，使用以下功能將中斷並覆蓋 AutoSense：</p> <ul style="list-style-type: none"> <li>• 冷藏室與冷凍室溫度調整</li> </ul> <p>當啟動 AutoSense 時，使用以下功能將暫停覆蓋 AutoSense。完成操作後，冷藏室將自動重新啟動 AutoSense：</p> <ul style="list-style-type: none"> <li>• 冷藏室加速（快速冷凍）</li> <li>• 冷凍室加速（急速冷凍）</li> <li>• 飲品冷卻</li> </ul> <p>啟動 AutoSense 時以下功能仍可使用，使用者可如常進行相關操作：</p> <ul style="list-style-type: none"> <li>• 多功能保鮮格設定</li> <li>• 過濾器指示燈與重設（空氣、水、保鮮盒）</li> <li>• 警告</li> </ul> <p><b>查閱啟動 AutoSense 時的當前設定溫度</b></p> <p>當啟動 AutoSense 時，使用者可透過輕按冷藏室或冷凍室內的「Au」數字鍵來查看目前設定的溫度。</p> <ol style="list-style-type: none"> <li>1. 輕按「Au」按鈕（處於冷藏室/冷凍室數字顯示區中）</li> <li>2. 按鍵接受音提示</li> <li>3. 所選區域數字顯示區中的「Au」漸暗</li> <li>4. 兩個區域數字顯示區中的當前設定溫度漸亮</li> </ol> <p>若使用者於 4 秒倒計時內按下數字顯示區，則中斷 AutoSense 模式並切換至手動控制模式</p> <ol style="list-style-type: none"> <li>1. 按鍵接受音</li> <li>2. 「自動」按鈕上方的 LED 燈漸暗</li> <li>3. 數字顯示區中的設定溫度和「Au」漸暗</li> <li>4. 按順序淡入顯示下一設定溫度</li> </ol> <p>4 秒後（無操作）：</p> <ol style="list-style-type: none"> <li>1. 兩個區域數字顯示區中的當前設定溫度漸暗</li> <li>2. 所選區域數字顯示區中的「Au」漸亮</li> <li>3. 按鍵確認音</li> </ol>

功能	操作（視乎型號而定）
<p data-bbox="208 217 432 240"><b>6</b> 空氣過濾器警報和重設</p> 	<p data-bbox="477 217 1057 264">更換空氣濾網指示燈每 6 個月亮起一次。重設空氣過濾器狀態為次要功能，透過長按空氣過濾器按鈕。</p> <p data-bbox="477 280 790 304">長按空氣過濾器按鈕以重設過濾器狀態</p> <ol data-bbox="477 312 857 496" style="list-style-type: none"> <li>1. 輕按按鈕</li> <li>2. 按鍵接受音提示</li> <li>3. 持續按下按鈕 3 秒後，重設過濾器狀態完成</li> <li>4. 指示燈  漸暗</li> <li>5. 按鍵確認音</li> <li>6. 重設完成後，過濾器計時器將重新開始倒數。</li> </ol>

## 4.2 警告與警報

### 櫃門警報

當任何櫃門開啟超過 2 分鐘時。將響起警報，所有 LED 亮起。

關閉櫃門後，或按下控制面板上的任意鍵以重設倒計時，警報即停止。

### 高溫警告

如出現溫度過高，每 10 秒鐘將發出一聲警報，直至警報被確認。

按下控制面板上的任意鍵可停止警報。

出現高溫時，相應的冷藏室室顯示螢幕上將出現閃爍的「HI」。



冷藏室顯示螢幕上的高溫指示燈



冷凍室顯示螢幕上的高溫指示燈

### 濾水器警報和重設

濾水器警報警告使用者必須盡快更換濾水器。

自從上一次重設濾水器起，當濾水器使用達 6 個月或濾水量達 120 加侖（約 454 公升）後，「Replace」（更換）LED 燈將自動亮起。

注意：

1. 使用者可以在警報未出現時重設濾水器。重設後將播放 tone\_Confirm 音。
2. 在睡眠模式期間，LED「Replace」（更換）燈保持可見，櫃門關閉時除外

### 空氣過濾器警報和重設

空氣過濾器警告使用者必須盡快更換空氣過濾器。

自從上一次重設過濾器起，經過 6 個月後，LED「Replace」（更換）將自動亮起。

註：

1. 使用者可以在警報未出現時重設過濾器。重設後將播放 tone\_Confirm 音。
2. 在睡眠模式期間，LED\_空氣過濾器保持可見，櫃門關閉時除外。

### 錯誤代碼

冷藏室與冷凍室顯示螢幕均會透過代碼提示問題。

當數字顯示器上顯示錯誤代碼時，表示裝置需要注意維修。

冷藏室顯示螢幕上顯示「Er」



冷凍室顯示螢幕上顯示的各種錯誤代碼



錯誤代碼表	
通訊錯誤	CE
FZ 腔室 NTC	T1
FZ 蒸發器 NTC	T2
FF 腔室 NTC	T3
第三腔室 NTC	T5
FZ 製冰機 NTC	T8

## 5. 使用冷藏室

冷藏室的工作原理是將熱量從內部的食物傳遞到外部空氣中。因此冷藏室在運行期間其兩側及後方會略微發熱，尤其是在啟動時或炎熱天氣下，這純屬正常現象。

避免將食物放在冷藏室的通風口上，這會影響冷藏室的有效循環。如果頻繁打開冷藏室門，內部偶爾會出現輕微結霜。這是正常現象，經過幾天後會自行消失。如果冷凍室門意外打開，內壁會結霜，應將其清除。


您的新冷藏室採用高速壓縮機以及其他節能元件，該等元件可能會發出不尋常的聲音，在夜間和較安靜的環境下會更加明顯。此聲音表示您的冷藏室運行一切正常。聲音包括：

- 壓縮機運行噪聲；
- 來自小型風扇電機的氣流噪聲；
- 嗡嗡聲，類似於水煮開時的聲音；
- 自動除霜過程中發出的爆裂聲；及
- 壓縮機啟動前的咔嗒噪聲。更多詳情可參閱故障排查指南



### 重要

確保所有冷凍室的抽屜與攔板全部推回，以防止其阻礙櫃門正確關閉。

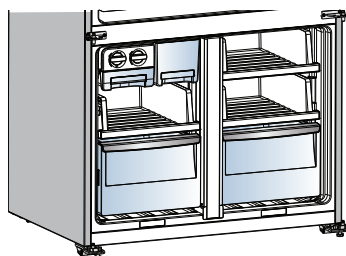

### 小心


#### LED 照明燈

本設備安裝了超長壽命 LED 照明燈。如果 LED 燈出現故障，則 LED 燈應由服務代理商進行維修，以避免出現危險。請參閱保固頁面以瞭解詳情。

## 玻璃架

要拆除層架，輕輕向前拉，直到層架脫離層架導軌。

放回層架時，確保後方沒有任何妨礙移動的異物。輕輕地推入層架，直至其回到原位。

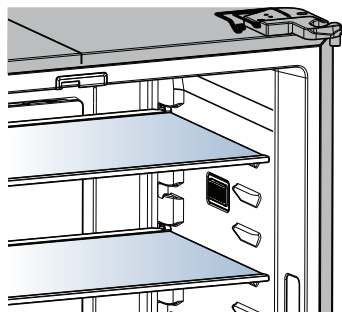

### 小心

請小心操作鋼化玻璃層架，以免造成人員受傷或財產損壞。如果遭到刻畫、刮擦，或暴露於急速的溫度變化下，攔架可能會突然破裂。清潔之前，首先讓玻璃架在室溫下穩定。請勿放入洗碗機清洗。


## 抽屜

本產品含有多個儲藏抽屜。

### 保鮮儲存格

移除（標準保鮮盒）

1. 清空抽屜內的食物。某些型號需要移除瓶架。
2. 向前拉出，然後再次向上向前即可移除抽屜。
3. 對於上冷凍和單開門型號，提起保鮮格層架左右下方的卡扣並將層架向前拉即可卸下保鮮格。

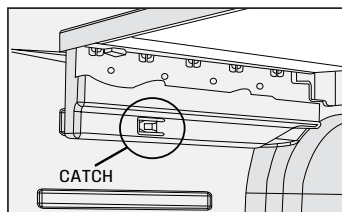

### 抽屜配備伸縮式滑軌

若要拆除抽屜進行清潔。

1. 清空抽屜內的食物。
2. 將抽屜向前拉出，然後抬起前端，將其從滑軌上取下，即可將抽屜拆除。拆除抽屜後，請確保滑軌已推回並完全收合。



#### 警告


切勿在伸縮式滑軌伸出時關閉櫃門。這可能會損壞滑軌和/或冷藏室，甚至導致滑軌脫離冷藏室。

### 若要裝回抽屜：

1. 請確保伸縮式滑軌已完全推回。
2. 將抽屜對準滑軌滑入，並將儲物盒推入，直至抵住為止。
3. 將抽屜放回原位。

### 保鮮格（帶自動濕度控制）


保鮮格專為存放水果、蔬菜及其他新鮮農產品而設計。每個保鮮格背面均配有自動濕度控制裝置（附有可更換控濕薄膜），位於濕度控制蓋下方。

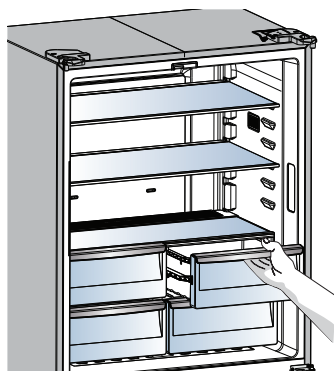

### 拆除自動控濕薄膜：

1. 找到濕度控制蓋背面。
2. 拉起蓋板。
3. 將蓋子向機櫃背面拉出並取下。
4. 更換薄膜。


5. 反向操作上述步驟以重新安裝蓋板。對每個保鮮格重複此操作。

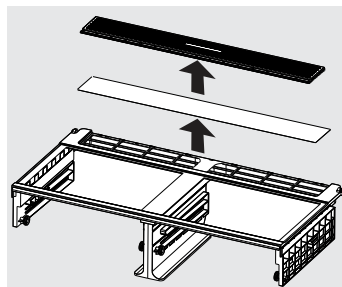

拆除自動控濕薄膜

### 拆除保鮮格進行清潔：

1. 拉出抽屜，直到拉不動為止。
2. 微微抬起前端，抽出抽屜。

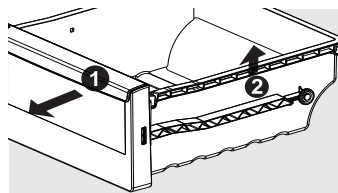


拆除保鮮格

### 冷凍室儲存

#### 拆除冷凍室抽屜：

所有冷凍室抽屜均可拆除。

1. 完全打開櫃門，找到抽屜。
2. 拉出抽屜直至達到止動器。抬起並拉出，將其從櫃體上取下。
3. 反向操作上述步驟即可重新裝回抽屜

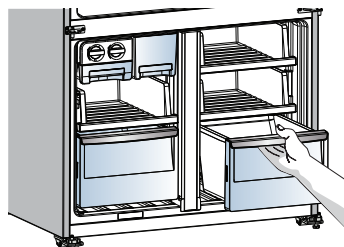

## 冷藏室門


### 儲存盒

保鮮室的櫃門採用組合式儲存盒。所有這些儲存盒均可拆除，便於清潔。您亦可按自身需要調整儲存盒。

櫃門儲物盒適合存放罐子、瓶子、罐頭和大型飲料容器。這些儲物盒亦便於取用常用物品。

### 拆除櫃門儲物盒：


1. 從掛耳上提起並解鎖以卸下。
2. 安裝時，向上抬起並向下推儲物盒直至掛耳鎖緊到位。

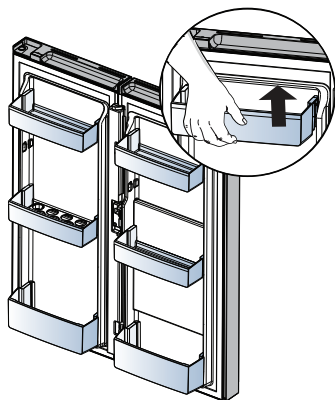


拆除櫃門儲物盒

## 旋轉出冰式冰盒

1. 首次使用前，清潔冰盤。
2. 加水至冰盤內最大水位。

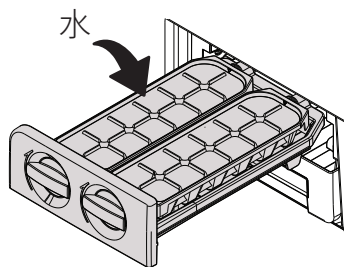

3. 放入冰盤。
4. 順時針旋轉冰塊以釋放冰盤中的冰塊。

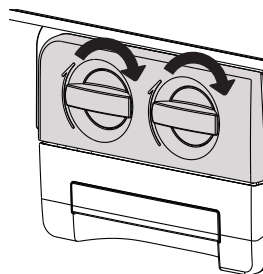

## 6. 一般資訊

### 清潔冷藏室



#### 警告

清潔前：關閉冷藏室的電源，拔下電源插頭，以防止觸電。

#### 冷藏室門和外飾（白色與銀色）：

只能用溫肥皂水和軟布清潔櫃門。

#### 乙烯基塗層材質（銀色與黑色）

此乙烯基塗層材質冷藏室採用抗痕不銹鋼製造。這種不銹鋼擁有一層特殊的高級保護塗層，可以輕鬆去除指紋和水漬等痕跡。為保持其乾淨外觀，應定期用溫肥皂水和軟布清潔。

#### 內飾

請定期使用軟布、無味溫和肥皂及溫水清潔冷藏室內部。徹底擦乾所有表面及可拆卸部件，並避免水濺到控制面板上。裝回可拆卸部件，插上電源線並打開電源，然後再放回食物。

#### 製冰與供水

請定期用軟布、無味溫和肥皂清潔製冰機/飲水機的各個元件，並用溫水徹底沖洗。有關製冰機、出冰器及飲水機的保養和清潔的詳情，請參閱「製冰機與飲水機型號」章節

#### 櫃門密封

始終用溫和的清潔劑和溫水清洗門封條，然後徹底乾燥，以保持門封條清潔。當您打開櫃門時，黏性食物和飲料會導致密封件黏在櫃門上並劃破。



#### 小心

切勿使用熱水、溶劑、商用廚房清潔劑、氣溶膠清潔劑、金屬拋光劑、腐蝕性或研磨性清潔劑或擦洗劑清潔冷藏室。許多市售清潔產品和清潔劑都含有會損壞冷藏室的溶劑。只能使用塗抹無味溫和肥皂和浸潤溫水的軟布。



#### 小心

要清潔帶有伸縮式擴展滑軌的保鮮格或冷凍室盒，只需用濕布和溫肥皂水擦拭即可。切勿將蓋子浸入水中，因為這可能會影響滑塊的操作。

#### 關閉冷藏室

如果要長時間關閉冷藏室，請按照以下步驟減少微生物滋生的機會：

1. 清空食物。
2. 從插座拔掉電源線。
3. 徹底清潔並乾燥冷藏室內部。
4. 確保將所有櫃門稍微楔開，以便空氣流通。

### 更換過濾器


#### 空氣過濾器（部分型號）

空氣過濾器位於冷藏室的頂部中間位置。

#### 更換空氣過濾器

為確保最大程度濾除冷藏室內的異味，應每六個月更換一次空氣過濾器（觸控螢幕上的過濾器狀態燈會提示您在六個月後更換過濾器）

1. 將蓋的兩側擠壓在一起並從襯裡上取下，取下空氣過濾器蓋
2. 取下舊過濾器並將其丟棄。
3. 打開新過濾器的包裝並將其滑入外殼。過濾器的開面（碳介質）應安裝在多流道的通風口（孔）上。
4. 擠壓側面並將其卡回原位即可裝回空氣過濾器蓋。
5. 按住控制面板上的「Reset Air Filter」（重設空氣過濾器）按鈕三秒鐘。當 LED 熄滅後，狀態將復位。

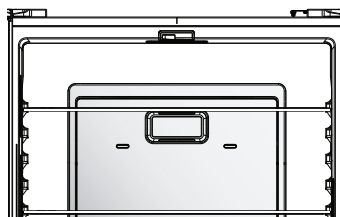

## 7. 食物存放指南

類別	產品	冷藏室	冷凍室	存放貼士
肉類	香腸和肉餡	1-2 天	2-3 個月	把冷凍肉放在冷藏室後面最冷的地方。
	豬排與牛排	3-4 天	4-6 個月	如果在冷藏室中存放超過一天，塑膠袋會導致肉出水。
	冷凍肉	3-5 天	4-6 個月	烤肉可能需要長達 48 小時才能正確解凍，使用前 2 天將冷凍烤肉轉移到冷藏室中。
	烤肉	3-5 天	12 個月	
禽肉	雞肉	1-2 天	2 個月	如果禽肉有您不確定的氣味或顏色，最好將其丟棄。
	烤雞	3-5 天	12 個月	
	雞蛋	6 週	不適合	全蛋不適合冷凍，稍微打散的雞蛋可以冷凍四個月。
海鮮	整條魚和魚片	2-3 天	2 個月	儲存在密封容器或箔紙中。
	龍蝦與螃蟹	1-2 天	2 個月	切勿在鹽水中冷凍對蝦，因為這會使蝦肉脫水。
	對蝦	1-2 天	2 個月	
乳製品	牛奶	保質期內	不適合	如果乳製品有您不確定的氣味或顏色，最好將其丟棄。
	乳酪	7-10 天	不適合	
	硬奶酪	2 週 -2 個月	2 個月 (分格)	根據品種的不同，硬奶酪可以保存 2 週到 2 個月 * 質地可能會根據軟奶酪的類型而不同
	軟奶酪	1-2 週	不適合	
	黃油	8 週	12 個月	
水果與蔬菜	每種水果與蔬菜都有不同的保質期。有些僅可以保鮮數天 (例如豆子)，有些可以保鮮幾個月 (例如洋蔥)。		8-12 個月 冷凍時切成小份，焯水。	將蔬菜放在保鮮格中並遠離通風口，以免結冰。 在儲存水果和蔬菜之前，如果您已經清洗過，請確保它們是乾燥的，或在放入冷藏室之前用吸水紙包裹，因為水分會使它們更容易腐爛。 儘量將水果和蔬菜分開，因為會釋放大量乙烯 (催熟劑) 的水果會加快周圍蔬菜的成熟和腐爛
剩菜剩飯	家庭自製食物	3-4 天	2-6 個月	存放在密封容器內。
				分小份食物冷凍以減少浪費。



### 重要

請注意，此資訊僅供參考，實際儲存時間會因您使用冷藏室的方式、氣候條件和食物的新鮮度而異。

## 8. 故障排查

### 設備未在所需溫度下運行

在現代無霜冷藏室/冰櫃中，透過使用高效風扇使冷空氣流經通風口並在各個隔室周圍循環。

問題	解決方案
冷藏室溫度過高	<ul style="list-style-type: none"> <li>將冷藏室溫度調節至較冷設定</li> <li>確保食物完全冷卻後再放入冷藏室內。</li> <li>確保根據說明設定設備</li> <li>確保沒有異物阻塞冷卻通風口。</li> <li>確保櫃門沒有打開，或避免頻繁打開。</li> </ul>
冷凍室溫度過高	<ul style="list-style-type: none"> <li>調節至較冷溫度設定。</li> <li>確保食物完全冷卻後再放入冷凍室內。</li> <li>確保根據說明設定設備</li> <li>確保沒有異物阻塞冷卻通風口。</li> <li>確保櫃門沒有打開，或避免頻繁打開。</li> </ul>
食物在冷藏室內結冰	<ul style="list-style-type: none"> <li>調節至較暖溫度。</li> <li>確保水果和蔬菜儲存在保鮮格內。含水量高的食物不應放在冷卻通風口附近。</li> </ul>
無法改變溫度設定	<ul style="list-style-type: none"> <li>參閱「溫度控制」部分。</li> </ul>

### 櫃門操作

問題	解決方案
冷凍室內櫃門打開。	<ul style="list-style-type: none"> <li>這是正常現象，需要重新關閉。當冷藏室門關閉過快時，會出現此情況。</li> <li>如果冷凍室門保持打開狀態，則表明冷藏室需要再向後傾斜一點。參閱「安裝新設備」部分。</li> </ul>
無法自動關閉。	<ul style="list-style-type: none"> <li>檢查設備是否有自動關閉鉸鏈，並非所有型號都有此裝置。</li> <li>則表明冷藏室需要再向後傾斜一點。參閱「安裝新設備」部分。</li> </ul>
櫃門密封不佳	<ul style="list-style-type: none"> <li>確保沒有任何物品阻止櫃門關閉，例如冷藏室內的食物或放置在冷藏室附近的物品。</li> <li>確保保鮮格/冷凍盒完全關閉。必要時，請按照「使用冷藏室」一節中的說明重新安裝。</li> <li>確保根據建議安裝冷藏室。</li> </ul>
櫃門難以打開或關閉	<ul style="list-style-type: none"> <li>如果在櫃門在關閉後很難打開，這是由於壓力正在平衡，幾分鐘後櫃門即可正常打開。</li> </ul>

## 保鮮格操作

問題	解決方案
保鮮格內聚集水分  保鮮格內聚集一些水汽和濕氣是正常現象。	<ul style="list-style-type: none"> <li>· 確保保鮮格不要塞得太滿。</li> <li>· 調節保鮮格濕度滑塊。</li> <li>· 建議使用如下圖所示的食品保鮮膜或自封袋包裝食物。</li> </ul>
無法拆除保鮮盒	<ul style="list-style-type: none"> <li>· 如果保鮮盒阻擾了冷藏室門儲物盒，請在拆除保鮮格之前先拆除冷藏室門儲物盒。</li> <li>· 放入櫃箱內，以便可以完全打開櫃門。</li> </ul>
保鮮格內的物品結冰	<ul style="list-style-type: none"> <li>· 調節至較暖溫度。</li> </ul>

## 設備噪音

此新冷藏室可能會發出舊設備沒有的聲音。因為這是與之前不同的聲音，因此您可能會質疑。大部分聲音都是正常的。堅硬的表面，如地板、牆壁和櫥櫃，會使聲音聽起來比實際更響亮。以下說明聲音類型和可能產生噪聲的來源。

問題	解決方案
電機噪音（壓縮機）	<p>正常這是正常現象，因為您的新冷藏室使用高速壓縮機，它會在運行期間打開和關閉。</p> <p>注意，在啟動階段壓縮機噪聲聽起來可能比平時更響亮。</p>
電機噪音（壓縮機）；	<p>冷藏室配備了變速壓縮機和風扇。在啟動時和溫度較高的環境下，它們會以更高的速度運行以提供更多冷卻。當不需要過多冷卻時，壓縮機和風扇將以較低的速度運行。因此，噪聲水平根據運行條件而變化是正常現象。</p>
在壓縮機開始運轉之前會聽到咔嗒聲	<p>正常這是正常現象，因為此新冷藏室會自動切換溫度控制，開啟和關閉壓縮機。</p>
偶爾出現嗡嗡聲，類似於水煮開時的聲音	<p>正常每當循環結束時，您可能會聽到由於冷凍劑在冷藏室系統中流動而發出的嗡嗡聲。</p> <p>沒問題，這是正常的，因為新冷藏室採用高效能風扇來進行空氣循環。在使用量大或較熱天氣下，風扇速度與噪聲可能會增加。</p>
嘎嘎聲和其他噪聲。	<ul style="list-style-type: none"> <li>· 確保冷藏室平穩固定在地面，參閱安裝說明</li> <li>· 檢查設備的周圍環境，確保沒有任何東西接觸或放置在設備頂部。</li> <li>· 確保設備內的物品穩定，不會發生搖晃（例如瓶子）。</li> </ul>

## 冷藏室運行

問題	解決方案
<p>冷藏室不運行</p> <p>在自動除霜期間，或在設備開啟後的短時間內，冷凍室的風扇不會運行，這是正常現象。</p>	<ul style="list-style-type: none"> <li>確保將電源插頭插入已通電插座。</li> <li>確保家用斷路器未跳閘或保險絲未熔斷。</li> <li>設備可能處於除霜模式，半小時後再檢查。</li> </ul>
<p>壓縮機電機似乎長時間運行</p> <p>在正常室溫下，預計電機將在大約 40% 到 80% 的時間內運行。在較熱天氣下，預計運行時間會更長。</p>	<ul style="list-style-type: none"> <li>確保冷藏室門未打開。</li> <li>檢查是否放入了大量尚未完全冷卻的食物。</li> <li>注意，設備在最初安裝後，或剛剛調節溫度設定後可能不會正常運行。</li> </ul>
<p>壓縮機電機似乎長時間運行。這些電器使用變速壓縮機，設計可以長時間運行，這是正常現象</p>	<ul style="list-style-type: none"> <li>因為您的新冷藏室使用變速壓縮機和風扇，在啟動時和氣溫較高的環境下會高速運行以提供額外的冷卻。當不需要過多冷卻時，壓縮機和風扇將以較低的速度運行，但仍可能不會關閉。這是正常現象。</li> <li>壓縮機和風扇僅可能在冷藏室除霜時停止運作，大約每天一次。</li> </ul>
<p>此時觸摸設備外殼會感覺很熱</p> <p>這是正常現象，因為設備透過外殼面板和櫃門之間的分割器將內部的熱量傳遞至外部。</p>	<ul style="list-style-type: none"> <li>確保設備周圍的間隙符合「安裝新設備」部分中的建議距離。</li> <li>在較熱天氣裡，機櫃的外部會更熱，甚至可能會感覺燙手，這是因為電器正在高速工作。</li> </ul>
<p>警報聲</p>	<ul style="list-style-type: none"> <li>檢查所有櫃門是否完全關閉。</li> <li>確保冷凍室中的熟食不會觸發超溫警報。</li> </ul>
<p>結霜</p>	<ul style="list-style-type: none"> <li>檢查所有櫃門是否完全關閉。</li> <li>確保冷藏室門未頻繁打開。</li> <li>確保回風口沒有被包裝物堵塞。</li> <li>確保密封件乾淨且未堵塞。</li> </ul>
<p>異味</p>	<ul style="list-style-type: none"> <li>內部可能需要清潔，請參閱清潔指南。</li> <li>確保正確儲存食物，因為某些食物、容器和正確包裝材料可避免產生異味問題</li> <li>檢查設備內是否有過期或不尋常的食物。</li> <li>請確保每 6 個月更換一次空氣過濾器。</li> </ul>

問題	解決方案
<p>照明燈不亮</p> <p>LED 燈設計為可緩慢點亮。LED 燈會在櫃門打開超過 5 分鐘後自動變暗，超過 7 分鐘後自動熄滅。關閉櫃門將重設計時器。</p>	<ul style="list-style-type: none"> <li>• 確保將電源插頭插入已通電插座。</li> <li>• 確保家用斷路器未跳閘或保險絲未熔斷。</li> <li>• 檢查冷藏室溫度設定是否未處於安息日模式，請參閱控制說明。</li> </ul>

### 製冰與供水系統

問題	解決方案
<p>製冰機無法製冰或製冰量不足</p> <p>製冰機的設計製冰速度大約為每 3 小時生產一冰盒，具體視乎使用條件而定。</p>	<ul style="list-style-type: none"> <li>• 確保將電源插頭插入已通電插座。</li> <li>• 請確認製冰機已接通水並已開啟，且水管沒有扭結。</li> <li>• 請確保於使用者介面上已開啟製冰機。</li> <li>• 檢查濾水器是否堵塞或已過期。</li> <li>• 檢查供水流量。</li> <li>• 如果冷凍室溫度過高，參閱「冷凍室溫度過高」部分，然後等待 24 小時，以便冷凍室達到理想溫度。</li> <li>• 關閉設備電源並等待 2 分鐘，然後重新打開設備（這將重設製冰機）。24 小時後檢查製冰情況。</li> <li>• 檢查製冰機下方是否沒有障礙物，並確保正確安裝了冰盒。</li> </ul>
<p>飲水機無法正常運作</p>	<ul style="list-style-type: none"> <li>• 確保將電源插頭插入已通電插座。</li> <li>• 請確認飲水機已接通水並已開啟，且水管沒有扭結。</li> <li>• 請確保於使用者介面上已開啟飲水機。</li> <li>• 請確保已排空水管，請參閱「連接供水」章節。</li> <li>• 檢查濾水器是否堵塞或已過期。</li> <li>• 檢查水壓，請參閱「連接供水」章節。</li> </ul>
<p>冰或水有不好的味道或氣味</p>	<ul style="list-style-type: none"> <li>• 蓋住食物以確保冰塊不會吸收外部異味。</li> <li>• 檢查濾水器是否已過期。</li> <li>• 設備或冰盒內部可能需要清潔。</li> <li>• 每月丟棄未使用的冰塊，讓製冰機製作新鮮的冰塊。</li> </ul>





### 如仍需服務

 
若您遇到問題，且在完成上述檢查之後問題仍然存在，請聯絡您最近的 Electrolux 授權服務中心，或您購買本產品的經銷商。請提前準備好型號，9 位 PNC 碼及 8 位序列號，其位於冷藏室內部的標籤上。

 
## 9. 噪聲

### 設備噪音

此新冷藏室可能會發出舊設備沒有的聲音。因為這是與之前不同的聲音，因此您可能會質疑。大部分聲音都是正常的。堅硬的表面，如地板、牆壁和櫥櫃，會使聲音聽起來比實際更響亮。以下說明聲音類型和可能產生噪聲的來源。

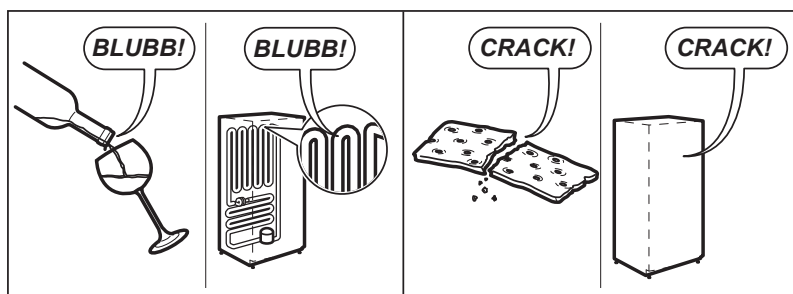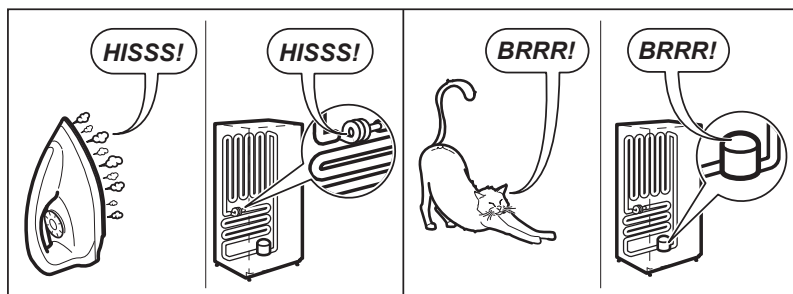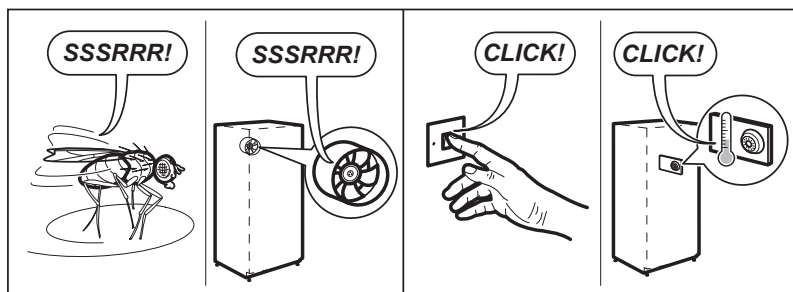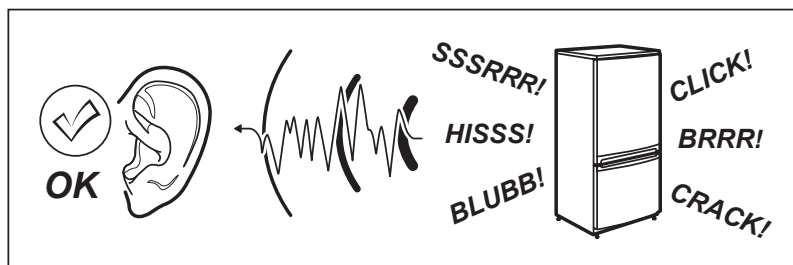





[www.electrolux.com/shop](http://www.electrolux.com/shop)



**CUSTOMER CARE HOTLINE:** 1300-88-1122  
Electrolux Home Appliances Sdn. Bhd. Lot C6,  
No. 28, Jalan 15/22,  
Taman Perindustrian Tiong Nam Seksyen 15,  
40200 Shah Alam, Selangor.  
Email: [malaysia.customercare@electrolux.com](mailto:malaysia.customercare@electrolux.com)  
Website: [www.electrolux.com.my](http://www.electrolux.com.my)

**Singapore**

**CUSTOMER CARE HOTLINE:** (+65) 67273699  
Electrolux S.E.A. Pte Ltd.  
351 Braddell Road, #01-04 Singapore 579713  
Email: [customer-care.sin@electrolux.com](mailto:customer-care.sin@electrolux.com)  
Website: [www.electrolux.com.sg](http://www.electrolux.com.sg)

**Philippines**

Domestic Toll Free: 1-800-10-845-care 2273  
Hotline No: (02) 8845-2273 (02) 8845-4663  
Electrolux Philippines, Inc.  
12/F Cyber Sigma Bldg., Lawton Avenue,  
McKinley West, 1634 Taguig City, Philippines  
Email: [wecare@electrolux.com](mailto:wecare@electrolux.com)



**Hong Kong**

DCH ELECTRICAL APPLIANCES SERVICE  
CENTRE 4/F, DCH BUILDING, 20 KAI CHEUNG  
ROAD, KOWLOON BAY, HONG KONG  
SERVICE HOTLINE: (+852) 3193 9888  
EMAIL: [customer-care@dch.com.hk](mailto:customer-care@dch.com.hk)

大昌貿易行有限公司  
電器維修中心  
香港九龍灣啟祥道20號大昌行集團大廈4樓  
服務熱線: (+852) 3193 9888  
電子郵件: [customer-care@dch.com.hk](mailto:customer-care@dch.com.hk)

A24336565-A-472025

