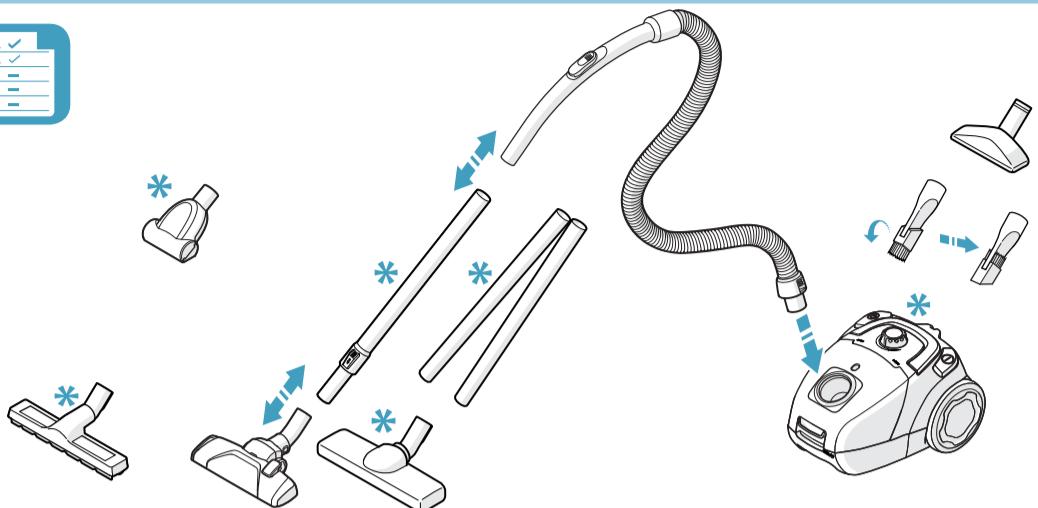
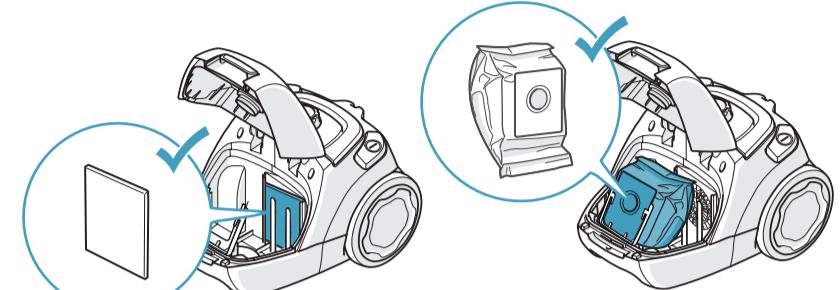




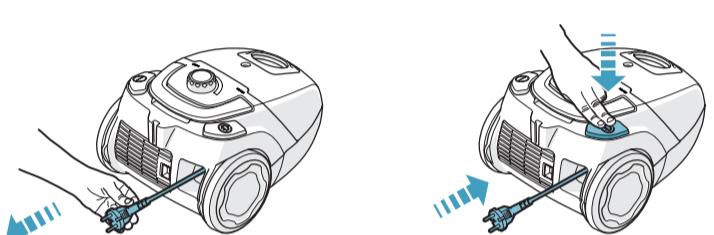
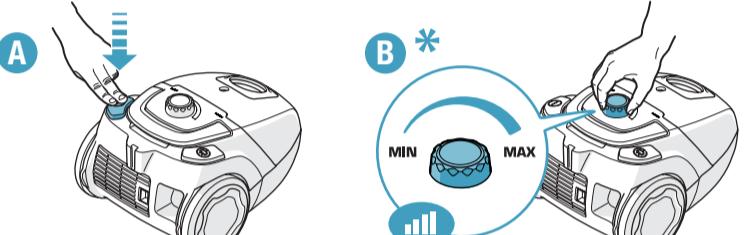
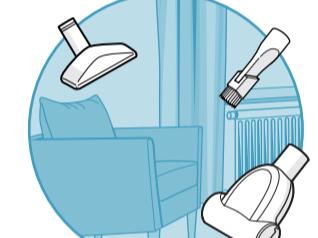
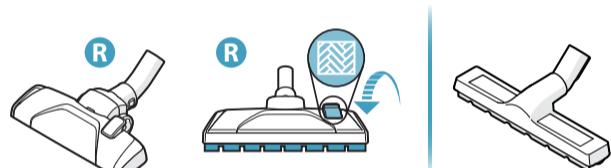
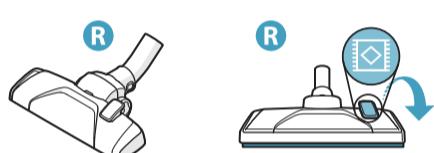
Electrolux

COMPACT GO

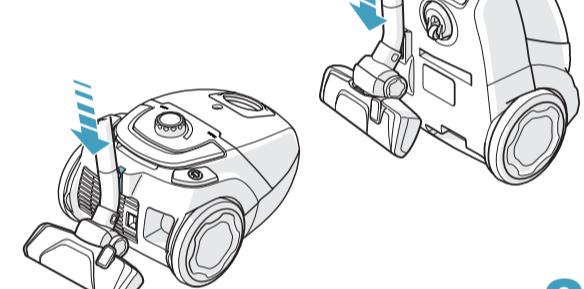
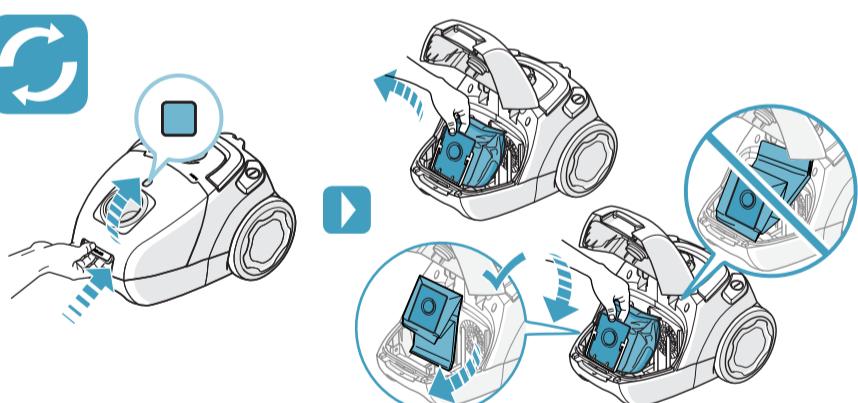
- 1. ✓
- 2. ✓
- 3. —
- 4. —
- 5. —

**1****2**

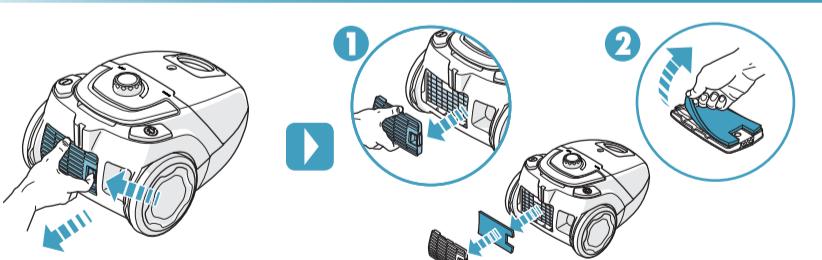
* Applies to certain models only | 僅適用於特定型號 | 仅适用于特定型号 | Berkanaan dengan model yang tertentu sahaja | Chỉ áp dụng cho một số
kiểu máy | ใช้กับเครื่องใช้ไฟฟ้าบางรุ่นเท่านั้น | 특정 모델에만 적용

**3****4****5****R**

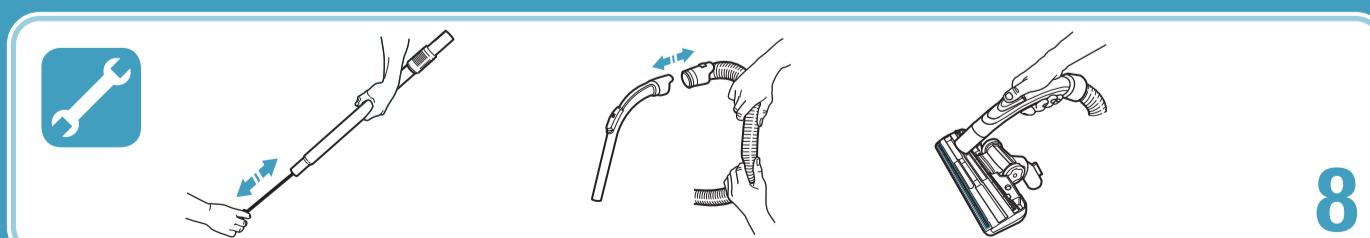
Recommended nozzle | 推薦噴頭 | 推荐喷嘴 | Noseł yang disarankan | đầu hút được khuyến nghị | ทัวดูดที่แนะนำ | 권장 노즐

**6**

5x = 1x



30°C
24h

**7****8**

