

WHAT TO DO IF...

**WARNING!**

Refer to the Safety chapters.

Problem	Possible cause	Remedy
The oven does not heat up.	The appliance is deactivated.	Activate the appliance.
The oven does not heat up.	The clock is not set.	Set the clock.
The oven does not heat up.	The necessary settings are not set.	Make sure that the settings are correct.
The oven does not heat up.	The fuse in the fuse box is released.	Do a check of the fuse. If the fuse is released more than one time, contact a qualified electrician.
The oven lamp does not operate.	The oven lamp is defective.	Replace the oven lamp.
The display shows 12.00 .	There was a power cut.	Set the clock.

Problem	Possible cause	Remedy
Steam and condensation settle on the food and in the oven.	You left the dish in the oven for too long.	Do not keep the dishes in the oven for longer than 15 - 20 minutes after the cooking ends.
If you cannot find a solution to the problem yourself, contact your dealer or the service centre.		The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the appliance cavity.
We recommend that you write the data here:		
Model (MOD.)	
Product number (PNC)	
Serial number (S.N.)	