



EMSB30XCF

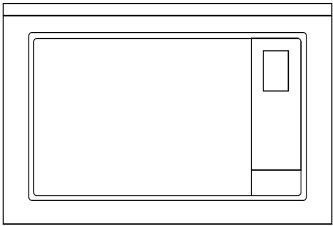

Build-in microwave

Installation & User manual

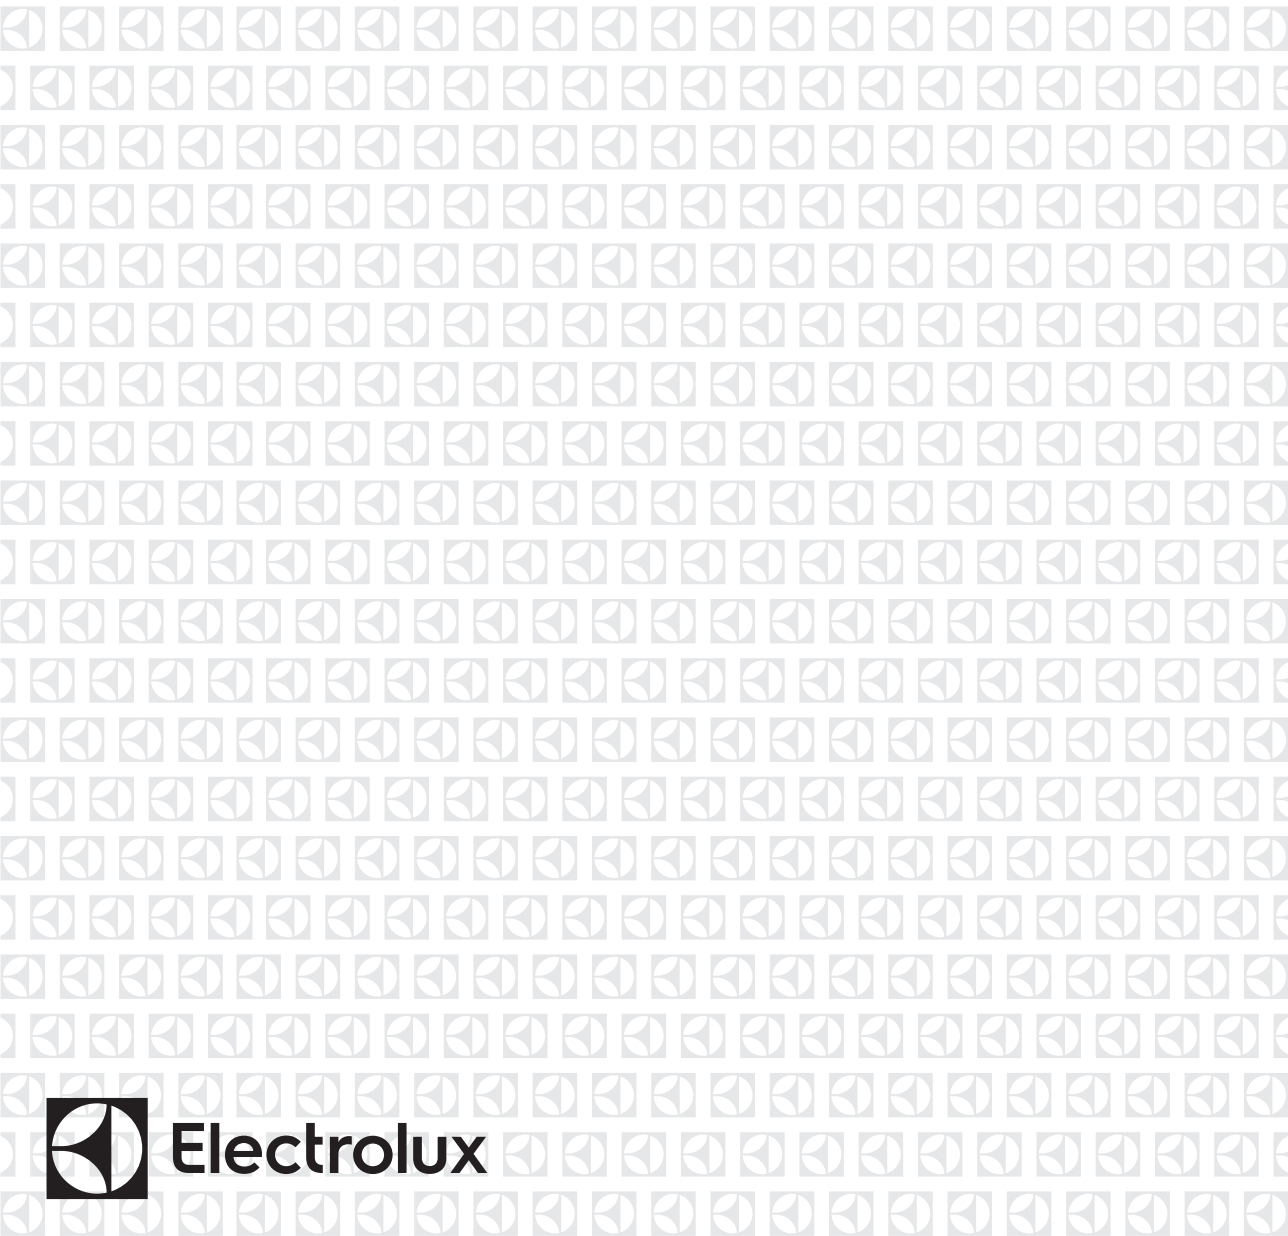

CONTENT

CONTENT	1
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	2
IMPORTANT SAFETY INSTRUCTIONS	2
INSTALLATION GUIDE	5
GROUNDING INSTRUCTIONS	6
RADIO INTERFERENCE	6
BEFORE CALLING FOR SERVICE	6
COOKING TECHNIQUES	7
COOKING UTENSILS GUIDE	7
SPECIFICATIONS	8
PRODUCT DIAGRAM	8
TURNTABLE INSTALLATION.....	9
CONTROL PANEL	10
OPERATION INSTRUCTIONS.....	11
SETTING CLOCK TIME.....	11
<i>TIMER FUNCTION</i>	11
<i>EXPRESS COOKING</i>.....	12
MICROWAVE COOKING.....	12
<i>GRILL</i>	12
<i>CONVECTION</i>	13
<i>MICROWAVE+CONVECTION</i>.....	14
<i>TIME DEFROST</i>	14
<i>WEIGHT DEFROST</i>.....	14
<i>FERMENT FUNCTION</i>.....	14
<i>MULTI-STAGE COOKING</i>.....	15
<i>MEMORY FUNCTION</i>.....	15
<i>CHILD LOCK</i>.....	15
<i>COOKMENU</i>.....	16
<i>AIR FRY COOK</i>.....	17
<i>AUTO COOK</i>.....	20
TROUBLE SHOOTING	21
CLEANING AND CARE	21
CONSUMERS CARE CONTACT CENTER.....	23

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open as open-door operation can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soiled or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
 - a) Door (including any bent),
 - b) Hinges and latches (broken or loosened),
 - c) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

WARNING!--To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance and keep it for future reference.
2. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat, cook or dry the food. It is not designed for industrial or laboratory use.
3. Do not operate the oven without food.
4. **WARNING!**--Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
5. **WARNING!**--When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the high temperature generated

6. To reduce the risk of fire in the oven cavity:
 - Should not heat the food in plastic or paper container, keep an eye on the oven due to the possibility of ignition.
 - Removing the winding tape from the paper or plastic bag before putting it in the oven.
 - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
 - The microwave oven is intended for cooking, drying and heating food and beverages. Drying of clothing and heating of hot/warm pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
7. **WARNING!**--Liquid or other food must not be heated in sealed containers as they may explode.
8. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
9. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
10. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens as they may explode even after microwave heating has ended.
11. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
12. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving to avoid burns.
13. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
14. Utensils should be checked to ensure that they are suitable for use in microwave oven.
15. **WARNING!**--It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
16. This Microwave complies with EN 55011/CISPR 11, in this standard it belong to Class B Group 2 classification. Group 2 equipment: group 2 contains all ISM RF equipment in which radio-frequency energy in the frequency range 9 kHz to 400 GHz is intentionally generated and used or only used locally, in the form of electromagnetic radiation, inductive and/or capacitive coupling, for the treatment of material, for inspection/analysis purposes, or for transfer of


electromagnetic energy. Class B equipment is equipment suitable for use in locations in residential environments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance.
19. The microwave oven is only used in freestanding.
20. **WARNING!**--Do not install oven over a range cook top or other heat-producing appliance. To avoid damage ,the warranty would be avoid with such installation.
21. The microwave oven shall be placed in a cabinet.
22. **WARNING!**--Accessible parts may become hot during use. Young children should be kept away.
23. **WARNING!**--If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
24. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
25. The microwave oven is for household use only and not for commercial use.
26. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
27. Please secure the turntable before you move the appliance to avoid damages.
28. **CAUTION!**--It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
29. The microwave oven is intended for defrosting, cooking and steaming of food only.
30. Use gloves if you remove any heated food.
31. **Caution!** Steam will escape, when opening lids or wrapping foil.

INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING!**--Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
6. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
7. The socket must be readily accessible so that it can be easily unplugged in an emergency.
8. Do not use the oven outdoors.

30L Built in Microwave Oven Installation Instructions

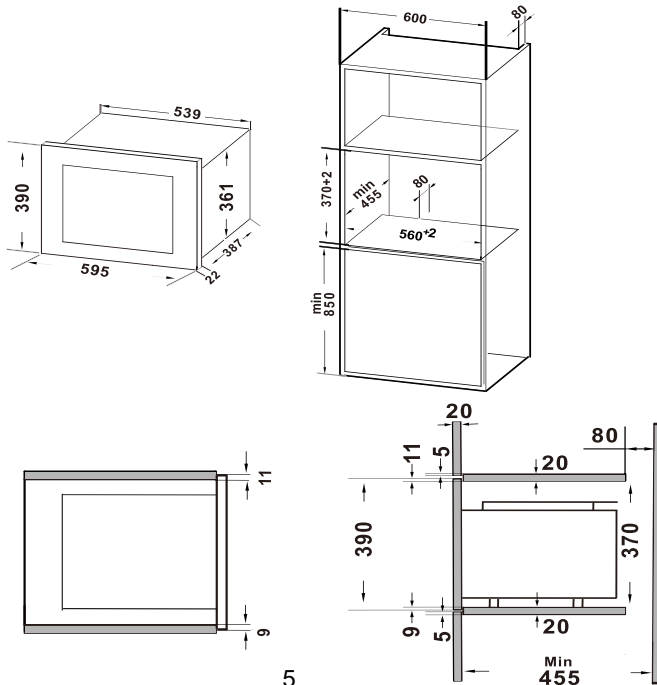

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING!--Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean the door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

BEFORE CALLING FOR SERVICE

Before asking for service, please check each item below:

- Check to ensure the oven is plugged in securely. If not, remove the plug from

the outlet, wait 10 seconds, and plug it in again securely.

- Check for a blown circuit fuse or a tripped main circuit breaker. If these are operating properly, test the outlet with another appliance.
- Check to ensure the control panel is programmed correctly and the timer is set.
- Check to ensure the door is securely closed, engaging the door lock system. If the door is not properly closed, the microwave energy will not flow inside.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

COOKING TECHNIQUES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent splattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to every cook foods such as chicken and hamburger patty. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

COOKING UTENSILS GUIDE

1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
2. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
3. Round /oval dishes rather than square/oblong ones are recommended, as food in corners tends to overcook.
4. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.

Cookware	Microwave	Grill	Convection	Combination*
Heat-Resistant Glass	Yes	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No	No
Kitchen Paper	Yes	No	No	No
Metal Tray	No	Yes	Yes	No
Metal Rack	No	Yes	Yes	No
Aluminum Foil & Foil Container	No	Yes	Yes	No


* Combination: applicable for both "microwave+grill", and "microwave+convection" cooking.

SPECIFICATIONS


Power Supply	220V/50 Hz(Vietnam) 230-240V/50Hz(Malaysia & Singapore)
Power Consumption (Microwave)	1400W
Power Consumption (Grill)	1250W
Power Consumption (Convection)	2200W
Rated Microwave Power Output	900W
Operation Frequency	2450MHz
Outside Dimensions	390mm(H)×595mm(W)×410m(D)
Oven Cavity Dimensions	220mm(H)×354 mm(W)×375mm(D)
Oven Capacity	30Litres
Net Weight	Approx. 19.1kg
Model number	EMSB30XCF
Plug Type& Cable Length	EU plug(Vietnam),UK plug (Malaysia & Singapore),1010MM

PRODUCT DIAGRAM


1. Door Safety Lock System
2. Oven Window
3. Shaft
4. Roller Ring
5. Control Panel
6. Wave Guide
(Please do not remove the mica plate covering the wave guide)
7. Glass Tray
8. Grill Heater
9. Metal Rack
10. Air Fry Kit

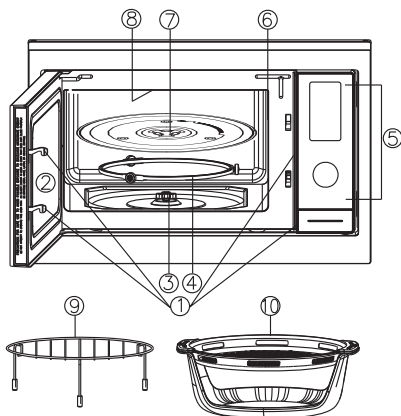

Turntable Installation

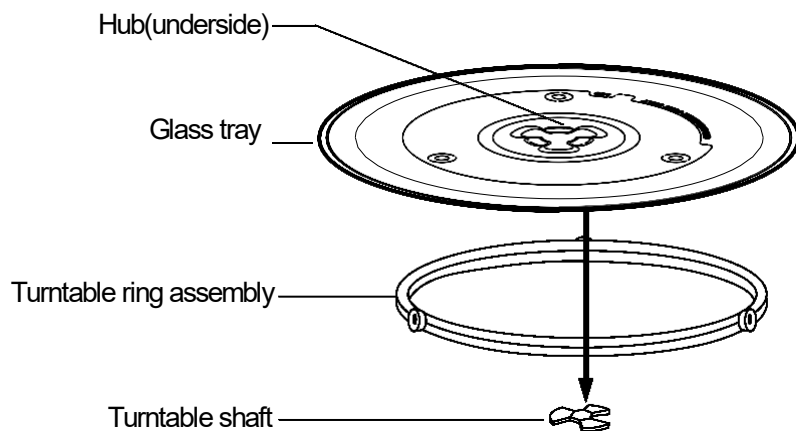

CONTROL PANEL

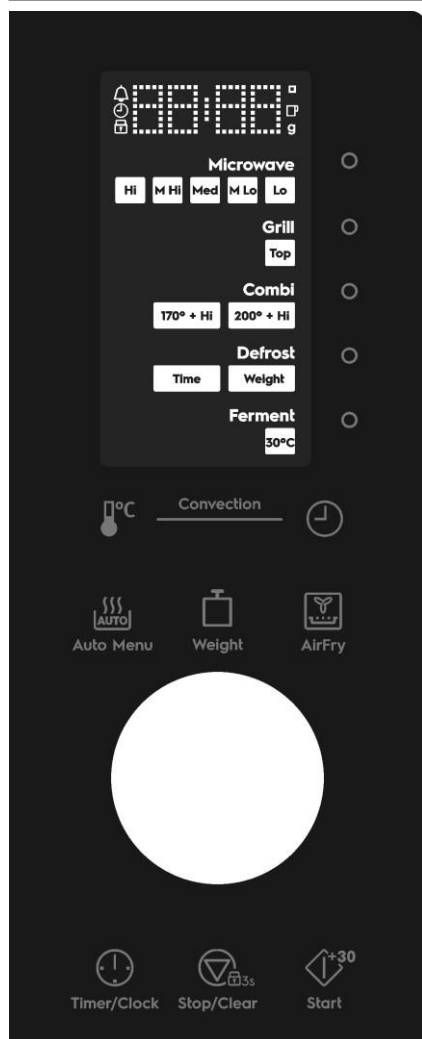

• DISPLAY

Time, power and indicators are displayed.

• MICROWAVE

Press to select microwave power levels.

• GRILL

Press to set grill cooking program.

• COMBI

Press to set microwave and convection combination cooking programs.

• DEFROST

Press once to defrost food based on time.

Press twice to defrost food based on weight.

• FERMENT

Press to set fermentation program.

• CONVECTION TEMPERATURE

Press to set convection cooking temperature.

• CONVECTION TIME

Press to set convection cooking time.

• AUTO MENU

Press to set auto cooking program.

• WEIGHT

Press to set food weight.

• AIRFRY

Press to set air fry cooking program.

• DIAL

Turn the dial to set time.

• TIMER/CLOCK

Press to set timer function and clock time.

• STOP/CLEAR

Press once to temporarily stop cooking, or twice to cancel cooking altogether.

It is also used to set child lock.

• START /+30 SEC

Press to start cooking programs.

Simply press it repeatedly to set cooking time

OPERATION INSTRUCTIONS

- When the oven is plugged in for the first time, a beep will sound and the display will show "00:00" after the LED and nixie tube display on the display board are scanned from top to bottom.
- In the process of setting, without any operation for about 30 seconds the oven will return to standby mode.
- During cooking, if press STOP/CLEAR button once, the program will be paused, and then press START/+30 SEC button once to resume. If you press STOP/ CLEAR button twice, the program will be cancelled.
- After cooking end, the display will show End and beep will sound every two minutes until user press STOP/CLEAR button or open the door.
- In the process of operation, press a valid button, the buzzer rings once, but if press a invalid button, the buzzer rings twice.
- The electronically controlling system of the microwave oven has the feature of cooling. As for any cooking which cooking time above 2 minutes, open the oven door or stopping state, the oven fan will work about 3 minutes automatically to cool the oven for prolonging the life span of the oven.

SETTING CLOCK TIME

1. In standby mode, press TIMER/CLOCK button twice.
2. Turn dial to set hour digit.
3. Press TIMER/CLOCK button once.
4. Turn dial to set minute digit.
5. Press TIMER/CLOCK button to confirm.

NOTE: This is a 24- hour clock. During cooking or pausing, you can check the current clock time by pressing TIMER/CLOCK button.

TIMER FUNCTION

The first way (Time increases):

1. In standby mode, during cooking or pausing, press TIMER/CLOCK button once.
2. Press START/+30 SEC button once. When the time increases to 95 minutes, the buzzer gives an alarm for 5 seconds and automatically returns to standby (or cooking countdown state) at the same time.

The second way (Time decreases):

1. In standby mode, during cooking or pausing, press TIMER/CLOCK button once.
2. Turn dial to set desired time. The longest time is 95 minutes.

3. Press START/+30 SEC button to start. When the countdown ends, the buzzer will beep to remind you, and automatically returns to standby (or cooking countdown state) at the same time.

NOTE:

- When the timer is running, you can set cooking function.
- Press STOP/CLEAR button once to pause the timing, then press START/+30 SEC button once to continue the timing. But if press STOP/CLEAR button twice to cancel the timing and return to standby.
- If in standby mode to set the timer, the display will always show the timing without returning to standby mode.
- After the timer is started, the indicator light of TIMER/CLOCK button is always on.

EXPRESS COOKING

Use this feature to program the oven to microwave food at 100% power conveniently. In standby mode, press START/+30 SEC button repeatedly to set cooking time (Each press to increase 30 seconds, and up to 95 minutes.), the oven will start working automatically. During cooking, you can add the cooking time by pressing START/+30 SEC button.

MICROWAVE COOKING

1. In standby mode, press MICROWAVE button repeatedly to select a cooking power level.
2. Turn dial to set cooking time. The longest time is 95 minutes.
3. Press START/+30 SEC button to start.

Press MICROWAVE button to set cooking power level:

Press MICROWAVE button	Power (Display)
Once	100% (HI)
Twice	80% (M-HI)
3 times	60% (MED)
4 times	40% (M-LO)
5 times	20% (LO)

GRILL

Grill cooking is particularly useful for thin slices of meat, steaks, chops, kebabs, sausages and pieces of chicken. It is also suitable for hot sandwiches and au gratin dishes.

1. In standby mode, press GRILL button once.
2. Turn dial to set cooking time. The longest time is 95 minutes.
3. Press START/+30 SEC button to start.

CONVECTION

During convection cooking, hot air is circulated throughout the oven cavity to brown and make crisp foods quickly and evenly. This oven can be programmed for ten

different cooking temperatures (110°C→120°C→130°C→140°C

→150°C→160°C→170°C→180°C→190°C→200°C). The longest cooking time is 95 minutes.

To preheat and cook with convection:

Your oven can be programmed to combine preheating and convection cooking operations.

1. In standby mode, press CONVECTION TEMPERATURE button once.
2. Turn dial to select a temperature.
3. Press START/+30 SEC button once to confirm. Beeps will sound when the designated temperature is reached.
4. Open the door, place container of food at the center of the turntable.
5. Turn dial to set cooking time.
6. Press START/+30 SEC button to start.

NOTE:

- During preheating, you can check the cooking temperature by pressing CONVECTION TEMPERATURE button.
- During preheating, you can press STOP/CLEAR once or directly open the oven door to exit the preheating state, and the display will show "0:00". At this time, turn dial to set cooking time and press START/+30 SEC button to start the program.
- The longest preheat time is 30 minutes, and the preheat time cannot be set. When the oven reaches preheat temperature, if there is not any operation within 30 minutes, the program will end automatically.

To cook with convection:

1. In standby mode, press CONVECTION TEMPERATURE button once.
2. Turn dial to select a temperature.
3. Press CONVECTION TIME button once
4. Turn dial to set cooking time.
5. Press START/+30 SEC button to start.

NOTE: During cooking, you can check the cooking temperature by pressing CONVECTION TEMPERATURE button.

MICROWAVE+CONVECTION

This oven has two pre-programmed settings that make it easy to cook with both convection heat and microwave automatically.

1. In standby mode, press COMBI button repeatedly to select combination mode "170°+HI " or "200°+HI".
2. Turn dial to set cooking time. The longest time is 95 minutes.
3. Press START/+30 SEC button to start.

TIME DEFROST

1. In standby mode, press DEFROST button once.
2. Turn dial to set defrosting time. The longest time is 95 minutes.
3. Press START/+30 SEC button to start.

NOTE: During defrosting, the system will pause and sound to remind user to turn food over, after that, press START/+30 SEC button to resume.

WEIGHT DEFROST

The defrosting time and power level are automatically set once the food weight is programmed. The frozen food weight ranges from 100 g to 1000 g.

1. In standby mode, press DEFROST button twice.
2. Turn dial to to set food weight.
3. Press START/+30 SEC button to start.

NOTE: During defrosting, the system will pause and sound to remind user to turn food over, after that, press START/+30 SEC button to resume.

FERMENT FUNCTION

Prepare the dough, put it into a deeper container, spray water in the container slightly before fermentation, seal the fresh-keeping film, and start the program.

1. In standby mode, press FERMENT button once. The display will show the default fermentation time 60 minutes
2. Turn dial to to set fermentation time. The time ranges from 60 minutes to 95 minutes.
3. Press START/+30 SEC button to start.

MULTI-STAGE COOKING

Your oven can be programmed for up to 2 automatic cooking sequences.

Suppose you want to set the following cooking program.

Microwave cooking



Microwave cooking (with lower power level)

1. Input the first microwave cooking program. Do not press START/+30 SEC button.
2. Input the second microwave cooking program
3. Press START button to start

NOTE: Express cooking, auto cook menus, air fry menus and convection with preheat can't be set in multi-stage cooking.

MEMORY FUNCTION

This function is to remember the last set power level. When this function is selected next time, the default power level is the last set power level. It takes effect only after pressing START/+30 SEC button to start.

NOTE: When the microwave oven is powered on again, the system will automatically restore the default setting. The microwave and convection combination can memorize the power level, defrost memory defrosting type, auto cook menus memory the menu default code.

CHILD LOCK

The lock prevents unsupervised operation by children.

To set: In standby mode, press and hold STOP/CLEAR button for 3 seconds, then a beep will sound and the indicator light will turn on, the oven will auto enter child lock mode. In the lock state, all buttons are disabled.

To cancel: In child lock mode, press and hold STOP/CLEAR button for 3 seconds to cancel the child lock, a beep will sound and the indicator light will disappear.

COOK MENU

For the following food, it is recommended to use time and power for better cooking effect.

Food type	Cooking function	Power/Temperature	Weight/Share	Cooking time
Beverage / coffee	Microwave	100%	1 cup	1:30
			2 cups	2:40
			3 cups	3:50
Popcorn	Microwave	100%	100 g	2:00~3:00
Auto reheat rice	Microwave	100%	200 g	1:30
			300 g	2:00
			400 g	2:30
			500 g	3:00
			600 g	3:30
			700 g	4:00
			800 g	4:30
Potatoes	Microwave	100%	230 g	5:00
			460 g	8:00
Bake Pizza	Conv	180℃	150 g	14:00
			300 g	15:00
			450 g	16:00
Cake	Conv	140℃	475 g	55:00
Chicken	Conv combi	200℃	800 g	27:00
			1000 g	30:00
			1200 g	33:00
			1400 g	36:00
Fries/Chicken nuggets	Conv combi	200℃	150-200g	21:00
			201-250g	24:00
			251-300g	27:00
			301-350g	30:00
Chicken wings	Conv combi	200℃	150-250g	20:00
			251-350g	24:00
			351-450g	26:00
			451-550g	28:00

AIR FRY COOK

For the following food, it is not necessary to program the cooking time and power. It is sufficient to indicate the type of food that you want to cook as well as the weight or servings of this food.

1. In standby mode, press AIRFRY button once.
2. Turn dial to select a food code.
3. Press WEIGHT button once.
4. Turn dial to select a food weight or servings code.
5. Press START/+30 SEC button to start.

NOTE: During cooking, the system will pause to remind user to turn food over, after that, press START/+30 SEC button to resume.

Air fry menus:

Food Code	Food	Weight or Serving Code	Weight or Serving
F-1	Potato Wedges	1	150-200 g
		2	201-250 g
		3	251-300 g
		4	301-350 g
F-2	French Fries	1	150-200 g
		2	201-250 g
		3	251-300 g
		4	300-350 g
F-3	Popcorn/Chicken Nuggets	1	150-200 g
		2	201-250 g
		3	251-300 g
		4	301-350 g
F-4	Fried Spring Rolls	1	150-200 g
		2	201-250 g
		3	251-300 g
		4	301-350 g
F-5	Satay Pork	1	150-250 g
		2	251-350 g
		3	351-450 g
		4	451-550 g
F-6	Pork Chop	1	100-150 g
		2	151-250 g
		3	251-350 g
F-7	Pork Steak	1	100-150 g
		2	150-250 g

F-8	Chicken Breast (Fried Chicken)	1	150-250 g
		2	251-350 g
		3	351-450 g
		4	451-550 g
F-9	Chicken Wings	1	150-250 g
		2	251-350 g
		3	351-450 g
		4	451-550 g
F-10	Chicken Drumsticks	1	100-200 g
		2	201-300 g
		3	301-400 g
		4	401-500 g
F-11	Beef or Pork Hamburgers	120-150 g/serving)	
		1	2 servings
		2	3 servings
		3	4 servings
		4	5 servings
F-12	Fried Streaky Pork	1	150-250 g
		2	251-350 g
		3	351-450 g
		4	451-550 g
F-13	Bread Fried Fish	100-150 g/serving	
		1	1 serving
		2	2 servings
		3	3 servings
		4	4 servings
F-14	Pork Bacon (added)	1	100-200 g
		2	201-300 g
		3	301-400 g

AUTO COOK

For the following food, it is not necessary to program the cooking time and power. It is sufficient to indicate the type of food that you want to cook as well as the weight or servings of this food.

1. In standby mode, press AUTO MENU button once.
2. Turn dial to select a food code.
3. Press WEIGHT button once.
4. Turn dial to select food weight or servings.
5. Press START/+30 SEC button to start.

Auto cook menus:

Code	Menu	Note
A-1	Grilled Chicken (800-1400 g)	<ol style="list-style-type: none">1. For items A-1 ~ A-4, A-11, during cooking, the system will pause to remind you to turn food over, then close the door, press START/+30 SEC button to resume.2. The result of auto cooking depends on factors such as fluctuation of voltage temperature of food, the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly.
A-2	Roast Beef/Lamb (200-600 g)	
A-3	Roast Pork (200-600 g)	
A-4	Baked Fish (200-600 g)	
A-5	Baked Potato (230 g/serving, 1-2 servings)	
A-6	Frozen Pizza (150 g, 300 g, 450 g)	
A-7	Pasta (100 g, 200 g)	
A-8	Rice (100 g, 200 g, 300 g)	
A-9	Congee/Porridge (30 g, 50 g)	
A-10	Cake (475 g)	
A-11	Toast (2 servings)	
A-12	Popcorn (99g)	
A-13	Dim Sum (reheat) (100 g, 200 g, 300 g)	
A-14	Beverages (200 ml/cup, 1-3 cups)	

TROUBLE SHOOTING

Problem	Possible cause	Remedy
Oven can not be started	(1) Power cord is not plugged in tightly	Unplug. Then plug again after 10 seconds.
	(2) Fuse is blown or circuit breaker is	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Faulty power outlet	Test outlet with other electrical appliances
Oven does not heat	(4) Door is not closed well	Close door
Glass turntable make noise when in use	(5) Dirty roller reser and oven bottom	Refer to “Cleaning” to clean dirty parts

CLEANING AND CARE

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids stick to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. Do not use steam cleaner.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. It is normal.

8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm soapy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
10. Remove odours from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. If the light bulb burns out, please contact customer service to have it replaced.
12. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life span of the unit and could possibly result in a hazardous situation.
13. Please do not dispose this appliance into the domestic rubbish bin; it should be disposed at particular disposal center provided by the municipalities.
14. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon, because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odour generated by burning the lubricating oil. This phenomenon will disappear after a period of using.

Consumers care contact center

<p>Thailand Consumer Care Tel : (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkapi, Huai Khwang, Bangkok 10310 Office Tel : (+66 2) 7259100 Office Fax : (+66 2) 7259299 Email : customercaethai@electrolux.com</p>	<p>Malaysia Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 5999 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Taman Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax : (+60 3) 5524 2521 Email : malaysia.customercaethai@electrolux.com</p>
<p>Indonesia Hotline service: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl. Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email:customercaethai@electrolux.co.id SMS & WA : 0812.8088.8863</p>	<p>Philippines Consumer Care Center Toll Free : 1-800-10-845-CARE(2273) Consumer Care Hotline : (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West, Taguig, Philippines 1634 Trunkline: +63 2 737- 4757 Website : www.electrolux.com.ph Email : wecare@electrolux.com</p>
<p>Vietnam Consumer Care Center Toll Free: 1800-58-88-99 Tel: (+84 28) 3910 5465 Electrolux Vietnam Ltd. Floor 9th, A&B Tower 76 Le Lai Street - Ben Thanh Ward - District 1 Ho Chi Minh City , Vietnam</p>	<p>Singapore Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713 Email : customer-care.sin@electrolux.com</p>
<p>Hongkong Service Hotline: (+852) 3193 9888 DCH Electrical Appliances Services Centre 5/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong</p>	

RoHS
Compliant

Conformed to the stipulation on permissible content limitation of
some hazardous & restricted chemical substances.
(RoHS compliant)
*(According to the Circular No. 30/2011/TT-BCT, Vietnam, dated 10th
August, 2011)*

