EBE4500B EBE5304B



EN Refrigeration

User manual

1 Electrolux A12081680-A-362021

CONTENTS

1.	SAFETY INFORMATION	3
2.	SAFETY INSTRUCTION	4
3.	DESCRIPTION OF THE APPLIANCE	6
4.	TEMPERATURE CONTROL	8
5.	INSTALLING YOUR NEW REFRIGERATOR	11
6.	USING YOUR REFRIGERATOR	12
7.	CLEANING THE REFREIGERATOR FOOD	17
8.	FOOD STORAGE GUIDE	18
9.	TROUBLESHOOTING	19
10.	NOISES	22

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website to:



Get usage advice, brochures, trouble shooter, service information: www.electrolux.com



Register your product for better service: www.electrolux.com/productregistration

Buy Accessories, Consumables and Original spare parts for your appliance: www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts. When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. Model, PNC, Serial Number

- 🖄 Warning / Caution-Safety information.
- i General information and tips
- Environmental information.

Subject to change without notice.

1. \triangle SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Cleaning and user maintenance shall not be made by children without supervision.

1.2 General Safety

- This appliance is intended to be used in household and similar applications such as:
 - Farm houses; staff kitchen areas in shops, offices and other working environments
 - By clients in hotels, motels, bed and breakfast and other residential type environments
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the appliance is equipped with an Ice maker or a water dispenser, fill them with potable water only.
- If the appliance requires a water connection, connect it to potable water supply only.
- The inlet water pressure (minimum and maximum)must be between 1 bar (0,1 MPa) and 10 bar (1 MPa)

2. SAFETY INSTRUCTIONS

2.1 Installation

WARNING! Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- · Make sure the air can circulate around the appliance.
- Wait at least 4 hours before connecting the appliance to the power supply. This is to allow the oil to flow back in the compressor.
- Do not install the appliance close to radiators or cookers, oven or hobs.
- The rear of the appliance must stand against the wall.
- · Do not install the appliance where there is direct sunlight.
- Do not install this appliance in areas that are too humid or too colds, such as the construction appendices, garages or wine cellars.
- When you move the appliance, lift it by the front edge to avoid scratching the floor.

2.2 Electrical connection



WARNING!

Risk of fire and electrical shock.

- The appliance must be earthed.
- All electrical connections should be made by a qualified electrician.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the electrical components (e.g. mains plug, mains cable, compressor). Contact the Service or an electrician to change the electrical components.
- The mains cable must stay below the level of the mains plug.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

2.3 Use



WARNING!

Risk of injury, burns, electrical shock or fire.

- Do not change the specification of this appliance.
- Do not put electrical appliances (e.g. ice cream makers) in the appliance unless they are stated applicable by the manufacturer.
- Be careful not to cause damage to the refrigerant circuit. It contains isobutane (R600a), a natural gas with a high level of environmental compatibility. This gas is flammable.
- If damage occurs to the refrigerant circuit, make sure that there are no flames and sources of ignition in the room. Ventilate the room.
- Do not let hot items to touch the plastic parts of the appliance.
- Do not put soft drinks in the freezer compartment. This will create pressure on the drink container.
- Do not store flammable gas and liquid in the appliance.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the compressor or the condenser. They are hot.
- Do not remove or touch items from the freezer compartment if your hands are wet or damp.
- Do not freeze again food that has been thawed.
- Obey the storage instructions on the packaging of frozen food.

2.4 Internal light

• The type of lamp used for this appliance is not suitable for household room illumination.

2.5 Care and cleaning



WARNING!

Risk of injury or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- This appliance contains hydrocarbons in the cooling unit. Only a qualified person must do the maintenance and the recharging of the unit.
- Regularly examine the drain of the appliance and if necessary, clean it. If the drain is blocked, defrosted water collects in the bottom of the appliance.

2.6 Disposal



WARNING!

 $rac{1}{3}$ Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door to prevent children and pets to be closed inside of the appliance.
- The refrigerant circuit and the insulation materials of this appliance are ozone-friendly.
- The insulation foam contains flammable gas. Contact your municipal authority for information on how to discard the appliance correctly.
- Do not cause damage to the part of the cooling unit that is near the heat exchanger.

BOTTOM MOUNT REFRIGERATOR FEATURES

EBE4500B



Features may vary depending on model. Not all models will have features listed.

BOTTOM MOUNT REFRIGERATOR FEATURES

EBE5304





Refrigerator/freezer control panel

From this panel you can control the temperature of the refrigerator and freezer compartments as well as setting the quick freeze function or resetting the door alarm.

For further information on how to use this feature refer to the section "About the User Interface".

Features may vary depending on model. Not all models will have features listed.

ABOUT THE USER INTERFACE

Control - EBE4500B Model



DESCRIPTION	OPERATION / PRIMARY FUNCTION
Quick Freeze on/ off icon	Indicates the status of the Quick Freeze function.
Quick Freeze button	Use the Quick Freeze function when you add a large amount of food to the freezer compartment
	 Press the 'Quick Freeze' button. The Quick Freeze icon will flash indicating that the quick freeze is active and the compressor will run continuously for 90 minutes.
	After 90 minutes the freezer will automatically return to normal mode.
	 The Quick Freeze function can be cancelled anytime by pressing the button again.
Refrigerator / Freezer	 Indicates the temperature setting of the refrigerator compartment.
temperature scale icons	 Indicates the temperature setting of the freezer compartment.
Temperature adjust button	Touch any button to awaken control.
	 Touch the the 'Temp' button to decrease the selected compartment temperature. There are 8 temperature settings indicated by the illumination sequence on the display. Once the coldest temperature is reached the display will return to the warmest setting with the next press.
Refrigerator/Freezer	Indicates the selected zone.
indication icon Compartment select button	 Press to select the desired compartment The refrigerator / freezer indication icon will show which zone is selected.



IMPORTANT

The factory default settings for the refrigerator is "3°C" and "-18°C" for the freezer. If you want to change the temperature, remember to make only small adjustments and wait 24 hours to see if it's correct.

Control - EBE5304 Model



Button / Icon	Description	Primary Function
1	Compartment Selector button	Selects controllable compartment
2	Lock Icon	Indicates if the user interface is locked.
3	Compartment Icon	Indicates controllable compartment
4	ECO Icon	Indicates if the appliance is operating in its most energy efficient mode.
5	Digital display	Indicates temperature of selected compartment.
6	Decrease button	Decreases temperature of selected compartment.
7	Increase button	Increases temperature of selected compartment
8	Mode indicators (Boost, Fast Ice, Holiday)	Indicates appliance operation mode.
9	Display Lock button	Selects lock state of user interface.
10	Display Lock button	Selects operation mode of appliance.
11	Drinks Chill button	Selects drinks chill timer.
12	Door sensor	Senses door state (open or closed).

IMPORTANT

The factory default settings for the refrigerator is " $3^{\circ}C''$ and "- $18^{\circ}C''$ for the freezer. If you want to change the temperature, remember to make only small adjustments and wait 24 hours to see if it's correct

FUNCTIONS OF THE USER INTERFACE

Function	lcon	Operation (depending on model)
Setting the temperature		Press button 1 to select compartment on icon 3 Press buttons 6 or 7 to adjust temperature up or down.
Boost mode Increases the chill rate of the refrigerator for 90mins before returning to pre-set mode.	₩ Boost	Boost mode Increases the chill rate of the refrigerator for 90mins before returning to pre-set mode.
Fast Ice Decreases the freezer temperature to -23°C for 12 hours before returning to pre- set mode.	B Fast Ice	Press button 10 until the fast ice icon is illuminated. Fast ice mode can be deselected using button 10.
Holiday mode The refrigerator minimises defrosting to save energy when doors remain closed for an extended period.	Holiday	Press button 10 until the holiday icon is illuminated. When holiday mode is enabled the temperature settings will be set to 3°C for the refrigerator and -18°C for the freezer. Holiday mode can be deselected using button 10 or opening the fridge door. When holiday mode is disabled the temperature settings will revert to the previous settings. Holiday mode can be deselected using button 10 or opening the fridge door.
Display Lock Deactivates the user interface controls.	Ţ	To turn on/off press and hold button 9 for 3 seconds, the lock icon is illuminated when activated.
Drinks Chill Sets a timer for between 1 and 30 minutes as a reminder for when drinks are placed in the freezer for quick chill.	20	To turn on press button 11 and initial time of 20 mins will appear on digital display. To adjust time use buttons 6 and 7. Alarm will sound when time is finished. Press button 11 to turn off during or after countdown. The time taken to chill depends on the size of your bottle. Do not leave the bottle inside the freezer longer than the time needed for chilling.
Sabbath Mode Disables all lights and other electrical activity from occurring when the refrigerator door is opened.	56	To enable and disable Sabbath mode, press and hold buttons 6 and 9 for 3 seconds. When enabled/disabled an alarm will beep 4 times and "Sb" will appear on digital display when active.
Indicator	lcon	Operation
Eco Mode Enabled when appliance set to energy efficient operating temperatures.	ECO	ECO icon automatically appears when refrigerator is set between +3°C and +7°C and freezer is set between -14°C and -18°C

The factory default settings for the refrigerator is " 3° C" and "- 18° C" for the freezer. If you want to change the temperature, remember to make only small adjustments and wait 24 hours to see if it's correct.

INSTALLING YOUR NEW REFRIGERATOR

Unpacking

Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.

Important – check for any damages or marks. If you find the refrigerator is damaged or marked, you must report it within 7 days should you wish to claim for damage/ marks under the manufacturers warranty. This does not affect your statutory rights.

Clean your refrigerator thoroughly following the instructions in the "Cleaning" section and wipe off any dust that has accumulated during shipping.

Locating the refrigerator

Automatic aerosol systems (such as insect control) should not be located adjacent to the product as the spray may cause long term damage to the external plastics of the appliance.

Do not put the refrigerator in a location that is too cold or is unprotected, for example in a garage or on a veranda. The ambient temperature should be above 10°C.

Put the refrigerator in a dry place avoiding areas of high moisture or humidity.

Ensure the refrigerator is located on an even surface.

Adequate ventilation around your refrigerator

The diagram below shows the recommended airspace to allow for ventilation of your refrigerator.



If you have a cupboard above the refrigerator with a rear gap of less than 100 mm (Y), recommended clearance at the top of the refrigerator increases from 50mm to 90mm (X) minimum.

When positioned in a corner area, spacing of at least 350mm (300mm for multi-door models) on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

NOTE: Doors are designed to sit proud of cabinetry (not flush). The clearances shown above are the recommended minimum clearances.

The clearance at the rear must not exceed 75mm.

Installing your refrigerator

- Roll the refrigerator into place. The rollers are designed for forward or backward movement only. They are not astors. Moving the refrigerator sideways may damage your floor and the rollers. Before moving your refrigerator ensure height adjusting nut and the stability foot are fully wound up off the floor.
- Wind the large height adjusting nut under door hinge down until the refrigerator is tilted back by 10mm (see diagram).



 Wind the large height adjusting nut on the handle side down until the refrigerator is level and stable. If you have difficulty winding the nut or height adjusting foot down, have someone tilt the refrigerator back so you have better access.



stabilty foot wound up

 Check the alignment of the refrigerator to the surrounding cupboards to see if it is level. You can adjust the level as detailed in step 2 and 3.



INSTALLING YOUR NEW REFRIGERATOR

- If you find your refrigerator rocks from corner to corner, it means your floor is uneven. Find a piece of plastic or hardboard etc. and pack it firmly under the roller.
- 6. You may now need to fine-tune the installation by repeating steps 3, 4 and 5.
- 7. When you have the appliance in its final position, it needs to be stabilised. Wind the stability foot under the door hinge down to the floor until it just makes contact with the floor. Lift the front of the appliance to take the weZight off the stability foot, then turn it half a turn further to ensure firm contact with the floor. Wind the large height adjusting nut back up to ensure all the weight is now on the front stability foot.
- Repeat step 7 for the stability foot on the handle side. Whenever you need to move the appliance, be sure to wind the feet back up so that the appliance can roll freely and be sure to reset it when reinstalling.



- Plug your refrigerator straight into its own power point and never use a double adapter. If you need to roll the refrigerator to get to the plug, remember to raise the stability foot first.
- Before you put any food in your refrigerator, it's recommended you leave it on for 2 or 3 hours to check it is running properly.

Fitting the handles

The handles are supplied prepackaged inside your refrigerator and will require fitting.

Refer to the instructions provided in the pack.

Congratulations! You have successfully installed your new refrigerator.

USING YOUR REFRIGERATOR

Refrigerators work by transferring heat from the food inside to the outside air. This operation makes the back and sides of the refrigerator feel warm or even hot particularly at start-up and on warm days – this is normal.

Avoid placing food against the air vents in the refrigerator as it affects efficient circulation. If the door is opened frequently, a light frosting will occasionally occur on the freezer's interior. This is normal and will clear after a few days. If the freezer door is accidentally kept open, a heavy frost will coat the inside walls and should be removed.

Your new refrigerator uses a high-speed compressor, along with other energy-efficient components, which may make unusual sounds and be more noticeable at night and quieter times. These sounds simply indicate your refrigerator is working how it should. They include:

- Compressor running noises;
- Air movement noise from the small fan motor;
- · A gurgling sound, similar to water boiling;
- A popping noise, heard during automatic defrosting; and
- A clicking noise, prior to compressor start-up. Further details can be found in the Troubleshooting Guide.

For top mount refrigerators (where the freezer is on top of the fresh food compartment).

• Don't place food forward of the ribs on the freezer floor, as it will keep the door open.



For bottom mount refrigerators (where freezer is below the fresh food compartment):

 Ensure all freezer drawers and shelves are pushed back completely to prevent them from keeping the door open.



Insllation door handle

Position the top handle over handle mounts.

Step 1.

Tighten the set screw on the top pedestal in clockwise direction to secure the handle onto the door.

Step 2.

Tighten the set screw on the bottom pedestal in clockwise direction to secure the handle onto the door.

Position the bottom handle over handle mounts.

Step 3.

Tighten the set screw on the top pedestal in clockwise direction to secure the handle onto the door.

Step 4.

Tighten the set screw on the bottom pedestal in clockwise direction to secure the handle onto the door.



Removing protective film



WARNING

To protect your fridge door it is ESSENTIAL that the factory fitted protective film around the handle mounting points is not removed until after the handles are installed.

Step 2.

Secure the handle in place, by LIGHTLY tightening the screw using the LONG END of the provided Allen key. Please take care not to scratch the surface of the door with the end of Allen key.

Step 1.

Place and position handle on door.





Step 3.

Gently remove upper protective film A.



Step 4.

Lock the handle in place by FIRMLY tightening the screw using the SHORT END of the provided Allen key.



Step 5.

Gently remove lower protective film B. Repeat step 1-5 for all remaining handles.



REMOVING FEATURES

Removal of Crisper Drawer:

- 1. Empty food from the crisper. On some models it will be necessary to remove the bottle storage bins.
- 2. Remove the crisper by pulling forward, then up and forward again.
- For top mount models, remove the crisper shelf by lifting the catches on the left and right underside of the shelf and pulling the shelf forward.



NutriPlus™ (Anti-Oxidant Filter)

Installing Filter Cartridge

Your filter can be found in the crisper. To enjoy the full benefit of **Nutri**PlusTM, it is important to install it after turning on the refrigerator. For installation, please follow the following instruction.

1. Remove plastic wrap

2. Hook the filter to the back of the crisper bin.



Replacing Filter Cartridge

The filter is located at the back of the crisper. Hold the filter, move upwards to release from the hooks.



Glass shelves

To remove the shelves, gently pull them forward until the shelf comes clear of the shelf guides. To return the shelf, make sure there is nothing behind that may obstruct movement. Gently push the shelf, into the cabinet and back into position.



Freezer shelf

Remove the freezer shelf by lifting the catches on the right and left underside of the shelf to release the shelf then pull the shelf toward you.



Drawers fitted with telescopic slides

To remove the drawer for cleaning.

- 1. Empty food from the drawer.
- Remove the drawer by pulling it forward and lifting the front to unhook it from the slides. Once you have removed the drawer, ensure the slides are pushed back so they are fully closed.

Never close the door while the telescopic slides are extended. This may damage the slide and/or refrigerator or cause the slide to become disengaged from the refrigerator.

To replace the drawer:

- 1. Ensure the telescopic slides are pushed in all the way.
- 2. Slide the drawer into place over the slides and push the bin in until it stops.
- 3. Drop drawer into position.

Never close the door while the telescopic slides are extended. It may damage the slide and/or the refrigerator or cause the slide to become disengaged from the refrigerator.

Twist and Serve Ice

Mounting the twist & serve dispenser to the other side of the freezer.

Note : This is only possible on top mount models.

 Remove the ice bin and ice cube tray. If the ice tray assembly is frozen to the carriage, simply squeeze the tray and shelf together to break the ice.



- Before you remove the ice carriage, remember to disengage it from the glass shelf as it may result in damage to the assembly.
- 3. Remove the centre runner by disengaging it at the front of the shelf, and removing it from the rear.





Insert Into the slot at the rear of the shelf Then engage Into the front of the shelf

- 4. Refit the runner into the rear of the shelf on the right hand side and then engage the front
- 5. Fit the carriage by sliding it into the runners until the front if the carriage engages with the shelf.
- 6. Refit the ice tray and ice bin.

Fill the ice tube tray with potable water only.

LED lighting

Your appliance is fitted with long life LED lighting. In the unlikely event the LED lights should fail, then the LED lights should be serviced by the manufacturer.

Refer to the warranty page for contact details.

CLEANING YOUR REFRIGERATOR



BEFORE CLEANING: Turn the refrigerator off at the power point and unplug the cord to prevent any chance of electrocuting yourself.

Doors and exterior (white and silver):

You should only clean the doors with lukewarm soapy water and a soft cloth.

Stainless Steel

Your stainless steel refrigerator is manufactured from markresistant stainless steel. This stainless steel has a special advanced protective coating that eases the removal of marks such as fingerprints and water spots. To keep its appearance, clean it regularly with lukewarm soapy water and a soft cloth.



Never use stainless steel cleaners, abrasive pads or other cleaners that will scratch the surface. Damage to the appliance after delivery is not covered by your warranty.

Interior

Clean the inside of your refrigerator regularly with a soft cloth, unscented mild soap and lukewarm water. Thoroughly dry all surfaces and removable parts and avoid getting water on the controls. Replace removable parts, plug power cord in and switch the power on before returning the food.

Door seals

Always keep door seals clean by washing them with a mild detergent and warm water, followed by a thorough drying.

Sticky food and drink can cause seals to stick to the cabinet and tear when you open the door.



Never use hot water, solvents, commercial kitchen cleaners, aerosol cleaners, metal polishes, caustic or abrasive cleaners, or scourers to clean your refrigerator. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. Use only a soft cloth with an unscented mild soap and lukewarm water.

To clean a crisper or freezer bin with telescopic extension slides, simply wipe with a damp cloth and warm soapy water. Never immerse the cover in water, as this could affect the operation of the slide.

Switching off your refrigerator

If you switch off your refrigerator for an extended period, follow these steps to reduce the chances of mould:

- 1. Remove all food.
- 2. Remove the power plug from the power point.
- 3. Thoroughly clean and dry the Interior.
- Ensure that all the doors are wedged open slightly for air circulation.

FOOD STORAGE GUIDE

CATEGORY	PRODUCT	REFRIGERATOR	FREEZER	STORAGE TIPS
MEAT	Sausages and Mince	1-2 Days	2-3 Months	Keep cold meat at the back of the refrigerator where it is coldest.
	Chops and Steak	3-4 Days	4-6 Months	
	Cold Meats	3-5 Days	4-6 Months	Plastic can cause meat to sweat if stored in refrigerator for more than a day.
	Roasts	3-5 Days	12 Months	Roast can take up to 48 hours to defrost properly, transfer frozen roast to the refrigerator 2 days before use.
POULTRY	Chicken	1-2 Days	2 Months	If poultry takes on a smell or colour
	Roast Chicken	3-5 Days	12 Months	you are unsure about it is best to throw it out
	Eggs	6 Weeks	Not Suitable	
				Whole eggs are not suitable for freezing, slightly beaten eggs may be frozen for four months.
SEAFOOD	Whole fish and fillets	2-3 Days	2 Months	Store in an air tight container or foil.
	Lobster and crabs	1-2 Days	2 Months	
	Prawns	1-2 Days	2 Months	Never freeze prawns in salty water as this will dehydrate the flesh.
DAIRY	Milk	Until Expiry Date	Not Suitable	If dairy takes on a smell or colour and you are unsure about it, it is best to throw it out
	Yoghurt	7- 10 Days	Not Suitable	
	Hard Cheeses	2 Weeks - 2 Months	2 Months (Grated)	
	Soft Cheeses	1-2 Weeks	Not Suitable	Depending on the variety hard cheese can last from 2 weeks to 2 months.
	Butter	8 Weeks	12 Months	
FRUIT & VEGETABLES				Keep vegetables in the crisper and away from the air vents to avoid freezing.
				Don't wash fruit and vegetables before storing them in the refrigerator as this can make them susceptible to rotting.
LEFT OVERS	Homemade meals 3	3-4 Days	2-6 Months	Store in sealed container.
				Freeze meals in small portion sizes to limit wastage.



Please note, use this information as a guide only, actual storage times will vary depending on how you use your refrigerator, climatic conditions and the freshness of the food.

TROUBLESHOOTING

Appliance does not operate at desired temperature

In a modern frost free refrigerator / freezer, cold air is circulated around the various compartments through air vents using a high efficiency fan.

CONCERN	WHAT TO DO
Refrigerator is too warm	Ensure food is allowed to cool before placing inside the refrigerator.
	Ensure the appliance is set up as per instructions on page 11.
	Ensure that contents are not obstructing the cooling vents.
	Ensure the door is not held open or is being opened too frequently.
Freezer is too warm	Adjust temperature to a colder setting.
	Ensure food is allowed to cool before placing inside the freezer.
	Ensure the appliance is set up as per instructions on page 11.
	Ensure that contents are not obstructing the cooling vents.
	Ensure the door is not held open or is being opened too frequently.
Food is freezing in the refrigerator	Adjust temperature to a warmer setting.
	Ensure that fruit and vegetables are stored in the crisper. Items with a high water content should not be placed near the cooling vents.
Unable to change temperature settings	Refer to function guide in Controlling Your Refirgerator.
	Ensure that user interface is in "awake" mode before trying to adjust temperature settings.

Appliance noise

Your new refrigerator may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, like the floor, walls and cabinets, can make the sounds seem louder than they actually are. The following describes the kinds of sounds and what may be making them.

CONCERN	WHAT TO DO
Motor noise (compressor)	Nothing. This is normal as your new refrigerator uses a high-speed compressor which switches on and off during operation.
	Note that the compressor noise may seem louder at the start of the on cycle.
A clicking noise heard just before the compressor starts.	Nothing. This is normal as your new refrigerator has an automatic switching action of the temperature control, turning the compressor on and off.
Occasional gurgling, similar to water boiling.	Nothing. As each cycle ends, you may hear a gurgling sound due to the refrigerant flowing in your refrigerator system.
Airflow noise.	Nothing, this is normal as your new refrigerator uses high efficiency fans to circulate air.
Rattling and other noises.	Ensure that the cabinet is level and stable, refer to Installation Instructions on page 6.
	Check the surrounds of the appliance to ensure there is nothing touching or placed on top of the appliance.
	Ensure that contents of the appliance are not placed in such a way that they are vibrating (such as bottles).

Crisper Operation

CONCERN	WHAT TO DO
Excess moisture build up in crisper	Ensure that the crisper is not over packed.
It is normal for there to be some moisture and humidity in the crisper bin.	
Crisper bin can not be removed	If crisper bin interferes with the door bins, remove door bins before removing crisper.
	Position cabinet so that the door can be fully opened.
Freezing items in the crisper	Adjust temperature to a warmer setting.

Refrigerator operation

CONCERN	WHAT TO DO	
Appliance will not run	Ensure that the cord is plugged into a live power outlet and outlet is switched on.	
It is normal for the freezer fan not to operate during the automatic defrost cycle, or for a short time after the appliance is	Ensure that the household circuit breaker has not tripped or that the fuse has not blown.	
switched on.	The appliance maybe in defrost mode, check again in half an hour.	
Compressor motor seems to run too long	Ensure that the doors are not held open	
At normal room temperatures, expect your motor to run about 40% to 80% of the time.	Check that large amounts of warm food have not just been placed inside the appliance.	
Under warmer conditions, expect it to run even more often.	Note that the appliance will run more than normal just after you install it or when adjusting to temperature setting changes.	
The exterior of the appliance is warm or hot to touch	Ensure the appliance has the external clearances recommended in the section "Installing your new appliance".	
This is normal because the appliance transfers heat from the inside out through the outer panels and the divider between the doors.	The exterior of the cabinet will be much warmer on warmer days it may even feel hot to touch, as the appliance is working harder.	
User interface will not respond	Check that the user interface is in awake mode, refer to section "About the user interface".	
To ensure settings are not accidentally changed the user interface will go into sleep mode when not in use. Press any	Check that the user interface is not locked, refer to section "About the user interface".	
button to wake user interface	If the user interface is frozen turn the appliance off for five minutes for the memory to clear, then turn back on.	
	Check that the user interface is not in Sabbath Mode, refer to control instructions. (I&W models only).	
Alarms Sounding	Check that all doors are fully closed.	
	Ensure that the over temperature alarm is not being activated by hot food placed in the freezer.	
	Check if the drinks timer has ended, refer control instructions.	
	Check if the Filter Replacement alert is activated, refer control instructions. (I&W models only)	
Frost build up	Check that all doors are fully closed.	
	Ensure that the doors are not opened too often.	
	Ensure that the return air vents are not blocked with packaging.	
	Ensure the seals are clean and not obstructed.	
Odours	The interior may need cleaning, refer to cleaning guide.	
	Ensure that food is stored correctly as some food, containers and wrapping can produce odours.	
	Check appliance for old or unusual food.	
Lights not working	Ensure that the cord is plugged into a live power outlet and outlet is switched on.	
The LED lighting is designed to dim automatically if the door is left opened for more than 5 minutes and turn off	Ensure that the household circuit breaker has not tripped or that the fuse has not blown.	
completely if the door is open for more than 7 minutes. Closing the door will reset the timer.	Check that the user interface is not in Sabbath Mode, refer to control instructions.	
	Check the appliance features section to determine lighting configuration for your	
The LED lighting is also designed to turn on gradually.	model. Check that the doors are closed completely	

TROUBLESHOOTING

Door operation

CONCERN	WHAT TO DO		
Freezer door pops open.	This is normal and should re-close. This happens when the refrigerator door is closed too quickly. If the freezer door stays open, it indicates that the appliance needs to be tilted backwards a little further. Refer to section "Installing your new appliance".		
Self close not working.	Check if your appliance has self closing hinges as not all models do.		
	It indicates that the appliance needs to be tilted backwards a little further. Refer to section "Installing your new appliance".		
Door not sealing properly	Ensure there is nothing that is preventing the door from closing such as appliance contents or items placed near the appliance.		
	Ensure that the crisper/freezer bin is closed completely. Refit if required as referred to in the section "Using your refrigerator".		
	Ensure the appliance is set up as per recommendations.		
Door difficult to open and close	If the door is difficult to open just after you have closed it this is due to the pressure equalising, the door will open normally after a few minutes.		

If you still require service

If you have a problem, and the problem persists after you have made the checks mentioned, contact your nearest Electrolux approved Service Centre or the dealer you bought the refrigerator from. Be ready to quote the model number, the 9-digit PNC and 8-digit serial number, which is stated on the label inside the refrigerator compartment

NOISES

There are some sounds during normal running (compressor, refrigerant circulation).



صوت الضوضاء

تصدر بعض الأصوات أثناء التشغيل العادي (الضاغط، دورة التبريد).



استكشاف الأخطاء وإصلاحها

تشغيل الباب

ا لمشكلة	ماذا تفعل
باب الفريزر يطرقع عند الفتح.	هذا أمر طبيعي وسيُعاد إغلاقه. يحدث هذا عندما يتم إغلاق باب الثلاجة بسر عة كبيرة.
	إذا بقى باب الفريز ر مفتوحًا، فهذا يشير إلى أن الجهاز بحتاج إلى إمالة للخلف قليّال. ارجع إلى قسم "تركيب جهازك الجديد."
الإغلاق الذاتبي لا يعمل.	تحقق مما إذا كان الجهاز الخاص بك لديه مفصلات ذاتية الإغلاق لأن ليست كل الموديلات بها هذه المفصلات.
	يشير. إلى أن الجهاز يجب أن يميل إلى الخلف قلى ارجع إلى قسم "تركيب جهازك الجديد".
الأبواب لا تغلق بشكل صحيح	تأكد من عدم وجود أي شيء يمنع الباب من الإغلاق مثل محتويات الجهاز أو الأشياء الموضوعة بالقرب من الجهاز .
	تكد من أن درج الخضروات / الفريزر مغلق تمامًا. أعد تركيبه إذا كان مطلوبًا كما هو مشار إليه في قسم "استخدام الثلاجة".
	تأكد من إعداد الجهاز وفقًا للتوصيات.
صعوبة فتح الباب وإغلاقه	إذا كان من الصعب قتح الباب بعد إغلاقه، فإن هذا يرجع إلى تعادل الضغط ، سيتم فتح الباب بشكل طبيعي بعد بضع دقائق.

إذا كنت لا تزال في حاجة إلى الخدمة

إذا كانت لديك مشكلة، واستمرت المشكلة بعد قيامك باجراء عمليات الفحص المذكورة، اتصل بأقرب مركز صيانة معتمد من إلكترولوكس أو الموزع الذي اشتريت منه الثلاجة. كن مستعدًا للإشارة إلى رقم الطراز ورقم المنتج المكون من 9 أرقام والرقم التسلسلي المكون من 8 أرقام، الموجود على الملصق داخل حجيرة الثلاجة.

تشغيل الثلاجة

ناذا تقعل	المشكلة
أكد من أن السلك موصول بمأخذ التيار المباشر ومنفذ التشغيل يعمل.	الجهاز لا يعمل
اكد من أن قاطع الدائرة المنزلية لم يتعمَّر أو أن المصبور لم ينفجر .	من الطبيعي أن تتوقف مروحة الفريزر عن العمل أنثناء دورة الناح الاطراف الماتية على مرتب المرتب المراجع المراجع المراجع المراجع المراجع المراجع المراجع المراجع المراجع ا
سم من ما يسم المراد المربو م يعاد إو من المسليم م يعار . لجهاز ربما في وضع إزالة الجليد تحقق مرة أخرى في نصف ساعة.	
أكد من عدم وضع كميات كبيرة من الطعام الدافئ داخل الجهاز .	
لحظ أن الجهاز سيعمل كالمعتاد تمامًا بمجرد تثبيته أو عند ضبط التغييرات في درجة الحرارة.	
أكد من أن الجهاز يحتوي على الموافقات الخارجية الموصى بها في قمم "تثبيت جهازك الجديد".	
بيكون الجزء الخارجي من الخزانة أكثر دفئًا في الأيام الأكثر دفئًا، وقد تشعر بالحرارة أثناء لمسه، حيث يعمل الجهاز بجهد كبر.	هذا أمر طبيعي؛ لأن الجهاز ينقل الحرارة من الداخل إلى الخارج من خلال الألواح الخارجية والفاصل بين الأبواب.
حقق من أن واجهة المستخدم في وضع الاستيقاظ، راجع قسم "حول واجهة المستخدم".	
أكد من أن واجهة المستخدم غير مقفلة، راجع قسم "حول واجهة المستخدم".	لضمان عدم تغيير الإعدادات عن طريق الخطأ، ستنخل واجهة المستخذم في وضع السكون عندما لا تكون قيد الاستخدام. اضغط
ذا توقفت و اجهة المستخدم عن الممل، فقم بايقاف تشغيل الجهاز لمدة خمس دقائق حتى يتم مسح الذاكرة، ثم أعد تشغيله ردّ أخرى.	
حقق من أن واجهة المستخدم ليست في وضع السكون، راجع تعليمات التحكم. (طرازات I&W فقط).	i
أكد أن جميع الأبواب مغلقة بالكامل.	صوت تنبيهات
أكد من عدم تنشيط إنذار درجة الحرارة الزائدة عن طريق الطعام الساخن الموجود في الفريزر.	i
حقق مما إذا كان مؤقت المشروبات قد انتهى، راجع تعليمات التحكم.	
حقق من تنثيط تنبيه استبدال الفلتر ، راجع تعليمات التحكم. طراز ات 18W فقط	
أكد من أن جميع الأبواب مغلقة بالكامل.	
أكد من عدم فتح الأبواب كثيرًا.	
أكد من عدم سد فتحات الهواء بمواد التغليف.	
لكد من أن المدادات نظيفة وليست معاقة.	
د تحتاج الأجزاء الداخلية إلى التنظيف. راجع دليل التنظيف.	
أكد من تخزين الطعام بشكل صحيح؛ لأن بعض المواد الغذائية والحاويات ومواد التغليف يمكن أن تتسبب في روائح.	
بحث عن أطعمة قديمة أو غير معتادة في الجهاز.	
اكد من أن الملك موصول بمأخذ التيار العباشر ومنفذ التشغيل يعمل.	المصابيح لا تعمل
لكد من أن قاطع الدائرة المنزلية لم يتعبَّر أو أن المصهر لم ينفجر .	تم تصميم إضاءة LED، بحيث تخفت تلقائيًا في حالة ترك الباب مفتوحًا لأكثر من 5 دقائق وتتوقف تمامًا إذا ظل الباب مفتوحًا لأكثر من 7 دقائق. سيؤدي إغلاق الباب إلى إعادة ضبط الموقت.
حقق من أن واجهة المستخدم ليست في وضبع السكون، راجع تعليمات التحكم.	ن صُممت إضاءة LED أيضًا لتعمل تدريجيًا.
حقق من قسم ميزات الجهاز لتحديد تهيئة الإضاءة لطرازك. تأكد من أن الأبواب مغلقة بالكامل.	i

تنظيف الثلاجة

الجهاز لايعمل على درجة الحرارة المطلوبة

في الثلاجة / الفريزر الحديث الخالي من الثلوج، يتم تدوير الهواء البارد حول الأجزاء المختلفة من خلال فتحات التهوية باستخدام مروحة عالية الكفاءة.

كلة ماذا تفعل	ماذا تفعل
جة دافئة للغاية	تأكد من ترك الطعام يبرد قبل وضعه داخل الثلاجة.
تأكد من إعداد الجهاز وفقًا للتعليمات الواردة في الصفحة 11.	تأكد من إعداد الجهاز وفقًا للتعليمات الواردة في الصفحة 11.
تاكد من أن المحتويات لا تعبق فتحات التبريد.	تأكد من أن المحتويات لا تعيق فتحات التبريد.
تاكد من عدم فتح الباب أو فتحه بشكل متكرر.	تأكد من عدم فتح الباب أو فتحه بشكل متكرر.
زر دافئ للغاية	اضبط درجة الحرارة على إعداد أبرد.
تأكد من ترك الطعام يبرد قبل وضعه داخل الفريزر.	تأكد من ترك الطعام يبرد قبل وضعه داخل الفريزر.
تأكد من إعداد الجهاز وفقًا للتعليمات الواردة في الصفحة 11.	تأكد من إعداد الجهاز وفقًا للتعليمات الواردة في الصفحة 11.
تأكد من أن المحتويات لا تعيق فتحات التبريد.	تأكد من أن المحقويات لا تعيق فتحات التبريد.
تأكد من عدم فتح الباب أو فتحه بشكل متكرر.	تأكد من عدم فتح الباب أو فتحه بشكل متكرر.
ام يتجمد في الثلاجة الضبط درجة الحرارة على إعداد أدفا.	اضبط درجة الحرارة على إعداد أدفًا.
تأكد من تخزين الفاكهة والخضار في درج الخضروات. لا يجب وضع المواد ذات المحة التبريد.	تأكد من تغزين الفاكهة والخضار في درج الخضروات. لا يجب وضع المواد ذات المحتوى الماني العالي بالقرب من فتحات التبريد.
قادر على تغيير إعدادات درجة الحرارة ارجع إلى دليل الوظائف في قسم "التحكم في الثلاجة".	ارجع إلى دليل الوظائف في قسم "التحكم في الثلاجة".
تأكد من أن واجهة المستخدم في وضع "نشط" قبل محاولة ضبط إعدادات درجة الحرار	تأكد من أن واجهة المستخدم في وضع "نشط" قبل محاولة ضبط إعدادات درجة الحرارة.

ضوضاء من الجهاز

قد تقوم ثلاجتك الجديدة بإصدار أصوات لم تكن تصدر ها القديمة. نظرًا لأن الأصوات جديدة بالنسبة لله، فقد تشعر بالقلق منها, معظم الأصوات الجديدة طبيعية. يمكن أن تجعل الأسطح الصلبة، مثل الأرضية والجدران والخزائن، الأصوات تبدو أعلى من الواقع, وفيما يلى وصف لأنواع الأصوات وسببها المحتمل.

المشكلة	ماذا تقعل
ضوضاء المحرك (الضاغط)	لا شيء. هذا أمر طبيعي، حيث تستخدم الثلاجة الجديدة ضاغطًا عالى السرعة يتم تشغيله وإيقاف تشغيله أثناء التشغيل.
(الضاغط)	لاحظ أن ضجيج الضاغط قد يبدو أعلى في بداية الدورة.
يُسمح ضوضاء طقطقة قبل بدء تشغيل الضاغط مباشرة.	لا شيء. هذا أمر طبيعي، حيث إن ثلاجتك الجديدة تحتوي على مغتاح التحويل التلقاني للتحكم في درجة الحرارة، مما يؤدي إلى تشغيل الضناغط وإيقاف تشغيله.
صوت قرقرة من حين لأخر ، يشبه صوت غليان الماء.	لا شيء. مع انتهاء كل دورة، قد تسمع صوت غرغرة بسبب تدفق مادة التبريد في نظام التبريد الخاص بك.
ضوضاء تدفق الهواء.	لا شيء، هذا أمر طبيعي، حيث تستخدم الثلاجة الجديدة مراوح عالية الكفاءة لتدوير الهواء.
قعقعة وغيرها من الضوضاء.	تأكد من أن مستوى الخزانة مستقر ، راجع تعليمات التثبيت في الصفحة 6.
	تحقق من محيط الجهاز التأكد من عدم وجود شيء يلمس الجهاز أو موضوع فوق الجهاز .
	تأكد من عدم وضع محتويات الجهاز بطريقة تهتز (مثَّل الزجاجات).

تشغيل درج الخضروات

المشكلة ا	ماذا تفعل
نراكم رطوية إضافية في درج المُضروات من الطبيعي أن يكون هناك بعض الرطوبة في درج المُضروات.	تاكد من أن الدرج ليس معبأ أكثر من اللازم.
1	إذا تداخل درج الخضر وات مع سلات الياب، فأخرج سلات الياب قبل إز الة درج الخضر وات. ضع الخزانة بطريقة تسم بفتح الياب بالكامل.
الأشياء تتجمد في درج الخضروات	اضبط درجة الحرارة على إعداد أدفاً.

دليل تخزين الطعام

نصائح للتخزين	الفريزر	الثلاجة	المنتج	الفئة
أبق اللحم البارد في مؤخرة الثلاجة؛ لأن هذا أبرد مكان.	3-2 أشهر	2-1 يوم	نقانق ولحم مفروم	لحوم
يمكن أن يسبب البلاستيك تعرق اللحم إذا حُفظ في الثلاجة لأكثر من يوم.	6-4 أشهر	4-3 أيام	اللحم المقطع والستيك	
اللحم المشوي قد يستغرق حتى 48 ساعة ليفك تجميده بشكل سليم، انقل اللحم المشوي المجمد إلى	6-4 أشهر	5-3 أيام	اللحوم الباردة	
الثلاجة قبل يومينُ من الاستخدام.	12 شهرًا	5-3 أيام	الشواء	
إذا التقطت الدواجن رائحة أو لون أنت غير متأكد منه،	شهران	2-1 يوم	الدجاج	الدواجن
فالأفضل أن تتخلص منها.	12 شهرًا	5-3 أيام	الدجاج المثلوي	
البيض الكامل لا يصلح للتجميد، البيض المخفوق قلى ل يمكن تجميده لأربعة أشهر.	غير مناسب	6 أسابيع	البيض	
يُحفظ في حاوية تمنع دخول الهواء أو ورق قصدير.	شهران	3-2 أيام	السمك الكامل والفيليه	المأكولات البحرية
لا تجمد الروبيان أبدًا في ماء مالح؛ لأن هذا سوف	شهران	2-1 أيام	المحار وسرطان البحر	
يجفف اللحم.	شهران	2-1 أيام	الروبيان	
إذا التقطت منتجات الألبان رائحة أو لون أنت غير متأكد	غير مناسب	حتى تاريخ انتهاء الصلاحية	الحليب	منتجات الألبان
منه، فالأفضل أن تتخلص منها.	غير مناسب	10-7 أيام	الزبادي	
على حسب النوع، يمكن أن يبقى الجبن الصلب لفترة	شهران (مبشور)	أسبو عان - شهر ان	الجبن الصلب	
من أسبو عين إلى شهرين.	غير مناسب	2-1 أسبوع	الأجبان الطرية	
	12 شهرًا	8 أسابيع	الزبدة	
أبق المخضروات في درج المخضروات وبعيدًا عن فتحات الهواء لتجنب التجميد.	12-8 أشهر عند التجميد قم بالتقطيع بكميات صغيرة.		كل نوع فاكهة وخضروات له عمر ة طاز جًا ليومين مثل الفول والبعض يه	الفواكه والخضروات
لا تغسل الخضر وات والفواكه قبل تغزينها في الثلاجة؛ لأن هذا قد بجعلها عرضة للتعفن.				
تُحفظ في حاوية مغلقة.	6-2 أشهر	4-3 أيام	الوجبات المصنوعة في المنزل	بقايا الطعام
جمّد الوجبات بأحجام صغيرة لتقليل الإهدار .				

نه (

يرجى الملاحظة، استخدم هذه المعلومات كدليل فقط، وسوف تختلف أوقات التخزين الفعلية اعتمادًا على كيفية استخدامك للثلاجة، والظروف المناخية وطز اجة الطعام.

17 Arabic

تنظيف الثلاجة



قبل التنظيف: قم بايغاف تشغيل الثلاجة من نقطة الطاقة وافصل السلك لمنع أي فرصة التعرض لصدمة كهربانية.

الأبواب والهيكل الخارجي (الأبيض والفضي):

يجب تنظيف الأبواب فقط بماء فاتر مع صابون وقطعة قماش ناعمة.

الفولاذ المقاوم للصدأ:

تم تصنيع الثلامة من فولاذ مقاوم للصدأ ومقاوم للبصمات. ويحتوي هذا الفولاذ المقاوم الصدأ على طلاء واق متطور يساعد علي تسهيل إزالة العلامات مثل بصمات الأصابع ويقع الماء. للدفلط على مظهره، قم بتنظيفه باستخدام مياه فاترة وبعض الصابون وقطمة قدائل ناصة.



لا تستخدم منظفات الفولاذ المقاوم للصدأ أو الضمادات الكاشطة أو منظفات أخرى قد تخدش السطح. ولا يغطى الضمان التلف الذي يلحق بهذا الجهلز بعد توصيله.

الأجزاء الداخلية

نظف الأجزاء الداخلية للثلاجة بشكل منتظم باستخدام قطعة قماش ناعمة مع صابون معتدل عديم الرائحة وماء فاتر. قم بتجفيف جميع الأسطح والأجزاء القابلة للإزالة بشكل كامل وتجنب وصول الماء على عناصر التحكم. أعد تركيب الأجزاء القابلة للإزالة ووصل سلك الطاقة وقم بتشغيل الطاقة قبل إعادة الطعام.

موانع تسرب الباب

نظف دائمًا موانع تسرب الباب باستخدام منظف معتدل وماء دافئ ثم تجفيفها تمامًا.

يمكن أن تؤدي الأطعمة والمشروبات الملتصقة إلى التصاق موانع التسرب بالكابينة والتمزق عند فتح الباب.

🔬 تنبیه

لا تستخدم الماء الساخن أو المواد المذيبة أو منظفات المطبخ التجارية أو منظفات رذانية أو ملمعات معدنية أو منظفات كارية أو كاشطة أو البدرة المطهرة لتنظيف الثلاجة. تحتوي العديد من منتجات التنظيف والمنظفات المتاحة تجاريًا على مواد منيبة يمكن أن تتلف الثلاجة. استخدم فقط قطعة قماش ناعمة مع صابون معتدل عديم الرائحة وماء فاتر.

لتنظيف درج الخضروات أو الفريزر مع منزلقات التمديد المرنية، امسح ببساطة باستخدام قطعة قماش رطبة وماء مخلوط بالصابون. تجنب مطلقًا غمس الغطاء في الماء؛ نظرًا لأن ذلك قد يؤثر على عمل المنزلتي.

إيقاف تشغيل الثلاجة

إذا قمت بإيقاف تشغيل الثلاجة لفترة طويلة، فاتبع الخطوات التالية لتظليل فرص حدوث تعفن:

- أخرج جميع الأطعمة.
- انزع سلك الطاقة من نقطة الطاقة.
- ذظف الجزء الداخلي وجففه بالكامل.
- دمن فتح جميع الأبواب قليلاً لتدوير الهواء.

🔬 تنبیه

تجنب مطلقًا إغلاق الباب أثناء تمديد المنز لقات التليمكوبية. فقد يؤدي ذلك إلى إتلاف المنز لق و/أو الثلاجة أو يؤدي إلى فصل المنز لق عن الثلاجة.

الدرج الملتف لتقديم الثلج

تركيب درج التقديم الملتف على الجانب الأخر للمجمد.

ملاحظة: يتوفر ذلك فقط موديلات التركيب العلوي.

 ثم باز الة علبة الثلج ودرج مكعبات الثلج.
 إذا تم تجميد مجموعة درج الثلج مع الحاضن، فاضنغط على الدرج والرف معا لكمر الثلج.



- قبل إز الة حاضن الثلج، تذكر فصله عن الرف الزجاجي، حيث قد يؤدي ذلك إلى تلف المجموعة.
- قم بإزالة المجرى المركزي عن طريق فصله في الجزء الأمامي للرف وإزالته من الجانب الخلفي.



أدخله في الفتحة الموجودة في الجزء الخلفي ثم شبكه في مقدمة الرف من الرف

- الموضوع: أعدتركيب المجرى على الجانب الخلفي للرف على الجانب الأيمن ثم قم بتركيب الجزء الأمامي.
- قم بتركيب الحاضن عن طريق تمريره في المجاري حتى يتم تركيب الجزء الأمامي للحاضن في الرف.
 - 6. قم بإعادة تركيب درج الثلج وعلبة الثلج.



املاً درج مكعبات الثلج بماء صالح للشرب فقط.

منبيه منبيه سصباح LED

الجهاز مزود بمصباح LED مدى الحياة. وفي حالة تعطل مصابيح LED و هذا غير محتمل, عندنذ يجب صيانة مصابيح LED بواسطة جهة التصنيع.

راجع صفحة الضمان لمعرفة تفاصيل الاتصال.

إزالة الخواص

إزالة درج الخضروات:

- قم بتفريغ الطعام من درج الخضروات. في بعض الموديلات يجب إز الة سلات تخزين القوارير .
 - 2 قم بإزالة درج الخضروات عن طريق سحبه للأمام ثم لأعلى وسحبه مرة أخرى إلى الأمام.
- في موديلات التركيب العلوي، قم بإزالة رف الخضروات عن طريق رفع المزاليج على يسار ويمين الجانب السفلي للرف وسحب الرف للأمام.



NutriPlus™

(فلتر مضاد للأكسدة)

تثبيت خرطوشة الفلتر

يمكن العثور على الفلتر في درج الخضروات. للاستمتاع بكل مزايا ■ NutriPlus يجب تثبيته بعد تشغيل الثلاجة. للتركيب، اتبع التعليمات التالية.

- قم بإزالة الأغطية البلاستيكية
- ركب الفلتر في ظهر سلة الخضروات.



استبدال خرطوشة الفلتر

الفلتر موجود في ظهر درج الخضروات. أمسك الفلتر وحرك لأعلى لإخراجه من الخطافات.



الأرفف الزجاجية



لإز الله الأرفف، اسحبها برفق للأمام حتى يصبح الرف خاليًا من موجهات الرف. لإعلاء الرف، تلكد من عدم وجود شيء في الخلف قد يُعيق الحركة. ادفع الرف برفق في الكابينة وحتى يستقر في مكانه.

أخرج رف الفرزير عن طريق رفع المزلاجات على يمين ويسار الجانب السفلي للرف لتحرير الرف ثم اسحب الرف ناحيتك.

الأدراج مثبتة بمزالج تلسكوبية

لإزالة الدرج للتنظيف.

- قم بتفريغ الطعام من الدرج.
- قم بإزالة الدرج عن طريق سحبه للأمام ورفع الجزء الأمامي لفصله عن المنزلقات. وبمجرد إزالة الدرج، تأكد من دفع المنزلقات للخلف بحيث يتم إغلاقها بالكامل.

🔬 تحذير

تجنب مطلقًا إغلاق الباب أثناء تمديد المنزلقات التليسكوبية. فقد يؤدي ذلك إلى إتلاف المنزلق و/أو الثلاجة أو يؤدي إلى فصل المنزلق عن الثلاجة.

لاستبدال الدرج:

- مع دفع المنزلق المرئي إلى نهايته بالكامل.
- أدخل الدرج في مكانه على المنزلقات وادفع العلبة حتى تتوقف.
 - أسقط الدرج في مكانه.

15 Arabic

الخطوة 3. أزل الطبقة الواقية العلوية أ برفق.



الخطوة 5.

أزل الطبقة الواقية السفلية ب برفق. كرر الخطوة 5-1 مع جميع المقابض المتبقية.



الخطوة 4.

ثبت المقبض في مكانه عن طريق إحكام ربط البرغي باستخدام الطرف القصير لمفتاح ألن (المفتاح المسدس) المرفق.



تركيب مقابض الأبواب

اضبط المقبض العلوي فوق حوامل المقبض.

الخطوة 1.

أحكم ربط بر غي التثبيت على القاعدة العلوية باتجاه عقارب الساعة لتثبيت المقبض على الباب.

الخطوة 2.

أحكم ربط برغي التثبيت الموجود على القاعدة السفلية باتجاه عقارب الساعة لتثبيت المقبض على الباب.

اضبط المقبض السفلى فوق حوامل المقبض.

الخطوة 3.

أحكم ربط برغي التثبيت على القاعدة العلوية باتجاه عقارب الساعة لتثبيت المقبض على الباب.

الخطوة 4.

أحكم ربط برغي التثبيت الموجود على القاعدة السفلية باتجاه عقارب الساعة لتثبيت المقبض على الباب.



إزالة الطبقة الواقية



من الضروري لحماية باب الثلاجة عدم إز الة الطبقة الواقية المثبتة في المصنع حول نقاط تثبيت المقبض إلا بعد تركيب المقابض.

الخطوة 1.

ضع المقبض على الباب واضبطه.



الخطوة 2.

ثبت المقبض فى مكانه عن طريق ربط البر غى برفق باستخدام الطرف الطويل لمفتاح ألن (المفتاح المسدس) المرفق. يُرجى توخ الحذر لحم خدش سطح الباب بطرف مفتاح ألن (المفتاح المسدس).



تركيب الثلاجة الجديدة

- 5. إذا وجدت الثلاجة تتارجح من زاوية إلى أخرى، فهذا يعني أن الأرضية غير مستوية. يمكنك العثور على قطعة بلاستيكية أو ورق صلب ووضعها بثبات أسفل البكرة.
 - .6 وقد تحتاج الآن إلى تعديل التركيب من خلال تكرار الخطوات 3 و 4 و 5.
- 7. عند وضع الجهاز فى مكانه النهائى، تحتاج إلى تثبيته. قم بثنى قدم الثبات تحت مغصلة الباب لأسفل حتى تلامس الأرض. ارفع الجزء الأمامي للجهاز لتنغيف الوزن عن قدم الثبات، ثم بتدويرها نصف دورة لضمان التلامس الثابت مع الأرض. ثم بثني صامولة ضبط الارتفاع الكبيرة لأعلى للتألك من أن الوزن الأن محمل على قاعدة الثباب الأمامية.
- 8. كرر الخطوة 7 لقاعدة القبات على جانب المقبض. عند الحاجة إلى تحريك الجهاز، تأكد من لف القاعدة ومن ثم يمكن لف الجهاز بحرية وتأكد من إعادة ضبطه عند إعادة التركيب.



- 9. قم بتوصيل الثلاجة مباشرة بنقطة الطاقة الخاصة بها ولا تستخدم مهاينًا مزدوجًا. إذا كنت تحتاج إلى لف الثلاجة للحصول على القابس، فتذكر رفع قدم الثبات أول.
 - 10. قبل وضع أي طعام في الثلاجة، يوصى بتركها قيد التشغيل لمدة ساعتين أو 3 ساعات للتأكد من أنها تعمل بشكل مناسب.

تركيب المقابض

المقابض معبأة مسبقًا داخل الثلاجة وسوف تحتاج إلى تركيب.

راجع الإرشادات الموجودة في العبوة.

تهانينا! لقد قمت بتركيب ثلاجتك الجديدة بشكل ناجح.

استخدام الثلاجة

تعمل الثلاجات من خلال نقل الحرار ة الموجودة في الطعام الداخلي إلى الهواء الخارجي. تؤدي هذه العملية إلى تدفنة أو حتة تسخين الجزء الخلفي وجوانب الثلاجة خصوصًا عند بدء التشغيل - وهذا أمر طبيعي.

تجنب وضع الطعام في مقابل فتحات التهوية الموجودة في الثلاجة، حيث يؤثر ذلك على كلماء التدوير, يحدث تكون لصقيم طفيف في بعض الأحيان على الجزء الداخلي للمجد إذا تم فتح الباب بشكل متكرر . وهذا أمر طبيعي وسوف يختفي بعد عدة أيام. في حالة ترك باب الفريز ر مفترخا بمحض الصدفة، قد يغطي الثلج الكثيف الجدران الداخلية ومن ثم يجب إز التها.

تستخدم ثلاجتك الجديدة ضاغط على السر عة ومكونات أخرى موفرة للطاقة، والتي قد تصدر أصوانًا غير معتادة وقد تلاحظها أكثر في الليل وفي أوقات الهدوء. وتثبير هذه الأصوات ببساطة إلى أن ثلاجتك تعمل على النحو المنوط بها. وتثمل هذه الأصوات:

- ضوضاء تشغيل الضاغط؛
- ضوضاء حركة الهواء من موتور المروحة الصغير؛
 - صوت قرقرة، يشبه صوت غليان الماء؛
 - سماع ضوضاء تفرقع أثناء إذابة الثلج التلقائية؛ و
- ضوضاء طقطقة قبل بدء تشغيل الضاغط. يمكن العثور على المزيد من
 - التفاصيل في دليل استكشاف الأعطال وإصلاحها.

•• **1**

لثلاجات التركيب العلوي (الذي يكون فيها الفريزر فوق حجيرة الطعام الطازج).

 لا تضع الطعام أمام الأضلاع الموجودة في أرضية الفريزر؛ لأنه سيمنع انغلاق الباب.



بالنسبة لثلاجات التركيب السفلي (التي يكون فيها الفريزر تحت حجيرة الطعام الطازج):

 تأكد من أن أبواب الفريزر والأرفف مدفوعة للخلف تمامًا لمنعها من إبقاء الباب مفتوحًا.

11 Arabic

تركيب الثلاجة الجديدة

فك التغايف



معظم مواد التغليف قابلة لإعادة التنوير ـ لذا، يُرجى التخلص من هذه المواد عبر مستودع إعادة التدوير المحلي لديك أو بوضعها في حاويات تجميع مناسبة.

مهم - تأكد من عدم وجود أي تلفيات أو علامات. إذا اكتشفت أن الثلاجة تالفة أو معلمة، فيجب أن تبلغ عن ذلك خلال 7 أيام إذا أر دت المطالبة بإصلاح التلفيات / العلامات بموجب ضمان جهات التصنيم . و هذا لا يؤثر على حقوقك القاتونية.

مَّم بتنظيف الثلاجة بالكامل باتباع التعليمات الواردة في قسم "التنظيف" وامسح أي غبار تراكم أثناء الشحن.

تحديد مكان الثلاجة

\\\ تتىيە

لا ينبغي وضع أنظمة الأيروسول الأوتوماتيكية (مثّل مكافحة الحشرات) بجوار المنتج؛ لأن الرذاذ قد يسبب أضرارًا طويلة المدى على البلاستيك الخارجي للجهاز .

لا تضع الثلاجة في مكان بارد جدًا أو غير محمي، على سبيل المثال في المرآب أو في الشرفة. يجب أن تكون درجة الحرارة المحيطة أعلى من 10 درجات مئوية.

ضع الثلاجة في مكان جاف وتجنب المناطق عالية الرطوبة أو الرطوبة النسبية.

تأكد من وجود الثلاجة على سطح متساوٍ.

التهوية الكافية حول الثلاجة

يوضح الشكل أدناه المساحة الموصى بها للسماح بتهوية الثلاجة الخاصة بك.



إذا كانت لديك خزانة فوق الثلاجة مع فجوة خلفية أقل من 100 ملم (Y)، تزداد المساحة الموصى بها في أعلى الثلاجة من 50 ملم إلى 90 ملم (X) كحد أدنى.

في حالة وضعه في زاوية، سيزدي ترك مساحة 350 ملم (300 ملم للطرازات متعدة الأبواب) على جانب المفصلة إلى فتح الأبواب بشكل كافب بحيث يمكن إزالة العلب والأرفف.

ملحوظة: تم تصميم الأبواب، بحيث تستقر بشكل مناسب على الكابينة (دون اندفاع). تُحد الخلوص المرضحة أعلاه هي الحد الأدنى للخلوص الموصى بها.

ويجب ألا يزيد الخلوص الموجود في الجزء الخلفي عن 75 ملم.

تركيب الثلاجة

- مم بلف الثلاجة في مكانها. تم تصميم البكرات للحركة للأمام والخلف فقط إنبها ليست مثل عجلات الكرسي. تحريك الثلاجة بالجانب قد يتلف الأرضية والبكرات. قبل تحريك الثلاجة، تأكد أن صامولة ضبط الارتفاع وقاعدة التثنيت معدة بالكامل على الأرضية.
- ثم بثني صامولة ضبط الارتفاع الكبيرة تحت مفصلة الباب إلى أن تميل الثلاجة للخلف بمقدار 10 ملم (انظر الشكل).



3. ثم بثني صامولة ضبط الارتفاع الكبيرة على جانب المتّبض إلى أن تصبح الثلاجة مستوية ومستقرة. إذا وجدت صعوية في ثني الصامولة أو قاحة ضبط الارتفاع، فاطلب من أحد ما أن يقوم بإمالة الثلاجة للخلف حتى تتمكن من الوصول بشكل أقضل.



 حقق من محاذاة الثلاجة مع الخز انات المحيطة لمعرفة ما إذا كانت مستوية. يمكنك تعديل المستوى كما هو موضح بالتفصيل في الخطوتين 2 و 3.



وظانف واجهة المستخدم

الرمز التن	النشغيل (حسب الموديل)	الوظيفة
	اضغط على الزر 1 لتحديد الحجيرة على الرمز 3 اضغط على الأزرار 6 أو 7 لضبط درجة الحرارة لأعلى أو لأسفل.	ضبط درجة الحرارة
ا 🛠 ا بز	وضع التعزيز يزيد معدل التبريد في الثلاجة لمدة 90 دقيقة قبل العودة إلى وضع الضبط المسيق.	وضع التعزيز يزيد معدل النبريد في الثلاجة لمدة 90 دقيقة قبل العودة إلى وضع الضبط المسبق.
	اضغط على الزر 10 حتى يضىء رمز التجميد السريع. يمكن إلغاء تحديد وضع التجميد السريع باستخدام الزر 10.	التجميد السريع يقلل من درجة حرارة المجمد إلى -23 درجة مئوية لمدة 12 ساعة قبل العودة إلى وضع الضبط المسبق.
Holiday	اضعفط على الزر 10 حتى يضىء رمز العطلة. عند تمكين وضع العطلة، سيتم ضبط إعدادات درجة الحرارة على 3 درجات منوية للثلاجة و-18 درجة منوية للمجمد. يمكن إلغاء تحديد وضع العطلة باستخدام زر 10 أو فتح باب الثلاجة. عند تعطيل وضع العطلة، ستعود إعدادات درجة الحرارة إلى الإعدادات السابقة. يمكن إلغاء تحديد وضع العطلة باستخدام زر 10 أو فتح باب الثلاجة.	وضع العطلة تقلل الثلاجة من إذابة الثلج لتوفير الطاقة عندما تظل الأبواب مغلقة لفترة طويلة.
	للتشغيل/إيقاف التشغيل، اضغط مع الاستمرار على زر 9 لمدة 3 ثوانٍ، سيضيء رمز القفل عند التنشيط.	قفل الشاشة يعطل عناصر تحكم واجهة المستخدم.
	للتشغيل، اضغط على زر 11 وسيظهر الوقت المبدئي وقدره 20 دقيقة على شاشة رقمية. لضبط الوقت استخدم الزرين 6 و7. سيصدر صوت تنبيه عند انتهاء الوقت. اضغط على الزر 11 لإيقاف تشغيله أثناء العد التنازلي أو بعده. يعتمد الوقت المستغرق في التبريد على حجم الزجاجة. لا تترك الزجاجة داخل المجمد مدة أطول من الوقت اللازم للتبريد.	تبريد المشروبات يضبط المؤقت لمدة تتراوح بين دقيقة و30 دقيقة للتنكير بالمشروبات الموضوعة في المجمد لتبريدها سريغا.
	لتمكين وضع الراحة أو تعطيله، اضغط مع الاستمرار على الزرين 6 و9 لمدة 3 ثوان. عند تمكينه/تعطيله، سيصدر صوت تنبيه 4 مرات وسيظهر الرمز "Sb" على الشاشة الرقمية عندما تكون نشطة.	وضع الراحة يعطل جميع المصابيح والأنشطة الكهربانية الأخرى عند فتح باب الثلاجة.
الرمز الة	التشغيل	المؤشر
ECO تتر	يظهر رمز ECO تلقائيًا عند ضبط الثلاجة على درجة حرارة تتراوح بين +3 درجة مئوية و+7 درجة مئوية والمجمد على درجة تتراوح بين -14 درجة مئوية و-18 درجة مئوية.	الوضع الاقتصادي (ECO) يتم تمكينه عندما يتم ضبط الجهاز على درجات حرارة تشغيل موفرة للطاقة.

 \mathbf{i}

مهم إعدادات المصنع الافتر اضية لدرجات الحرارة هي "3 درجات مئوية" للثلاجة و "-18 درجة مئوية" للمجمد. إذا كنت ترغب في تغيير درجة الحرارة فتذكر أن تقوم بتعديل بسيط وتنتظر لمدة 24 ساعة لمعرفة مدى ملاءمتها.

9 Arabic

7 Arabic



وصف الوظيفة الأساسية	الزر/ ال الرمز
زر محدد الحجيرة	5 1
رمز القفل يشير إلى ما إذا كانت واجهة المستخدم مغلقة.	2
رمز الحجيرة التي يمكن التحكم فيها.	3
رمز الوضع الاقتصادي يشير بل ما إذا كان الجهاز يعمل في الوضع الأكثر كفاءة في استخدام الطاقة.	. 4
نىائنة رقمية تشير الى درجة حرارة الحجيرة المختارة.	5
زر الخفض	6
زر الرفع	7
مؤشرات الأوضاع (تعزيز، تجميد سريع، عطلة)	
زر قفل الثنائمة يحدد حالة قفل واجهة المستخدم.	9
زر قفل الشاشة يحدد وضع تشغيل الجهاز .	i 10
زر تبريد المشروبات يحدد مؤقت تبريد المشروبات.	11
مستشعر الباب يستشعر حالة الباب (مفتوحًا أو مغلقًا).	12

1

مهم

إعدادات المصنع الافتر اضية للثلاجة هي "3 درجات مئوية" و "-18 درجة مئوية" للغريزر. إذا أردت تغيير الحرارة، فقم بعمل تعديلات صغيرة فقط، ثم انتظر لمدة 24 ساعة لمعرفة ما إذا كانت صحيحة أم لا.

نبذة عن واجهة المستخدم

الطراز - التحكم EBE4500B



التشغيل / الوظائف الأساسية	الوصف
 تشير إلى حالة وظيفة التجميد السريع. 	أيقونة تشغيل/إيقاف التجميد السريع
استخدم وظيفة التجميد السريع عند وضع كمية كبيرة من الطعام في حجيرة الفريزر.	زر التجميد السريع
 اضغط زر "التجميد السريع". سوف تومض أيقونة "التجميد السريع" لتشير إلى أن التجميد السريع نشط وأن الضاغط سوف يعمل باستمر ار لمدة 90 دقيقة. 	
 بعد 90 دقيقة، سوف يعود الفريزر تلقائيًا إلى الوضع العادي. 	
 يمكن إلغاء خاصية التجميد السريع في أي وقت بالضغط مرة أخرى على الزر. 	
 يشير إلى إعداد حرارة حجيرة الثلاجة. 	
 يشير إلى إعداد حرارة حجيرة الفريزر. 	الثلاجة / الفريزر
 المس أي زر لتنشيط عنصر التحكم. 	زر ضبط درجة الحرارة
 المس زر "Temp" (الحرارة) لتقليل حرارة الحجيرة المختارة. توجد 8 إعدادات حرارة يشار إليها بتسلسل الإضاءة على الشاشة. عند الوصول إلى أبرد درجة حرارة ستعود الشاشة إلى أدفأ إعداد مع الضغطة التالية. 	
 يشير إلى المنطقة المختارة. 	الثلاجة/الفريزر
 اضغط لاختيار الحجيرة المرغوبة. 	أيقونة الإشارة
 سوف تُظهر أيقونة إشارة الثلاجة/الفريزر أي منطقة تم تحديدها. 	زر اختيار الحجيرة



إعدادات المصنع الافتر اضية للثلاجة هي "3 درجات مئوية" و "-18 درجة مئوية" للفريزر. إذا أردت تغيير الحرارة، فقم بعمل تعديلات صغيرة فقط، ثم انتظر لمدة 24 ساعة لمعرفة ما إذا كانت صحيحة أم لا.

7 Arabic

خصائص الثلاجة ذات التركيب السفلي

EBE5304B





لوحة التحكم في الثلاجة/الفريزر

من هذه اللوحة، يمكنك التحكم في درجة حرارة الثلاجة وحجيرات الثلاجة، بالإضافة إلى ضبط وظيفة التجميد السريع أو إعادة ضبط إنذار الباب.

لمزيد من المعلومات حول كيفية استخدام هذه الميزة، راجع قسم "معلومات عن واجهة المستخدم".

قد تختلف الطرازات تبعًا للطراز. لا تحتوى الطرازات كافة على الخصائص المسردة.

خصائص الثلاجة ذات التركيب السفلي

EBE4500B





لوحة التحكم في الثلاجة/الفريزر

من هذه اللوحة، يمكنك التحكم في درجة حرارة الثلاجة وحجيرات الثلاجة، بالإضافة إلى ضبط وظيفة التجميد السريع أو إعادة ضبط إنذار الباب. لمزيد من المعلومات حول كيفية استخدام هذه الميزة، راجع قسم "معلومات عن واجهة المستخدم".

2.3 الاستخدام

تحذير! هناك احتمال التعرض للإصابة، أو الحروق، أو الصدمة الكهربائية أو نشوب حريق.

- لا تغير مواصفات هذا الجهاز.
- لا تضع الأجهزة الكهربائية (مثل صانع الآيس كريم) في الجهاز إلا إذا ذكرت الشركة المُصنعة أن ذلك ممكن.
- كن حذرًا لكي لا تتلف دائرة التبريد الكهربائية. يحتوي الجهاز على الأيزوبيوتان (R600a)، وهو غاز طبيعي على مستوى عالٍ من التوافق البيئي. هذا الغاز قابل للاشتعال.
 - إذا وقع تلف في دائرة الثلاجة، تأكد أنه لا توجد ألسنة لهب ومصادر للاشتعال في الغرفة. قم بتهوية الغرفة.
 - لا تدع الأشياء الساخنة تلامس الأجزاء البلاستيكية من الجهاز.
 - تجنب وضع المشروبات الغازية في حجيرة الفريزر.
 سيسبب هذا الأمر ضغطًا على عبوة المشروب.
 - لا تخزن أي غاز أو سائل سريع الاشتعال في الجهاز.
- لا تضع منتجات أو عناصر قابلة للاشتعال أو مبللة بمواد قابلة للاشتعال في الجهاز أو بالقرب منه أو فوقه.
 - لا تلمس الضاغط أو المكثف. فهذه الأجزاء ساخنة.
- لا تقم بإزالة أو لمس أشياء في حجيرة التجميد إذا كانت يداك مبالتين أو رطبتين.
 - لا تجمد الأطعمة مرة أخرى بعد ذوبان الثلج عنها.
 - اتبع تعليمات التخزين المدونة على عبوات الأغذية المجمدة.

2.4 الإضاءة الداخلية

 نوع المصباح المستخدم في هذا الجهاز غير مناسب لإضاءة الغرف المنزلية.

2.5 العناية والتنظيف

تحذير! خطر التعرض للإصابة أو إتلاف الجهاز.

- أوقف تشغيل الجهاز وافصل قابس التيار الرئيسي عن مقبس التيار الرئيسي قبل إجراء الصيانة.
- يحتوي هذا الجهاز على مواد هيدروكربونية في وحدة التبريد. يجب أن يقوم بالصيانة وإعادة شحن الوحدة فني مؤهل فقط.
 - افحص تصريف الجهاز فحصًا منتظمًا ونظفه إذا لزم الأمر. في حالة انسداد التصريف، فسوف تتجمع مياه التلج الذائب أسفل الجهاز.

2.6 التخلص من الجهاز تحذير! هناك خطر التعرض للإصابة أو الاختناق.

- افصل الجهاز عن مصدر الكهرباء الرئيسي.
 - اقطع كبل التيار الرئيسي وتخلص منه.
- قم بإز الة الباب لمنع احتباس الأطفال أو الحيوانات الأليفة في الجهاز.
- دائرة التبريد الكهربائية والمواد العازلة الموجودة في هذا الجهاز غير مضرة بطبقة الأوزون.
- تحتوي الرغوة العازلة على غاز قابل للاشتعال. اتصل بالسلطة المحلية التي تتبعينها للحصول على معلومات حول كيفية التخلص من الجهاز بطريقة صحيحة.
- لا تتلف جزء وحدة التبريد القريب من المبادل الحراري.

- www.electrolux.com 4
- في حالة تلف سلك الإمداد الكهربي، يجب استبداله من قِبل الشركة المُصنعة أو وكيل الصيانة التابع لها أو غيره من الأشخاص المؤهلين لتفادي التعرض للخطر.
 إذا كان الجهاز مزودًا بصانع ثلج أو بموزع ماء، املأهما بماء الشرب فقط.
 إذا احتاج الجهاز إلى التوصيل بمصدر الماء، صله بمصدر ماء شرب فقط.
 يجب أن يكون ضغط الماء الداخل للجهاز (الحد الأقصى والأدنى) بين 1 بار
 - (0,1 ميجا باسكال) و 10 بار (1 ميجا باسكال)

2. تعليمات السلامة

2.1 المتركيب تحذير! يحظر تركيب هذا الجهاز بواسطة شخص غير مؤهل.

- أزل جميع الأغلفة.
- لا تقم بتركيب جهاز تالف أو استخدامه.
- التزم بتعليمات التركيب الواردة مع الجهاز.
- توخَّ دائمًا الحذر عند نقل الجهاز ؛ نظرًا لأنه ثقيل الوزن.
 احرص دائمًا على ارتداء قفاز ات السلامة.
 - تأكد أن الهواء يستطيع أن يتدفق حول الجهاز.
 - انتظر لمدة 4 ساعات على الأقل قبل توصيل الجهاز بمصدر الطاقة. يسمح هذا للزيت بالتدفق والعودة مرة أخرى إلى الضاغط.
 - يحظر تركيب الجهاز بالقرب من مصادر الإشعاع أو البوتاجازات أو الفرن أو بوتاجاز السطح.
 - يجب وضع الجزء الخلفي للجهاز مقابل الحائط.
 - لا تركب الجهاز في مكان يتعرض فيه لأشعة الشمس المباشرة.
- لا تركب هذا الجهاز في أماكن عالية الرطوبة أو البرودة، مثل ملحقات الأبنية أو مواقف السيارات أو أقبية النبيذ.
- عند تحريك الجهاز، ارفعه من الحافة الأمامية لتجنب خدش الأرضية.

2.2 التوصيل الكهربي تحذير! هناك احتمال لنشوب حريق أو التعرض لصدمة كهربية.

- يجب أن يتم توصيل الجهاز بالأرضي.
- يجب إجراء جميع التوصيلات الكهربائية بواسطة فني
 كهربائي مؤهل.
- تحقق من توافق البيانات الكهربانية الموجودة على لوحة القياس مع مصدر الطاقة المحلي. وإلا، فاتصل بفني كهربائي.
 - احرص دائمًا على استخدام مقبس مقاوم للصدمات الكهربائية على أن يكون مثبتًا بصورة صحيحة.
 - تجنب استخدام محولات وكبلات تمديد متعددة المنافذ.
- احرص على عدم إتلاف المكونات الكهربائية (مثل قابس التيار الرئيسي، وكبل التيار الرئيسي، والضاغط). اتصل بالخدمة أو بالفني لاستبدال المكونات الكهربائية.
- يجب أن يبقى كبل النيار الرئيسي على مستوى منخفض عن قابس النيار الرئيسي.
- قم بتوصيل قابس التيار الرئيسي بمقبس التيار الرئيسي
 بعد الانتهاء من التركيب فقط. تأكد من إمكانية الوصول
 إلى قابس التيار الرئيسي بعد التركيب.
- تجنب سحب كابل التيار الرئيسي لفصل الجهاز. قم دائمًا بسحب قابس التيار الرئيسي.

1. 🚺 معلومات الأمان

قبل تركيب الجهاز واستخدامه، يرجى قراءة التعليمات الواردة بعناية. الشركة المصنعة غير مسؤولة في حالة التركيب والاستخدام غير الصحيح، والذي قد يؤدي إلى حدوث إصابات وتلف الجهاز. احتفظ دائمًا بالتعليمات الواردة مع الجهاز للرجوع إليها لاحقًا.

1.1 سلامة الأطفال والأشخاص الضعفاء

- يمكن استخدام هذا الجهاز بمعرفة الأطفال بدءًا من سن 8 سنوات فما فوق والأشخاص الذين يعانون من ضعف القدرات البدنية أو الحسية أو العقلية أو عدم الخبرة أو المعرفة شريطة توفير الإشراف والتوجيه لهم فيما يتعلق باستخدام الجهاز بطريقة آمنة وفهم المخاطر ذات الصلة,
 - لا تسمح للأطفال بالعبث في الجهاز .
 - احتفظ بجميع مواد التغليف بعيدًا عن متناول الأطفال.
- يجب ألا يتم التنظيف أو إجراء الصيانة التي يقوم بها المستخدم بواسطة الأطفال دون رقابة.

1.2 السلامة العامة

 يقتصر استخدام هذا الجهاز على الاستعمال المنزلي وما شابه ذلك:
 البيوت الزراعية؛ مناطق مطبخ الموظفين في المحلات والمكاتب وبيئات العمل الأخرى
 بواسطة العملاء في الفنادق والنُزل وفنادق المبيت والإفطار، والبيئات

- احرص على عدم انسداد فتحات التهوية في غطاء الجهاز أو البنية المضمنة وعدم وجود عوائق أمامها.
- لا تستخدم أجهزة ميكانيكية أو وسائل أخرى لتسريع عملية إذابة الثلج بخلاف تلك الموصى بها بواسطة الشركة المصنعة. لا تقم بإتلاف دائرة الجهاز الكهربائية.
 - لا تقم بإتلاف دائرة الجهاز الكهربائية.
 - لا تستخدم رشاش المياه أو البخار لتنظيف الجهاز.
- لا تستخدم أجهزة كهربائية داخل حجيرات تخزين الطعام بالجهاز ، إلا إذا كانت من النوع الذي أوصت به الشركة المُصنعة. لا تستخدم رشاش المياه أو البخار لتنظيف الجهاز.
- نظف الجهاز بقطعة قماش ناعمة مبللة. استخدم المنظفات المتعادلة فقط. لا تستخدم منتجات كاشطة، أو أقمشة التنظيف الكاشطة أو المذيبات أو أشياء معدنية.
 - لا تخزن مواد متفجرة مثل علب الهواء المضغوط ذات مادة دافعة قابلة للاشتعال في هذا الجهاز.

المحتويات

علومات الأمان	· .1
اليمات السلامة	.2
صف الجهاز	, .3
تحكم في درجة الحرارة	.4
كيب الثلاجة الجديدة	· .5
ستخدام الثلاجة	.6
نظيف طعام الثلاجة	7. ک
خزين الطعام	.8
ستكشاف الأخطاء وإصلاحها	.9
سوت الضوضاء	10

نحن نفكر فيك

نشكرك على شراء أحد أجهزة Electrolux. لقد اخترت منتجًا يتميز بعقود من الخبرات الاحترافية والابتكار. جهاز رائع وأنيق، صممناه ونحن نضع احتياجاتك في ذهننا. عند استخدامك له، يمكنك الشعور بالأمان لمعرفتك بأنك ستحصل على نتائج رائعة كل مرة.

مرحبا بكم في Electrolux.

تفضل بزيارة موقعنا الإلكتروني:



احصل على نصائح الاستخدام والكتيبات الترويجية ومستكشف المشكلات ومعلومات الخدمة من خلال: www.electrolux.com



) سجل المنتج للحصول على خدمة أفضل عبر : www.electrolux.com/productregistration



بادر بشراء الملحقات والمواد الاستهلاكية وقطع الغيار الأصلية اجهازك: www.electrolux.com/shop

رعاية وخدمة العملاء

نوصي باستخدام قطع الغيار الأصلية. عند الاتصال بالخدمة، تأكد من توفر المعلومات التالية لديك: توجد هذه البيانات على لوحة القياس. الموديل،CNP ، الرقم المسلسل

- 🚶 معلومات تحذيرية / تنبيهية متعلقة بالسلامة.
 - i) تعليمات عامة ونصائح
 - 😮 معلومات بيئية.
 - عرضة للتغيير دون إخطار.

EBE4500B EBE5304B

AR أجهزة التبريد

دليل المستخدم

