



ECT9744H


EN Cooker hood
ภาษาไทย เครื่องดูดควัน

User Manual
คู่มือการใช้งาน

2
14



ECT9744H-A-20230705

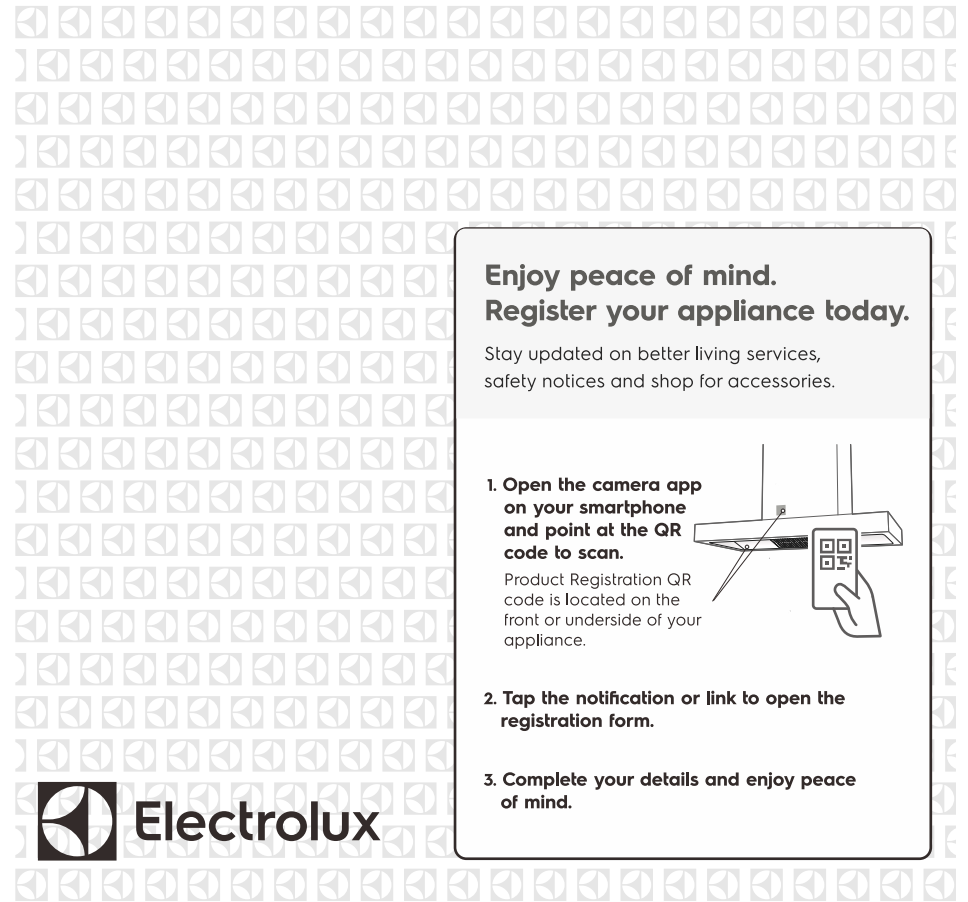


**Enjoy peace of mind.
Register your appliance today.**

Stay updated on better living services,
safety notices and shop for accessories.

1. Open the camera app
on your smartphone
and point at the QR
code to scan.

Product Registration QR
code is located on the
front or underside of your
appliance.

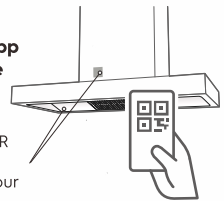

2. Tap the notification or link to open the
registration form.

3. Complete your details and enjoy peace
of mind.



WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux.

BEFORE USING YOUR APPLIANCE

Before you use the rangehood, we recommend that you read through the whole user manual which provides the description of the rangehood and its functions. To avoid the risks that are always present when you use an electrical appliance, it is important that the rangehood is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

For future reference, please store this booklet in a safe place.

CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments

BEFORE YOU CALL

Please ensure you read the instruction manual fully before you call for service, or a full service fee could be applicable.

RECORD MODEL AND SERIAL NUMBER HERE:

Model: _____

Serial NO: _____

CONTENTS

- 3 Safety information
- 4 Product description
- 5 Dimensions
- 6 Rangehood installation
- 9 Using the rangehood
- 10 Maintenance and cleaning
- 11 Troubleshooting
- 12 Consumer Care Center

LEGEND

⚠ WARNING!

This symbol indicates information concerning your personal safety

⚠ CAUTIONS!

This symbol indicates information on how to avoid damaging the rangehood.

i IMPORTANT!

This symbol indicates tips and information about use of the rangehood.

🌿 ENVIRONMENT!

This symbol indicates tips and information about economical and ecological use of the rangehood.

RoHS Compliant.

If at any time in future you need to dispose of this product please do Not dispose of this product with household waste, please send this product to collecting points where available

This product is RoHS compliant.

SAFETY INFORMATION

This manual explains the proper use of your new Electrolux canopy rangehood. Please read this manual carefully before using the product. This manual should be kept in a safe place for handy reference.

This rangehood is a domestic appliance which has been manufactured and tested to comply with International Standard IEC 60335.2.31.

Read the following carefully to avoid damage or injury.

⊘ This symbol indicates never to do this

☑ This symbol indicates always do this

⚠ WARNING!

Follow these instructions carefully to avoid an electric shock or fire.

- | | |
|---|---|
| ☑ | Young children should be supervised to ensure they do not play with the rangehood. |
| ⊘ | This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. |
| ☑ | Ensure the rangehood is switched off before carrying out maintenance, to avoid any possibility of electric shock. |
| ⊘ | Never carry out flambe cooking under the rangehood. |
| ⊘ | This rangehood is not recommended for barbecues. |
| ⊘ | This rangehood cannot be installed for external use. |
| ☑ | Grease filters must be removed every two weeks (maximum) for cleaning to reduce the risk of fire. |
| ⊘ | The exhaust from the rangehood must not be discharged into any heating flue, which may carry combustion products from other sources.(Fig.1) |
| ⊘ | The exhaust air must not be discharged into a wall cavity, unless the cavity is designed for the purpose. |
| ☑ | There must be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels. |
| ☑ | Always cover lit gas burners with pots or pans when rangehood is in use. |
| ☑ | Always switch off gas burners before you remove pots or pans. |
| ⊘ | Do not leave lit gas burners exposed due to the risk of fire.(Fig.2) |

Electrical connection

Check that the mains voltage matches with the voltage on the data plate inside the rangehood. Check that the installation complies with standards of local building, gas and electrical authorities. Before connecting to the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the rangehood. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.

Safety warnings For the installer

When installing the rangehood, make sure you adhere to the minimum and maximum distances from the rangehood base to the hob surface (as per table on page 6).

Exhaust flue installation: The following rules must be strictly followed to obtain optimal air extraction.

- Keep exhaust flue short and straight
- Do not reduce the size or restrict exhaust flue.
- Keep bends in the exhaust flue to a minimum.
- When using flexible flue always install duct with helix pulled taut to minimise pressure loss.
- Failure to observe these basic instructions will drastically reduce the performance and increase the noise levels of the range hood.

Exhaust air must not be discharged into a wall cavity, unless the cavity is designed for the purpose. The exhaust from the cooker hood must not be discharged into any heating flue, which may carry combustion products from other sources.

NOTE: Some installations may require the telescopic exhaust cover to be cut to length. Cut with sharp tin snips or a fine-tooth hack saw blade, taking care not to distort or dent the exhaust cover.

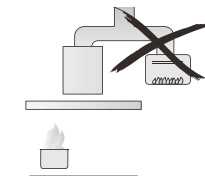


Fig. 1


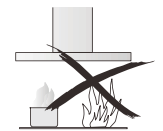


Fig. 2

PRODUCT DESCRIPTION

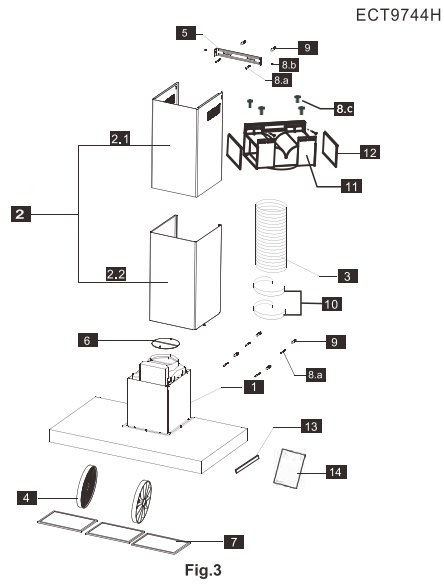


COMPONENTS

Ref	Q t y	Product Components
1	1pc	Hood body, complete with: controls, lights, blower
2	1set	Flue Cover sections
2.1	1pc	Inner Flue Cover
2.2	1pc	Outer Flue Cover
3	1pc	Aluminum Exhaust Transition Duct
4	2pcs	Carbon filter
5	1pc	Flue Cover Mounting Bracket
6	1set	Damper (flaps)
7	3 pcs	Aluminium mesh filter
8. a	8pcs	Mounting Screws (ST4.8 X 40 MM)
8. b	2pcs	Flue cover Mounting Bracket Screws (M 4 X 6 MM)
8. c	4pcs	Recirculating T-pieces screws
9	8pcs	Drywall Anchors
10	2pcs	Duct Fixing tape
11	1set	Recirculating T-pieces
12	2pcs	T-pieces sponge
13	1pc	Sponge strip
14	1pc	Instruction manual

DIMENSIONS

ECT9744H

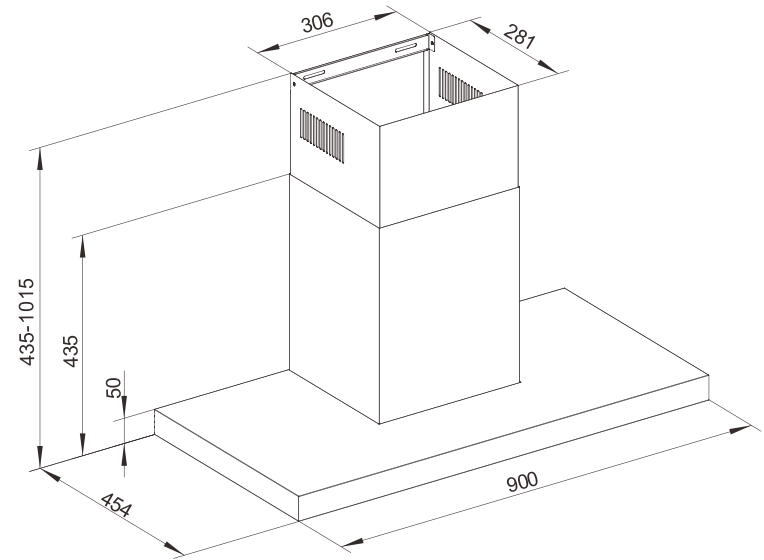

RANGEHOOD INSTALLATION



WARNING!

Refer to "Safety information" chapter

BEFORE INSTALLATION

Before the installation of the appliance, record the information below from the rating plate. The rating plate is on the bottom of the appliance casing.

Model _____

PNC _____

Serial number _____

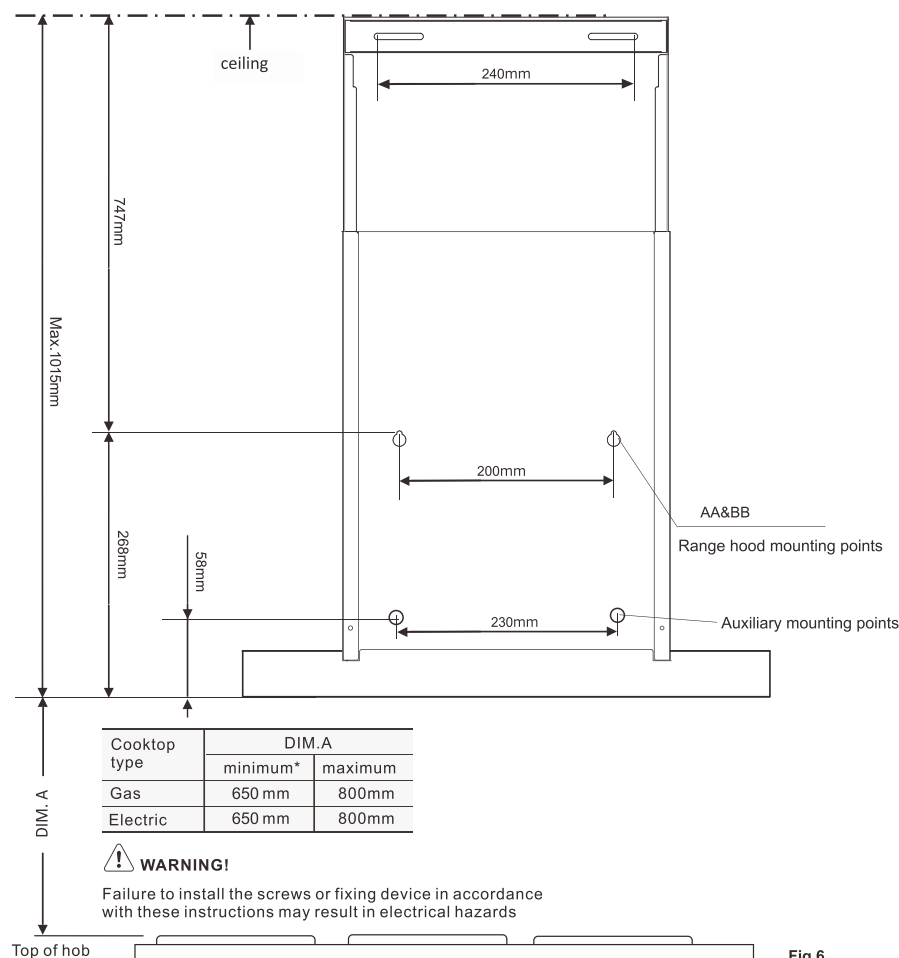


Fig. 6

1. Using a spirit level mark a vertical centre line on the wall where the cooker hood is to be positioned, and a horizontal line at the cooker hood base position (refer diagram below).

NOTE: The height of the underside of the hood body must be a minimum of 650mm to a maximum height of 800mm*

* If the instructions of the hob specify a greater distance than the minimum above, then that shall be the minimum height for installation.

2. Mark the location for flue cover wall mounting brackets and cooker hood mounting points above the hood base as the reference point (Fig.6).

RANGEHOOD INSTALLATION

3. Install the flue cover mounting bracket with screws to the wall as marked (Fig.7). Please mounted recirculating T pieces together with flue cover bracket if recirculating mode is used. (Fig.12)

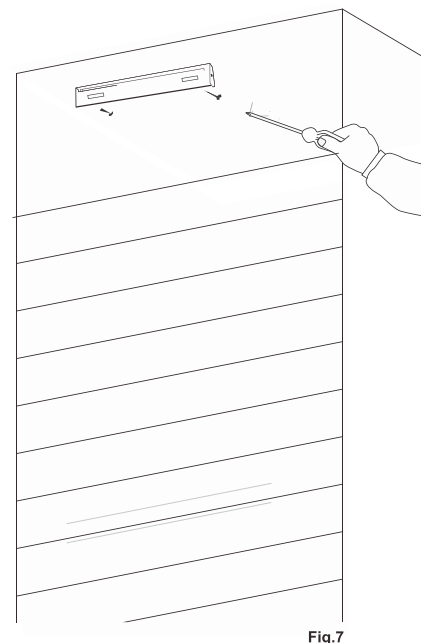


Fig. 7

4. Using a 9mm drill bit, enlarge the pilot holes and insert the plastic wall anchors (BB) into the wall along the line as reference point. Insert screws and leave a 5mm (Fig.8) gap between the wall and the back of the screw head to slide the range hood into place. Ensure the screws and anchors (AA and BB) are parallel with the horizontal line.

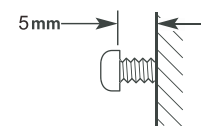


Fig. 8

5. Hook the hood body (A) onto the screws (AA and BB) mounted onto the wall and securely tighten the screws (AA and BB) to secure the hood body (A) on the wall. Peel off the backing and stick sponge strip to the front side of the fan housing as shown (Fig.9)

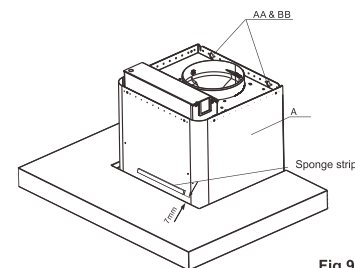


Fig. 9

6. Install two additional hood body mounting screws (AA) into the auxiliary mounting holes to secure the hood body (A) in place.

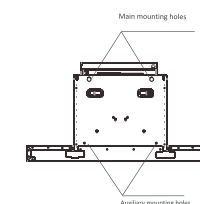


Fig. 10

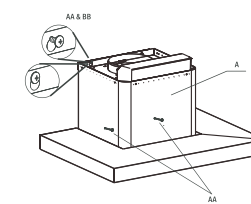


Fig. 11

Depending on the preferred installation/ducting mode follow step 7a or 7b below.

7a. Recirculating mode (Fig.12)

According to the flue cover dimension, Fix the T-piece by 4 screws supplied. adhesive two sponge to the outlet of T-piece as shown (Fig.12).

Using the centre line, secure the recirculating T-piece and Chimney mounting bracket to the wall. Install flexible pipe between T-piece and flue transition duct. Use fixing ring to secure flexible pipe to T-Piece and transition duct (Fig.14).

NOTE: When installed in recirculating mode, it is recommended to use a carbon filter to prevent odours being emitted back into the room.

7b. Ducted mode (Fig.13)

Fit the flexible flue to the duct transition (Fig.13). Use fixing tape to secure flexible pipe to the duct transition.

NOTE: For ducted mode, we recommend extending flue pipe through the roof to external "roof cap" to vent exhaust externally. We do not recommend venting into ceiling cavity.

RANGEHOOD INSTALLATION

9. Installation of telescopic flue covers

Separate the flue covers section. Carefully reassemble the upper and lower flue covers sections by sliding the inner into the outer flue cover. Carefully lower the assembled upper and lower flue covers onto the top of cooker hood body. Fix upper flue cover to the mounting bracket with screws supplied. Ensure that the upper section is extended (Fig.15).

NOTE: Carefully remove the plastic protective coating, if present, from the flue covers. Pay particular attention when removing protective plastic coating from decals.

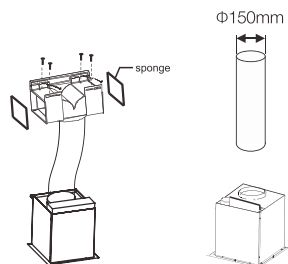


Fig.12

Fig.13

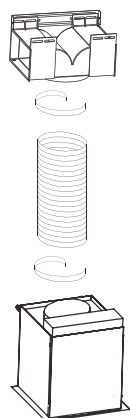


Fig.14

8. Electrical connection

- Electrical wiring must be done by a qualified person(s) in accordance with all applicable codes and standards. Turn off electrical power at service entrance before wiring.
- If the power cord is damaged, it must be replaced by manufacturer, its agent or similarly qualified persons in order to avoid hazard.
- Do not use the plug and an extension cord other than the ones initially supplied with the hoods.
- The earthing of this hood is compulsory. Do not remove the ground prong of the plug.



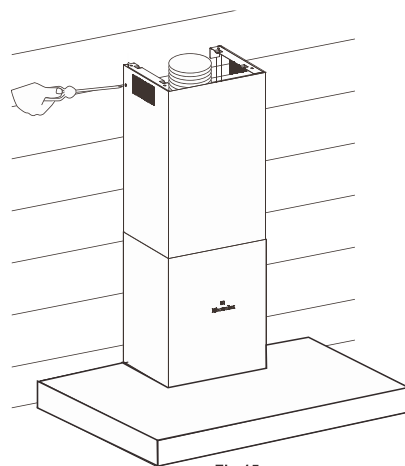


Fig.15

Your Electrolux rangehood is now ready to use

USING THE RANGEHOOD

ECT9744H

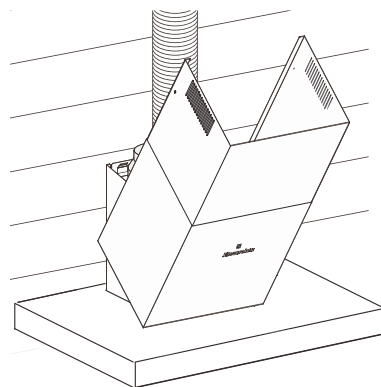

Standby mode

When connecting the rangehood to the power supply for the first time or after power is returned after power outage all symbols on the control panel will light up and a "beep" will sound once. Following this, the control panel goes to standby mode and the rangehood will be ready for use.

Turning on the fan

Pressing the ① will turn on the hood at fan speed 2 or the last used fan speed (except for Power Boost speed) with the light on.

Turning off the fan

Pressing the ① will turn off the hood at any fan speed.

Fan – select speed to suit cooking conditions

- ① – Fan on/off
- 1 (☞) – While heating up food, cooking with covered pots, light frying, light boiling
- 2 (☞) – While cooking with covered pots on multiple cooking zones or burners, frying, boiling
- 3 (☞) – While boiling, frying big quantities of food without a lid, cooking on multiple cooking zones or burners, grilling, intensive frying, wok cooking
- ☞ – Light


Hob2Hood ☞

This is an advanced automatic function which connects the hob to a special hood. Both the hob and the hood have an infra-red signal communicator. Speed of the fan is defined automatically on basis of mode setting and temperature of the hottest cookware on the hob. You can also operate the fan from the hob manually.

Hints and Tips for Hob2Hood function

When you operate the hob with Hob2Hood function:

- Protect the hood panel from direct sunlight.
 - Do not spot halogen light on the hood panel.
 - Do not cover the hob panel.
 - Do not interrupt the signal between the hob and the hood (for example with a hand or a cookware handle).
- When Hob2Hood is triggered by hob, the ① and ☞ indicators will be on. This indicates that the Hob2Hood is active.

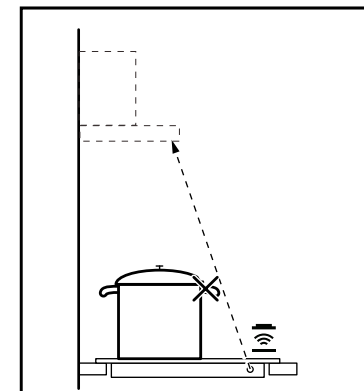

i IMPORTANT!

It may happen that other remote controlled appliances may block the signal. To avoid it do not operate the remote of the appliance and the hob at the same time.

Rangehoods with the Hob2Hood function
To find the full range of rangehoods which work with this function refer to our consumer website. The rangehoods that work with this function must have the symbol ☞ or ☞.

MAINTENANCE AND CLEANING

⚠ CAUTION!

- Before maintenance or cleaning is carried out, the rangehood should be disconnected from the main power supply. Ensure that the rangehood is switched off at the wall socket and the plug removed if fitted.
- External surface are susceptible to scratches and abrasions, so please follow the cleaning instructions to ensure the best possible result is achieved without damage.
- These instructions must be followed to avoid a fire risk.

Stainless steel surface


Clean stainless steel surface using non-abrasive cleaning products that specifically for use on stainless steel. To ensure best results also use an even pressure and follow the grain of the stainless steel. Use of a soft cloth reduces the risk of scratching. If the cloth is wet ensure that a dry soft cloth is used to wipe down the surface again reducing the risk of any surface rust appearing.

Control panel surface

The control panel can be cleaned using warm soapy water. Ensure the cloth is well wrung before cleaning. Use a dry soft cloth to remove any excess moisture left after cleaning.

Removing the metal grease filters

Push the grease filter towards the left side of the unit and then pull it down.

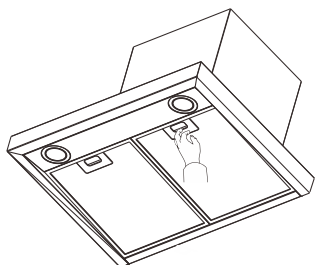

Metal grease filter

The purpose of the grease filters is to absorb grease particles which form during cooking and it must always be used, either in the external extraction or internal re-circulation function.

Attention: the metal grease filters must be removed and washed, either by hand or in the dishwasher, every two weeks

Hand washing

The mesh filters can be cleaned by hand in warm soapy water. Soak in warm water and some washing up liquid. For stubborn grease stains use a soft nylon brush to help remove these stains. After cleaning ensure that the filters are completely dry before refitting.

Dishwasher

Place grease filters in the dishwasher. Select the most powerful washing program and highest temperature, at least 65. Refit the grease filters when they are dry. When washing the metal grease filter in the dishwasher a slight discolouration of the filter can be occur, this does not have any impact on its performance.


Changing the lamps

Lamps are long life LED lamps and should not require service. If there is an issue with lamp please contact the Service Center, Service contact details shown on page 12.

Carbon filter

- The Carbon filter should only be used if you want to use the cooker hood in the recirculating mode.
- This filter cannot be cleaned or re-used and as general rule, the activated Carbon filter should be changed one every 3 months.

To fit the filter, lock it until stop click is heard
Pulling out each latch, tilt the filter down and remove

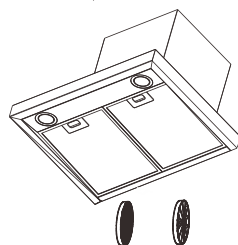

- Always specify the cooker hood model code number and serial number when ordering replacement filters. This information is shown on the registration plate located on the inside of this unit.
- Replacement charcoal filters can be ordered from your local Spare Parts centre, contact details are shown on page 12.

TROUBLESHOOTING

Problem	Remedy
The cooker hood will not start	Check that the hood is connected to an electrical supply Check that a fan speed has been selected
The Rangehood is not working	Check that the fan speed is set high enough for the task The grease filters are clean The kitchen is adequately vented to allow the entry of fresh air If set up for recirculation, check that the carbon filter is still effective If set up for extraction, check that the duct and outlets are not blocked Do not operate cooktop without pots/pans Do not flambe under cooktop
The rangehood has switched off during operation	The safety cut-out device has been tripped-turn off the hob and wait for the device to reset .instructions the motor will cut out frequently which will damage the hood.

If you have completed all the above checks and are still experiencing difficulty, please contact your local Electrolux Service Centre.

Note: This product is fitted with a safety cutout device.

- If the rangehood is installed too close to the cooker top, flambe cooking, operating the cooktop without cooking utensils and blocked filters may activate the safety cutout device. If the hood stops during operation, correct the faults and allow time for the safety cutout device to reset. Then the rangehood will function correctly.

- Do not operate cooktop without pots/pans
- Do not flambe under cooktop

CONSUMER CARE CENTER

Thailand Consumer Care Tel : (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkapi, Huai Khwang, Bangkok 10310 Office Tel : (+66 2) 7259100 Office Fax : (+66 2) 7259299 Email : customercaethai@electrolux.com	Singapore Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713 Email : customer-care.sin@electrolux.com
Indonesia Hotline service: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl.Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email:customercaresid@electrolux.com SMS & WA : 0812.8088.8863	Philippines Consumer Care Center Toll Free: 1-800-10-845-CARE(2273) Consumer Care Hotline:(+63 2)845-CARE(2273) Electrolux Philippines,Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West,Taguig, Philippines 1634 Trunkline:+63 2 737-4757 Website:www.electrolux.com.ph Email:wecare@electrolux.com
Vietnam Consumer Care Center Toll Free 1800-58-88-99 Tel: (+84 28) 39105465 Electrolux Vietnam Ltd. Unit 1&2, 10F Sofic Tower, #10 Mai Chi Tho Street, Thu Thiem Ward, Thu Duc City, Ho Chi Minh City, Vietnam	Malaysia Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 5999 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Taman Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax : (+60 3) 5524 2521 Email : malaysia.customercaresid@electrolux.com
HONG KONG SERVICE HOTLINE: (+852) 3193 9888 DCH ELECTRICAL APPLIANCES SERVICE CENTRE 4/F, DCH BUILDING, 20 KAI CHEUNG ROAD, KOWLOON BAY, HONG KONG EMAIL: customercare@dch.com.hk WEBSITE: www.electrolux.com.hk	

www.electrolux.com

The Thoughtful Design Innovator.

Do you remember the last time you opened a gift that made you say, “Oh! How did you know? That’s exactly what I wanted!” That’s the kind of feeling that we at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design’s sake, but design for the user’s sake. For us, thoughtful design means making appliances easier to use and tasks more enjoyable to perform, freeing our customers to experience the ultimate 21st century luxury: ease of mind. Our aim is to make this ease of mind more available to more people in more parts of their everyday lives, all over the world.

The “Thinking of you” promise from Electrolux goes beyond meeting the needs of today’s consumers. It also means we’re committed to making appliances safe for the environment—now and for future generations.

Electrolux. Thinking of you.

Share more of our thinking at
www.electrolux.com

ด้วยความห่วงใยผู้ใช้งานทุกท่าน

ขอขอบคุณที่เลือกซื้อเครื่องใช้ไฟฟ้าจากอีเล็คทริกส์
ท่านได้เลือกผลิตภัณฑ์ที่มาพร้อมกันประสบการณ์ระดับมืออาชีพ
และนวัตกรรมที่ส่งมอบมาเป็นเวลาหลายทศวรรษ ผลิตภัณฑ์ของ
เราได้ได้รับการออกแบบให้มีความสร้างสรรค์และทันสมัย โดยคำนึง
ถึงท่านเป็นหลัก เพื่อให้เมื่อใดก็ตามที่ท่านใช้งานผลิตภัณฑ์
ท่านมั่นใจได้ว่าท่านจะได้ผลลัพธ์ที่ยอดเยี่ยมทุกครั้ง
ขอต้อนรับสู่อีเล็คทริกส์

ก่อนการใช้งานผลิตภัณฑ์ของท่าน

ก่อนที่ท่านจะเริ่มใช้งานเครื่องดูดควัน เราขอแนะนำให้ท่านอ่านคู่มือ
การใช้งานทั้งหมดอย่างละเอียด ซึ่งจะมีการอธิบายส่วนต่างๆ
และการใช้งานต่างๆ ของเครื่องดูดควัน เพื่อหลีกเลี่ยงความเสี่ยง
การใช้งานผิดวิธี และอันตรายต่างๆ ที่อาจเกิดขึ้นได้เสมอจากการ
ใช้งานเครื่องใช้ไฟฟ้า การติดตั้งเครื่องดูดควันอย่างถูกต้อง
และการอ่านคำแนะนำด้านความปลอดภัยโดยละเอียดก่อนเริ่มใช้งาน
จึงมีความสำคัญเป็นอย่างมาก

กรุณาเก็บคู่มือฉบับนี้ไว้ในสถานที่ปลอดภัยเพื่อใช้อ้างอิงในอนาคต

เงื่อนไขในการใช้งาน

- ผลิตภัณฑ์มีวัตถุประสงค์เพื่อมาใช้ในการครัวเรือนและการใช้งาน
ที่มีลักษณะใกล้เคียงกัน เช่น
- พื้นที่ห้องครัวสำหรับพนักงานในร้านค้า สำนักงาน และพื้นที่
ทำงานอื่นๆ
 - บ้านไร่
 - โดยเชกไฟฟ้าในโรงแรม ที่พักข้างทาง และสถานที่พักอาศัย
อื่นๆ
 - ที่พักที่มีที่นอนและอาหารเข้า

ก่อนติดตั้งเรา

ต้องแน่ใจว่าท่านได้อ่านเนื้อหาในคู่มือการใช้งานทั้งหมดอย่าง
ละเอียดแล้วก่อนที่รติดตั้งขอรับบริการ เพราะท่านอาจต้อง
เสียค่าใช้จ่ายเพิ่มราคา

จดหมายเลขรุ่นและหมายเลขประจำเครื่องที่นี้

รุ่น: _____
หมายเลขประจำเครื่อง: _____

สารบัญ

- 3 ข้อมูลด้านความปลอดภัย
- 4 คำอธิบายผลิตภัณฑ์
- 5 ขนาด
- 6 การติดตั้งเครื่องดูดควัน
- 9 การใช้งานเครื่องดูดควัน
- 10 การทำความสะอาดและการบำรุงรักษา
- 11 การแก้ไขปัญหา
- 12 ศูนย์บริการลูกค้า

คำอธิบายสัญลักษณ์

 **คำเตือน!**

สัญลักษณ์นี้แสดงข้อมูลที่เกี่ยวข้องกับความปลอดภัยของท่าน

 **ข้อควรระวัง!**

สัญลักษณ์นี้แสดงข้อมูลวิธีการหลีกเลี่ยงความเสียหายที่อาจเกิด
ขึ้นกับเครื่องดูดควัน

 **สิ่งสำคัญ!**

สัญลักษณ์นี้แสดงข้อแนะนำและข้อมูลเกี่ยวกับการใช้งานเครื่อง
ดูดควัน

 **สิ่งแวดล้อม!**

สัญลักษณ์นี้แสดงข้อแนะนำและข้อมูลเกี่ยวกับการใช้งานเครื่อง
ดูดควันอย่างประหยัดและเป็นมิตรต่อสิ่งแวดล้อม

RoHS
Compliant.

หากในอนาคตท่านจำเป็นต้องทิ้งผลิตภัณฑ์นี้ โปรดอย่าทิ้ง
ผลิตภัณฑ์นี้รวมกับขยะในครัวเรือน โปรดนำส่งผลิตภัณฑ์นี้ให้กับ
ศูนย์เก็บรวบรวมขยะที่มีบริการ

ผลิตภัณฑ์นี้เป็นไปตามข้อกำหนด RoHS

ข้อมูลด้านความปลอดภัย

คู่มือเล่มนี้อธิบายถึงวิธีการใช้งานที่เหมาะสมสำหรับเครื่องดูดควัน
แบบกรับจากอีเล็คทริกส์ โปรดอ่านคู่มือเล่มนี้อย่างละเอียดก่อน
ใช้งานผลิตภัณฑ์ ควรเก็บคู่มือเล่มนี้ไว้ในที่ที่ปลอดภัย สำหรับหยิบมา
ใช้อ้างอิงในภายหลัง

เครื่องดูดควันนี้เป็นเครื่องใช้ไฟฟ้าสำหรับใช้ในบ้านที่ได้รับการผลิตและ
ทดสอบตามมาตรฐานสากล IEC 60335.2.31

อ่านข้อมูลต่อไปนี้อย่างละเอียดเพื่อหลีกเลี่ยงความเสียหายหรือการ
ได้รับบาดเจ็บ

 **สัญลักษณ์นี้แสดงสิ่งที่ไม่ควรทำ**

 **สัญลักษณ์นี้แสดงสิ่งที่ควรทำ**

 **คำเตือน!**

ปฏิบัติตามคำแนะนำเหล่านี้อย่างระมัดระวังเพื่อหลีกเลี่ยงการเกิด
ไฟฟ้าช็อตหรือเพลิงไหม้

	เด็กเล็กควรได้รับการดูแลเพื่อป้องกันไม่ให้เล่นกับเครื่องดูดควัน
	อุปกรณ์นี้ไม่ได้มีไว้สำหรับการใช้งานโดยบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพทางกายภาพ ทางประสาทสัมผัส หรือความสามารถทางจิตใจไม่สมบูรณ์ หรือขาดประสบการณ์และความรู้ ยกเว้นจะได้รับคำแนะนำหรือคำแนะนำเกี่ยวกับการใช้งานเครื่องดูดควันจากผู้ผลิตขอรับบริการ
	ตรวจสอบให้แน่ใจว่าได้ปิดสวิตช์เครื่องดูดควันก่อนทำการบำรุงรักษาเพื่อป้องกันการถูกไฟฟ้าช็อต
	ห้ามปรุงอาหารแบบจุดไฟสูงกว่าไฟของเครื่องดูดควัน
	อย่าใช้เตาที่ใช้เครื่องดูดควันรุ่นนี้สำหรับทำบาร์บีคิว
	เครื่องดูดควันรุ่นนี้ไม่สามารถติดตั้งเพื่อการใช้งานนอกอาคารได้
	ต้องถอดตัวกรองไขมันออกหากทำความสะอาดทุกๆ 2 สัปดาห์ (สูงสุด) เพื่อลดความเสี่ยงในการเกิดเพลิงไหม้
	ห้ามปล่อยควันจากเครื่องดูดควันเข้าไปในท่อควันหรือปล่องควันที่อาจมีสารที่เกิดจากการเผาไหม้จากแหล่งอื่นๆ (รูปที่ 1)
	ห้ามปล่อยควันเข้าไปในช่องว่างระหว่างกำแพง ยกเว้นในกรณีที่มีช่องว่างนี้ได้รับการออกแบบเพื่อการนี้
	ในห้องต้องมีระบบถ่ายเทอากาศที่เพียงพอเมื่อใช้เครื่องดูดควันพร้อมกันกับอุปกรณ์ที่ใช้แก๊ส หรือเชื้อเพลิงอื่นๆ
	ตั้งหม้อหรือกระทะบนเตาแก๊สที่จุดไฟทุกครั้งเมื่อใช้งานเครื่องดูดควัน
	ปิดเตาแก๊สก่อนนำหม้อหรือกระทะลงจากเตาทุกครั้ง
	ห้ามเปิดเตาแก๊สทิ้งไว้เพราะอาจทำให้เกิดเพลิงไหม้ (รูปที่ 2)

การต่อระบบไฟฟ้า

ตรวจสอบว่าแรงดันไฟฟ้าหลักตรงกับที่ระบุในฉลากแสดงข้อมูลด้านในเครื่องดูดควัน ตรวจสอบว่าการติดตั้งเป็นไปตามมาตรฐานของหน่วยงานควบคุมอาคาร การใช้แก๊สและไฟฟ้าในห้องก่อนเชื่อมต่อกับแหล่งจ่ายไฟฟ้า ให้ตรวจสอบว่าแรงดันไฟฟ้าหลักตรงกับที่ระบุในฉลาก แสดงข้อมูลด้านในเครื่องดูดควัน ถ้าสายไฟเกิดความเสียหาย โปรดให้ผู้ผลิต ตัวแทนฝ่ายบริการ หรือบุคคลที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟเพื่อหลีกเลี่ยงอันตรายจากไฟฟ้า

คำเตือนเกี่ยวกับความปลอดภัยสำหรับผู้ติดตั้ง


ในกรณีที่ติดตั้งเครื่องดูดควัน ให้ปฏิบัติตามข้อแนะนำที่เกี่ยวข้อง
ระหว่างขั้นต้นและระหว่างสูงสุดจากฐานเครื่องดูดควันถึงพื้นเตา
(ตามตารางในหน้า 6)

การติดตั้งท่อควัน: ต้องปฏิบัติตามข้อกำหนดต่อไปนี้
เคร่งครัดเพื่อประสิทธิภาพสูงสุดในการดูดควัน


- ท่อควันต้องสั้นและตรง
- ห้ามลดหรือจำกัดขนาดของท่อควัน
- ท่อควันต้องโค้งงอให้น้อยที่สุด
- เมื่อใช้ท่อควันชนิดอ่อน ให้ติดตั้งท่อโดยดึงท่อให้ตึงเพื่อรักษาแรงดันภายในท่อ
- การไม่ปฏิบัติตามคำแนะนำพื้นฐานเหล่านี้จะทำให้เครื่องดูดควันมีประสิทธิภาพลดลงมาก และทำให้เกิดเสียงดังอีกด้วย

ห้ามปล่อยควันเข้าไปในช่องว่างระหว่างกำแพง ยกเว้นในกรณีที่ช่องว่างนี้ได้รับการออกแบบเพื่อการนี้ ห้ามปล่อยควันจากเครื่องดูดควันเข้าไปในท่อควันหรือปล่องควันที่อาจมีสารที่เกิดจากการเผาไหม้จากแหล่งอื่นๆ


หมายเหตุ: การติดตั้งในบางจุดอาจจำเป็นต้องตัดฝาครอบปล่องควันแบบปรับความยาวได้ออกให้พอดีกับความยาวใช้กรรไกรตัดแผ่นโลหะหรือในสถานที่ที่มีพื้นละเอียดตัดโดยระมัดระวังไม่ให้ฝาครอบปล่องควันบิดเบี้ยวหรือเสียหาย

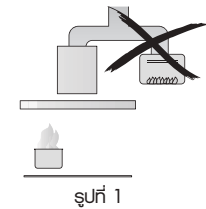

รูปที่ 1

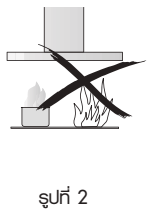

รูปที่ 2

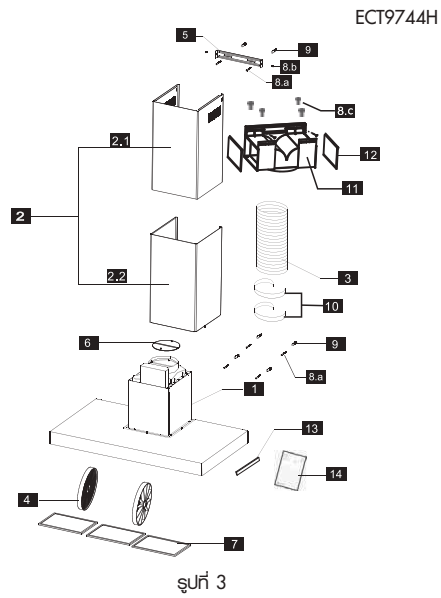


รูปที่ 3

ส่วนประกอบ

หมายเลขอ้างอิง	จำนวน	ส่วนประกอบของผลิตภัณฑ์
1	1 ชิ้น	ตัวเครื่องพร้อมแผงควบคุมการทำงาน หลอดไฟ เครื่องเป่าลม
2	1 ชุด	ส่วนฟักรองปล่องควัน
2.1	1 ชิ้น	ฟักรองปล่องควันด้านใน
2.1	1 ชิ้น	ฟักรองปล่องควันด้านนอก
3	1 ชิ้น	ท่อระบายอากาศออกสู่ภายนอก
4	2 ชิ้น	แผ่นกรองคาร์บอน
5	1 ชิ้น	ที่ยึดฟักรองปล่องควัน
6	1 ชุด	แฉกเปอร์ (บานพับเปิด/ปิด)
7	3 ชิ้น	แผ่นรองตาข่ายอลูมิเนียม
8, a	8 ชิ้น	สกรูยึด (ST4.8 X 40 MM)
8, b	2 ชิ้น	สกรูยึดที่ยึดฟักรองปล่องควัน (M 4 X 6 MM)
8, c	4 ชิ้น	สกรู T-piece สำหรับระบบหมุนเวียนอากาศภายใน
9	8 ชิ้น	พุกสำหรับยึดกับฝ้าเพดาน
10	2 ชิ้น	เทปยึดท่อ
11	1 ชุด	T-piece สำหรับระบบหมุนเวียนอากาศภายใน
12	2 ชิ้น	ฟองน้ำ T-piece
13	1 ชิ้น	แถบยางฟองน้ำ
14	1 ชิ้น	คู่มือการใช้งาน

ขนาด

ECT9744H

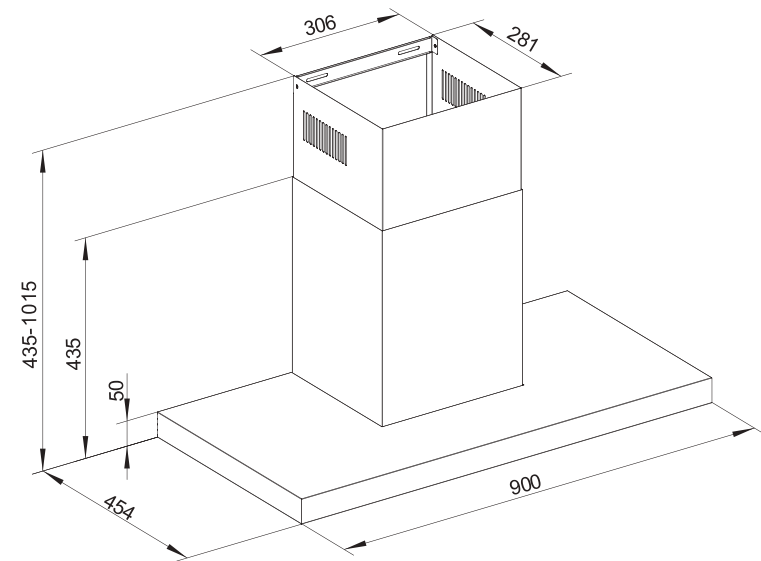

การติดตั้งเครื่องดูดควัน

⚠️ คำเตือน!
โปรดดูหัวข้อ “ข้อมูลด้านความปลอดภัย”

ก่อนการติดตั้ง

ก่อนติดตั้งเครื่องดูดควัน ให้ดูข้อมูลด้านล่างจากฉลากแสดงข้อมูล ซึ่งติดอยู่ที่ด้านหลังของโครงเครื่อง

รุ่น _____

PNC _____


หมายเลขประจำเครื่อง _____

1. ใช้เครื่องวัดระดับ ชิดเส้นกึ่งกลางแนวตั้งบนผนังในตำแหน่งที่ต้องการติดตั้งเครื่องดูดควัน และขีดเส้นแนวนอนในตำแหน่งของฐานเครื่องดูดควัน (ดูภาพด้านล่าง)

หมายเหตุ: ด้านล่างของตัวเครื่องต้องมีระยะห่างต่ำสุดที่ **650 มม.*** และสูงสุดไม่เกิน **800 มม.**

* หากค่าเผื่อในการติดตั้งตรงระยะห่างมากกว่าระยะข้างขึ้นข้างลงขึ้น ให้ใช้ความสูงขึ้นข้างดังกล่าวในการติดตั้ง


2. ทำเครื่องหมายจุดติดตั้งที่ยึดฟากรอบปล่องควันเข้ากับผนังและจุดติดตั้งเครื่องดูดควัน เหนือฐานตัวเครื่องไว้ให้อย่างชัดเจน (รูปที่ 6)

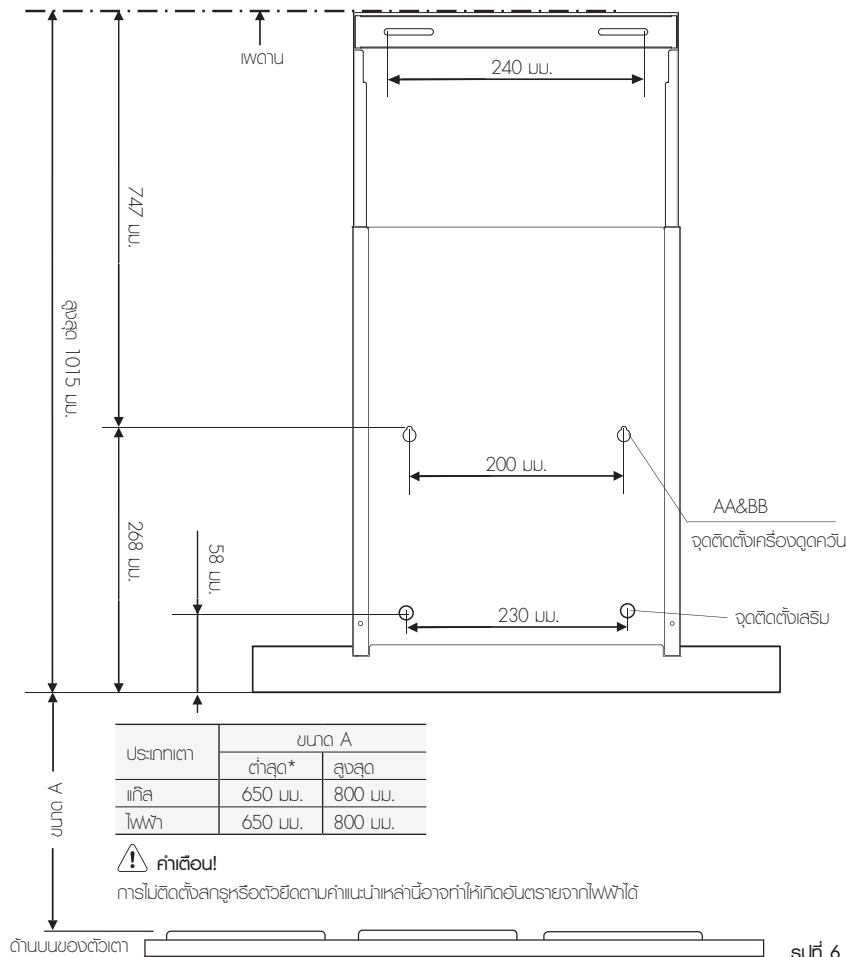

รูปที่ 6


การติดตั้งเครื่องดูดควัน

3. ติดตั้งที่ยึดฟากรอบปล่องควันเข้ากับผนังด้วยสลักตามที่กำหนด (รูปที่ 7) โปรดติดตั้ง T-piece สำหรับระบบหมุนเวียนอากาศภายในพร้อมกันด้วยยึดฟากรอบปล่องควัน หากใช้เครื่องดูดควันระบบหมุนเวียนอากาศภายใน (รูปที่ 12)

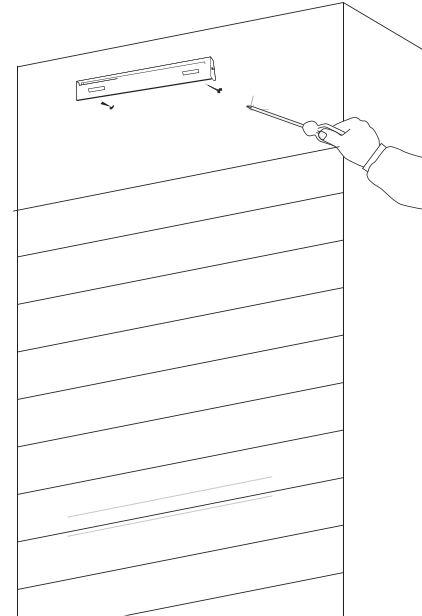


รูปที่ 7

4. ใช้ดอกสว่านขนาด 9 มม. ขยายรูนำร่องแล้วสอดพุกพลาสติกยึดผนัง (BB) ลงในผนัง ไปตามเส้นที่เป็นจุดอ้างอิง ใส่สลักโดยเว้นระยะห่างระหว่างผนังและด้านหลังของหัวสลัก 5 มม. (รูปที่ 8) เพื่อให้สลักเครื่องดูดควันเข้ากันได้ ตรวจสอบให้แน่ใจว่าสลักและพุก (AA และ BB) ขนานกับเส้นแนวนอน

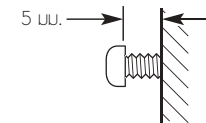


รูปที่ 8

5. แบนตัวเครื่องดูดควัน (A) ลงบนสลัก (AA และ BB) ที่ติดตั้งอยู่บนผนังแล้วขันสลักให้แน่น (AA และ BB) เพื่อยึดตัวเครื่องดูดควัน (A) เข้ากับผนัง ลอกเทปกาวยางบนช่องน้ำออกและติดแถบยางพองน้ำเข้าที่ด้านหลังของตัวโครงพัดลมตามภาพ (รูปที่ 9)

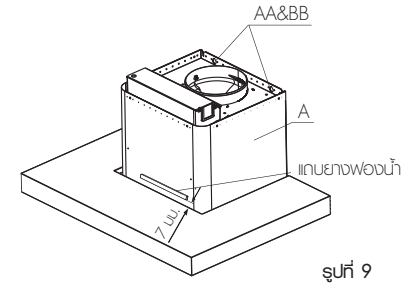

รูปที่ 9

6. ติดตั้งสลักยึดตัวเครื่องเพิ่มอีกสองตัว (AA) ลงในรูติดตั้งเสริมเพื่อยึดตัวเครื่อง (A) เข้าที่

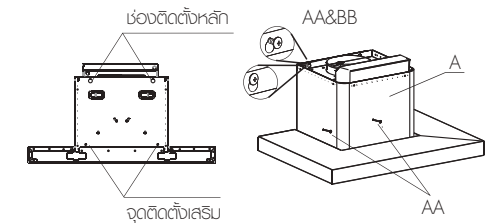

รูปที่ 10

รูปที่ 11

ปฏิบัติตามขั้นตอน 7a หรือ 7b ด้านล่างนี้ ทั้งนี้ขึ้นอยู่กับระบบการดูดควันที่เลือกติดตั้ง

7a. ระบบหมุนเวียนอากาศภายใน (รูปที่ 12)

ติดตั้ง T-piece ตามขนาดของฟากรอบปล่องควันโดยใช้สลัก 4 ตัวที่นำมา ติดฟองน้ำสองชิ้นที่ทางออกของ T-piece ตามภาพ (รูปที่ 12)

ยึด T-piece สำหรับระบบหมุนเวียนอากาศภายในกับที่ยึดปล่องควันเข้ากับผนัง โดยอ้างอิงจากใช้เส้นตรงกลางติดตั้งท่ออ่อนระหว่าง T-piece และท่อระบายอากาศของปล่องควัน ใช้วงแหวนสำหรับติดตั้งในการยึดท่ออ่อนเข้ากับ T-piece และท่อระบายอากาศ (รูปที่ 14)



หมายเหตุ: เมื่อติดตั้งเครื่องดูดควันระบบหมุนเวียนอากาศภายใน ขอแนะนำให้ใช้แผ่นกรองคาร์บอนเพื่อป้องกันไม่ให้กลิ่นที่ปล่อยออกมาไหลกลับเข้ามาในห้อง

7b. ระบบดูดควันออกไปภายนอก (รูปที่ 13)

ติดตั้งปล่องควันแบบยึดใหญ่ได้เข้ากับท่อระบายอากาศ (รูปที่ 13) ใช้เทปกาวยางในการยึดปล่องควันเข้ากับท่อระบายอากาศ

หมายเหตุ: สำหรับระบบดูดควันออกไปภายนอก เราขอแนะนำให้เพิ่มความยาวของท่อปล่องควัน ผ่าน “หลังคา” ไปยังเพดาน ครอบหลังคาเพื่อระบายควันออกไปภายนอก เราไม่แนะนำให้ระบายควันเข้าไปในช่องกาพ

การติดตั้งเครื่องดูดควัน

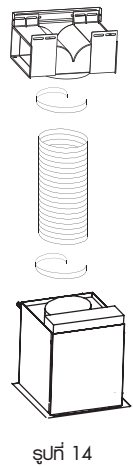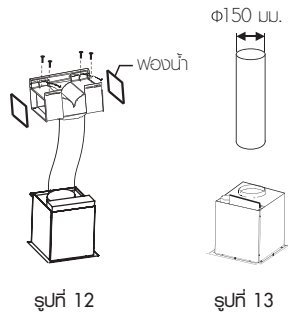



8. การเชื่อมระบบไฟฟ้า

- การเดินสายไฟต้องทำโดยช่างที่มีคุณวุฒิให้สอดคล้องตามกฎหมายและมาตรฐานทั้งหมดที่บังคับใช้ ปิดสวิตช์แหล่งจ่ายไฟก่อนเดินสายไฟ
- หากสายไฟชำรุด ต้องให้บริษัทผู้ผลิต ตัวแทน หรือช่างที่มีคุณสมบัติเทียบเท่าเป็นผู้เปลี่ยน เพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้น
- ห้ามใช้ปลั๊กและสายไฟต่อพ่วงนอกเหนือจากที่นำมาพร้อมกับเครื่องในตอนแรก
- การต่อสายดินให้เครื่องดูดควันเป็นสิ่งจำเป็น ห้ามถอดขดลวดออกจากปลั๊ก

9. การติดตั้งฟากรอบปล่องควันแบบปรับความยาวได้

แยกส่วนฟากรอบปล่องควัน ค่อยๆ ประกอบกับส่วนฟากรอบปล่องควันส่วนบนและส่วนล่างด้วยการเสียบฟากรอบด้านในไปตามฟากรอบปล่องควันด้านนอก ค่อยๆ ลดระดับฟากรอบปล่องควันส่วนบน และส่วนล่างที่ประกอบเข้าด้วยกันแล้วลงที่ด้านบนของตัวเครื่องดูดควัน ยึดฟากรอบปล่องควันส่วนบนเข้ากับที่ยึดด้วยสลักรูที่ 1

หมายเหตุ: ค่อยๆ แกะแผ่นพลาสติกที่บรียออกจากฟากรอบปล่องควัน ทำนี้ ให้ความสมดุลระหว่างเป็นพื้นถนนและแผ่นพลาสติกที่บรียออกจากสลักกรวดที่แตกต่างกัน

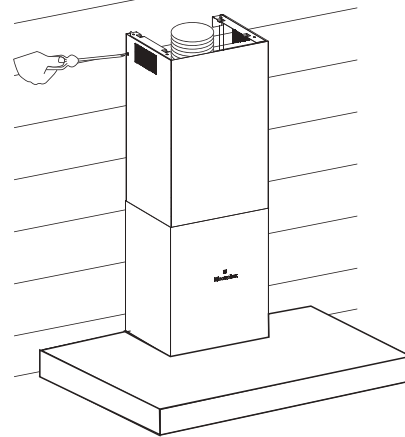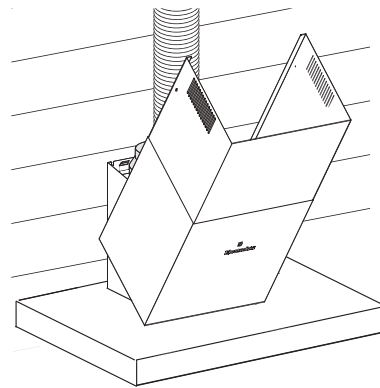


รูปที่ 15

ขณะนี้ เครื่องดูดควันอิเล็กทรอนิกส์ของท่านพร้อมใช้งานแล้ว

การใช้งานเครื่องดูดควัน

ECT9744H



โหมดพร้อมใช้งาน

เมื่อเชื่อมต่อกับเครื่องดูดควันเข้ากับแหล่งจ่ายไฟเป็นครั้งแรกหรือหลังจากการเสียบฟากรอบปล่องควันผิด หรือเกิดการขัดข้องสัญญาณกับทั้งหมดแบบพวงควบคุมจะติดสว่างเสียง “บีบ” จะดังขึ้นหนึ่งครั้ง การกดปุ่มดังกล่าวจะทำให้พวงควบคุมนี้เข้าสู่โหมดพร้อมใช้งานและสามารถใช้งานเครื่องดูดควันได้

เปิดพัดลม

การกด ① จะเป็นการเปิดเครื่องดูดควันที่ความเร็วระดับ 2 หรือความเร็วพัดลมที่ใช้ล่าสุด (ยกเว้นความเร็วระดับ Power Boost) พร้อมกับไฟติดสว่าง

ปิดพัดลม

การกด ① จะเป็นการปิดตัวเครื่องที่ความเร็วพัดลมทุกระดับ

พัดลม - เลือกความเร็วให้เหมาะสมกับลักษณะการปรุงอาหาร

- ① - เปิด/ปิดพัดลม
- 1 (๗) - ขณะอุ่นอาหาร, ปรุงอาหารในหม้อที่มีฝาปิด, กอดไฟอ่อน, ต้มไฟอ่อน
- 2 (๗) - ขณะปรุงอาหารในหม้อที่มีฝาปิด กอด ต้ม บนเตาแบบวางงานปรุงอาหารหรือเตาแก๊ส
- 3 (๗) - ขณะต้ม กอดอาหารปริมาณมากโดยไม่ปิดฝาปิด ปรุงอาหารบนเตาแบบวางงานปรุงอาหารหรือเตาแก๊ส การย่าง กอดโดยใช้ไฟแรง ปรุงอาหารในภาชนะก้นลึก
- ☼ - หลอดไฟ


Hob2Hood ☼

เป็นฟังก์ชันอัตโนมัติขั้นสูงซึ่งเชื่อมต่อกับเครื่องดูดควันแบบพิเศษ เตาและเครื่องดูดควันนี้ตัวรับสัญญาณอินฟราเรดความเร็วของพัดลมจะถูกกำหนดโดยอัตโนมัติตามการตั้งค่าโหมดการทำงานและอุณหภูมิของเครื่องครัวที่ร้อนที่สุดบนเตา นอกจากนี้ ท่านยังสามารถสั่งงานพัดลมด้วยตัวเองจากเตาโดยตรงได้

เคล็ดลับและข้อแนะนำสำหรับฟังก์ชัน Hob2Hood

เมื่อท่านใช้งานเตาที่มีฟังก์ชัน Hob2Hood:

- ปกป้องเพนกวินควบคุมเครื่องดูดควันจากแสงแดดโดยตรง
- อย่าฉายไฟอาโสงบนเพนกวินควบคุมเครื่องดูดควัน
- อย่าปิดกลุ่มเพนกวินควบคุมเตา
- อย่าให้สิ่งกีดขวางสัญญาณระหว่างเตาและเครื่องดูดควัน (ตัวอย่างเช่น มือหรืออุปกรณ์ด้านจับเครื่องครัว) เมื่อใช้งาน Hob2Hood ผ่านเตา ไฟแสดง ๑ และ ๓ จะติดสว่าง ไฟแสดงนี้ จะระบุว่าฟังก์ชัน Hob2Hood ทำงานอยู่

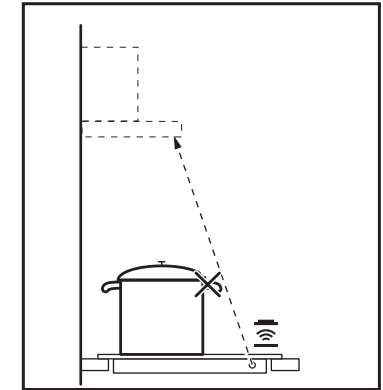

❗ สิ่งสำคัญ!

อาจเกิดกรณีที่มีรอยของผลิตภัณฑ์อื่นๆ ปิดกั้นสัญญาณเพื่อป้องกันกรณีดังกล่าว ห้ามใช้งานในโหมดการสลับสัญญาณอื่นๆ และเตาพร้อมกัน เครื่องดูดควันที่มีฟังก์ชัน Hob2Hood หากต้องการค้นหาเครื่องดูดควันทุกรุ่นที่มีการทำงานร่วมกับฟังก์ชันนี้ โปรดดูที่เว็บไซต์สำหรับลูกค้าของเรา เครื่องดูดควันที่ทำงานกับฟังก์ชันนี้ต้องมีสัญญาณ ๓ หรือ ๕

การทำความสะอาดและการบำรุงรักษา

⚠️ ข้อควรระวัง!

- ก่อนดำเนินการบำรุงรักษาหรือทำความสะอาด ต้องตัดการเชื่อมต่อเครื่องดูดควันจากแหล่งจ่ายไฟหลักก่อน ตรวจสอบให้แน่ใจว่าปิดการทำงานของเครื่องดูดควัน และดับปลั๊กออกจากเต้ารับแล้ว
- พื้นผิวภายนอกนั้นไวต่อรอยขีดข่วนและการขีด ดึงนั้น โปรดปฏิบัติตามคำแนะนำในการทำความสะอาดเพื่อให้ได้ผลลัพธ์ที่ดีที่สุดและไม่เกิดความเสียหายขึ้น
- ต้องปฏิบัติตามคำแนะนำเหล่านี้เพื่อป้องกันการเกิดเพลิงไหม้

พื้นผิวสเตนเลสตีล


ทำความสะอาดพื้นผิวสเตนเลสด้วยวิธีขัดกับทำความสะอาดที่ไม่ขัดถูกันตรงกันซึ่งเป็นผลดีสำหรับใช้กับสเตนเลส โดยเฉพาะ เพื่อผลลัพธ์ที่ดีที่สุด ให้ใช้แรงที่สม่ำเสมอให้ทำความสะอาดไปตามแนวสายเส้นของสเตนเลส การใช้ฟ้าน้ำจะช่วยลดการเกิดรอยขีดข่วนได้ หากเช็ดด้วยผ้าเปียก ให้ใช้ผ้าแห้งที่นุ่มเช็ดอีกครั้งเพื่อป้องกันไม่ให้เกิดสนิมบนพื้นผิว

พื้นผิวของเพงควบคุม

ท่านสามารถทำความสะอาดเพงควบคุมได้โดยใช้ผ้าอุ่นผสมกับสบู่ ต้องบิดผ้าให้หมาดก่อนทำความสะอาด ใช้ผ้าที่แห้งนุ่มเช็ดหลังจากทำความสะอาดให้ความชื้นหลงเหลืออยู่

การถอดเพนกรองครานบินแบบโลหะ

ดึงเพนกรองครานบินไปทางด้านซ้ายของเครื่องแล้วดึงลงมา

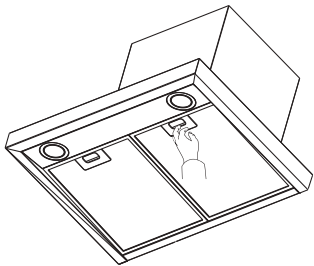

เพนกรองครานบินโลหะ

เพนกรองครานบินคือมีไว้สำหรับดูดซับอนุภาคไขมันซึ่งเกิดขึ้นระหว่างการปรุงอาหาร จำเป็นต้องใช้งานทุกครั้งไม่ว่าจะเป็น ฟังก์ชันดูดอากาศภายนอกหรือฟังก์ชันหมุนเวียนอากาศภายใน ข้อควรระวัง: ต้องถอดเพนกรองครานบินแบบโลหะเหล่านี้ล้างทำความสะอาดด้วยตนเองหรือใช้เครื่องล้างจาน ทุกๆ 2 สัปดาห์

การล้างด้วยตนเอง

ท่านสามารถทำความสะอาดเพนกรองตาข่ายด้วยตัวเองได้โดยใช้ น้ำอุ่นผสมกับสบู่ นำไปแช่ในน้ำอุ่นผสมน้ำยาล้างจานเล็กน้อย สำหรับครานบินแบบ ให้ใช้แปรงไนลอนขนนุ่มในการขัดครานบินนั้นออก หลังจากทำความสะอาด ต้องตากเพนกรองให้แห้งสนิทก่อนใส่กลับเข้าไปยังเครื่องดูดควัน

เครื่องล้างจาน


ใส่เพนกรองครานบินลงในเครื่องล้างจาน เลือกโปรแกรมการล้างที่ดีที่สุดและใช้อุณหภูมิสูงสุด อย่างน้อยคือ 65 องศา ใส่ตัวกรองไขมันกลับเข้าที่เมื่อแห้งสนิทแล้ว เมื่อล้างเพนกรองครานบินแบบโลหะลงในเครื่องล้างจาน อาจทำให้เพนกรองเกิดการเปลี่ยนสีเล็กน้อย ซึ่งไม่ส่งผลกระทบต่อประสิทธิภาพการทำงานของเพนกรอง

การเปลี่ยนหลอดไฟ

หลอดไฟชนิด LED ที่มีอายุการใช้งานยาวนาน และไม่จำเป็นต้องทำการซ่อมบำรุง หากเกิดปัญหากับหลอดไฟ โปรดติดต่อศูนย์บริการ สามารถดูรายละเอียดเกี่ยวกับการติดต่อศูนย์บริการได้จากหน้า 12

เพนกรองคาร์บอน

- เพนกรองคาร์บอนจะใช้ในกรณีที่ติดตั้งเครื่องดูดควันระบบหมุนเวียนอากาศภายในเท่านั้น
 - เพนกรองคาร์บอนไม่สามารถล้างทำความสะอาดหรือนำกลับมาใช้ซ้ำได้ ต้องเปลี่ยนใหม่ทุก 3 เดือน
- สำหรับการใส่เพนกรอง ให้ใส่เพนกรองจนสุดจนกระทั่งได้ยินเสียงคลิก ดังสลับแต่ละด้านออก จนกระทั่งเพนกรองเลื่อนลงแล้วดึงออกมา

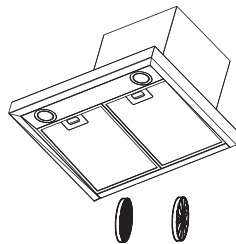

- ต้องระบุรุ่น รหัส หมายเลขประจำเครื่องของเครื่องดูดควัน ทุกครั้งที่สั่งซื้อเพนกรอง ข้อมูลนี้จะปรากฏอยู่ที่ฉลากแสดงข้อมูลที่ด้านในของเครื่อง
- สามารถสั่งซื้อเพนกรองคาร์บอนได้จากศูนย์บริการเพื่อให้ในพื้นที่ของท่าน รายละเอียดการติดต่อจะอยู่ในหน้า 12

การแก้ไขปัญหา

ปัญหา	วิธีการแก้ไข
เครื่องดูดควันไม่ทำงาน	ตรวจสอบว่าเชื่อมต่อเครื่องดูดควันเข้ากับแหล่งจ่ายไฟแล้ว ตรวจสอบว่าเลือกความเร็วพัดลมแล้ว
เครื่องดูดควันไม่ทำงาน	ตรวจสอบว่าเลือกความเร็วพัดลมเร็วเพียงพอสำหรับการปรุงอาหารแล้ว เพนกรองครานบินสะอาด ภายในกรณีมีการระบายอากาศที่ตีเพียงพอเพื่อให้อากาศบริสุทธิ์ถ่ายเทสะดวก หากใช้ระบบหมุนเวียนอากาศภายใน ให้ตรวจสอบว่าเพนกรองคาร์บอนยังคงมีประสิทธิภาพอยู่หรือไม่ หากใช้ระบบดูดควันออกไปภายนอก ให้ตรวจสอบว่าท่อและช่องระบายอากาศไม่ถูกปิดกั้น ห้ามใช้งานเตาโดยไม่ตั้งหม้อ/กระทะ: ห้ามทำเฟลมเบ้ (การทำอาหารแบบใช้ไฟพว) ใต้เตา
เครื่องดูดควันปิดระหว่างทำงาน	อุปกรณ์ตัดไฟทำงาน ให้ปิดเตาและรอจนกระทั่งอุปกรณ์ตัดไฟรีเซ็ตค่าสลับ การที่มอเตอร์ตัดการทำงานบ่อยๆ จะทำให้เครื่องดูดควันเสียหาย

หากท่านดำเนินการตรวจสอบตามคำแนะนำข้างต้นครบแล้ว และยังคงพบว่ามีปัญหาอยู่ โปรดติดต่อศูนย์บริการลูกค้าอิสระโทรศัพท์ในพื้นที่ของท่าน

หมายเหตุ: พลังงานพื้นดินการติดตั้งอุปกรณ์ตัดไฟมาด้วย

- การติดตั้งเครื่องดูดควันใกล้กับเตาแก๊ส การทำอาหารแบบใช้ไฟเผา (เฟลมเบ้) การเปิดใช้เตาโดยไม่ใช้อุปกรณ์ประกอบอาหารวางอยู่
และเพนกรองที่อุดตันเป็นปัจจัยที่อาจทำให้อุปกรณ์ตัดไฟทำงาน หากเครื่องดูดควันหยุดทำงานระหว่างใช้งานอยู่ ให้แก้ไขปัญหาละเอียดหนึ่ง เพื่อให้อุปกรณ์ตัดไฟรีเซ็ต จากนั้นเครื่องดูดควันจะทำงานตามปกติ
- ห้ามใช้งานเตาโดยไม่ตั้งหม้อ/กระทะ:
- ห้ามทำเฟลมเบ้ (การทำอาหารแบบใช้ไฟพว) ใต้เตา

ศูนย์บริการลูกค้า

Thailand Consumer Care Tel: (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkok, Huai Khwang, Bangkok 10310 Office Tel: (+66 2) 7259100 Office Fax: (+66 2) 7259299 Email : customercarethai@electrolux.com	Singapore Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713 Email : customer-care.sin@electrolux.com
Indonesia Hotline service: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl.Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email: customercareID@electrolux.com SMS & WA: 0812.8088.8863	Philippines Consumer Care Center Toll Free: 1-800-10-845-CARE(2273) Consumer Care Hotline:(+63 2)845-CARE(2273) Electrolux Philippines,Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West,Taguig, Philippines 1634 Trunkline:+63 2 737-4757 Website:www.electrolux.com.ph Email:wecare@electrolux.com
Vietnam Consumer Care Center Toll Free 1800-58-88-99 Tel: (+84 28) 39105465 Electrolux Vietnam Ltd. Unit 1&2, 10F Sofic Tower, #10 Mai Chi Tho Street, Thu Thiem Ward, Thu Duc City, Ho Chi Minh City, Vietnam	Malaysia Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 5999 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Taman Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax: (+60 3) 5524 2521 Email : malaysia.customercare@electrolux.com
HONG KONG SERVICE HOTLINE: (+852) 3193 9888 DCH ELECTRICAL APPLIANCES SERVICE CENTRE 4/F, DCH BUILDING, 20 KAI CHEUNG ROAD, KOWLOON BAY, HONG KONG EMAIL: customercare@dch.com.hk WEBSITE: www.electrolux.com.hk	

www.electrolux.com

ผู้นำนวัตกรรมการออกแบบที่คำนึงถึงผู้ใช้

ท่านกำลังรู้สึกสับสนกับผลิตภัณฑ์ของเรามากเกินไปหรือไม่? เราได้พยายามที่จะทำความเข้าใจกับความต้องการของคุณและนำเสนอโซลูชันที่ดีที่สุดให้กับคุณ เราขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ของเรา เราขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ของเรา เราขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ของเรา

ความเข้าใจและความใส่ใจในความต้องการของลูกค้าเป็นสิ่งสำคัญในการสร้างนวัตกรรมด้วยความเข้าใจที่ลึกซึ้ง ไม่ใช่การออกแบบเพราะเห็นแก่การออกแบบ แต่เป็นการออกแบบเพราะเห็นแก่ผลประโยชน์ของผู้ใช้ สำหรับเรา การออกแบบที่คำนึงถึงผู้ใช้ หมายถึง การทำให้ผลิตภัณฑ์ของเราใช้งานง่ายยิ่งขึ้น และเพิ่มความปลอดภัยในการปฏิบัติงาน มอบอิสระให้ลูกค้าของเราได้สัมผัสกับที่สุดของความหรูหราแห่งศตวรรษที่ 21 ซึ่งก็คือ ความสบายใจ เป้าหมายของเราคือการทำให้ผู้คน ในทุกมุมโลกสามารถเข้าถึงความสบายใจได้มากขึ้นในหลายๆ ส่วนของชีวิตประจำวัน

คำขวัญของเรา: “คำนึงถึงท่าน” จากอีเลกโทรลักซ์นั้นเป็นมากกว่าการตอบโต้ความต้องการของพันธมิตรในทุกวันนี้ เรายังหมายความว่าเรามุ่งมั่นที่จะทำให้เครื่องใช้ไฟฟ้ามีความปลอดภัยต่อสิ่งแวดล้อมทั้งในปัจจุบันและเพื่อคนในอนาคต

อีเลกโทรลักซ์ ด้วยความห่วงใยผู้ใช้งานทุกท่าน

ร่วมแบ่งปันความคิดอีกมากมายกับเราที่

www.electrolux.com