EDC804CEWA



EN	Tumble Dryer	User Manual	2
TH	เครื่องอบผ้า	คู่มือการใช้งาน	22

Electrolux

CONTENTS

1. SAFETY INFORMATION....2
2. SAFETY INSTRUCTIONS....5
3. PRODUCT DESCRIPTION.... 6
4. CONTROL PANEL.... 7
5. PROGRAMME TABLE.... 8
6. OPTIONS....9
7. SETTINGS....11
8. BEFORE FIRST USE.... 12
9. DAILY USE.... 12
10. HINTS AND TIPS.... 14
11. CARE AND CLEANING....14
12. TROUBLESHOOTING....17
13. TECHNICAL DATA....18
14. QUICK GUIDE....19

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux.

Visit our website:

Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com

CUSTOMER CARE AND SERVICE

Always use original spare parts.
When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.
The information can be found on the rating plate.

⚠ Warning / Caution-Safety information

ⓘ General information and tips

Environmental information

Subject to change without notice.

1. ⚠ SAFETY INFORMATION

Before beginning the installation and use of this appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages that are the result of incorrect installation or

usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

WARNING!
Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions supplied with

the accessory. Read it carefully before installation (refer to the Installation leaflet).

- The appliance can be installed as freestanding or below a kitchen counter with correct space (refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- WARNING: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Do not exceed the maximum load of 8 kg (refer to the "Programme chart" chapter).
- Do not use the appliance if items have been soiled with industrial chemicals.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

2. SAFETY INSTRUCTIONS

2.1 Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature can be lower than 5°C or higher than 35°C.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always keep the appliance vertical when it is being moved.
- The rear surface of the appliance must be put against a wall.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.

2.2 Electrical connection

WARNING!
Risk of fire and electric shock.

- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- This appliance complies with the E.E.C. Directives.

2.3 Use

WARNING!
Risk of injury, electric shock, fire, burns or damage to the appliance.

- This appliance is for household use only.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- Only dry fabrics which are suitable for drying in a tumble dryer. Follow the instructions on the fabric label.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door of the appliance.
- Do not dry dripping wet clothes in a tumble dryer.

2.4 Care and cleaning

WARNING!
Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use any abrasive products, abrasive cleaning pads, solvents or metal objects.

2.5 Disposal

WARNING!
Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

3. PRODUCT DESCRIPTION

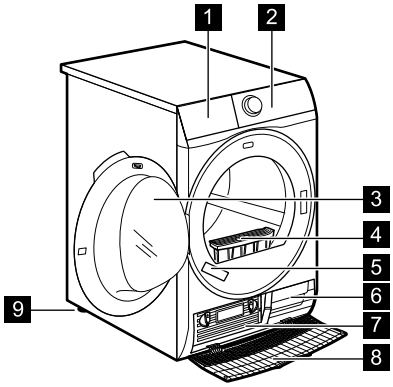

1 Water container
2 Control panel
3 Appliance door
4 Filter
5 Rating plate
6 Airflow slots
7 Heat Exchanger lid
8 Heat Exchanger cover
9 Adjustable feet

For ease of loading laundry or ease of installation the door is reversible. (see separate leaflet).

4. CONTROL PANEL

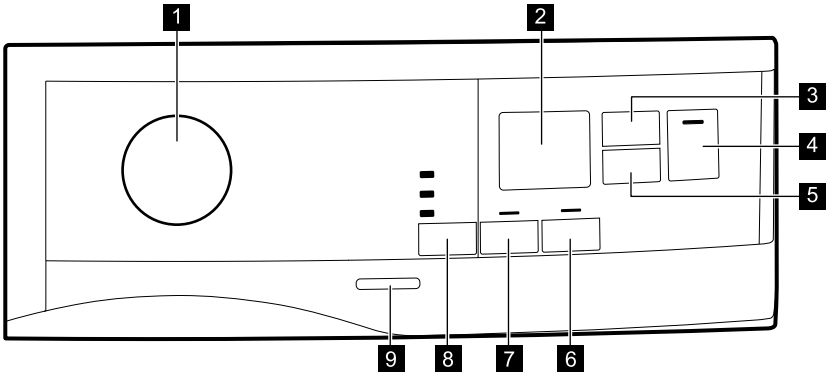

1 Programme knob
2 Display
3 Time Dry touch button
4 Start/Pause touch button
5 Delay Start touch button
6 Extra Anticrease touch button
7 Gentle Dry touch button
8 Dryness Level touch button
9 On/Off button

Press the touch buttons with your finger in the area with the symbol or name of the option. Do not wear gloves when you operate the control panel. Make sure that the control panel is always clean and dry.

4.1 Display

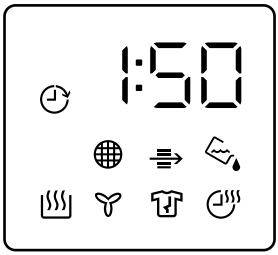

Symbol on the display	Symbol description
	time drying option on
	delay start option on
	indicator: *check Heat Exchanger*

Symbol on the display	Symbol description
	indicator: *clean filter*
	indicator: *drain the water container*
	indicator: *drying phase*
	indicator: *cooling phase*
	indicator: *anti-crease phase*
	child lock on
— — —	wrong selection
2:00	programme duration
:10-2:00	time Drying duration
1h-20h	delay start duration

5. PROGRAMME TABLE

Programme	Load 1)	Properties / Fabric type2)
Favourite ☆	Depends on a memorised programme	You can do your configuration of programme and options and memorise in the appliance memory (See chapter "*Settings - Favourite* ☆ ").
Cottons	**8 kg**	Cotton fabrics. /
Mixed	**3kg**	Cotton and synthetic fabrics. Low temperature programme. Delicate programme with warm air. /
Bedding	**3kg**	Bed linen such as single and double sheets, pillowcases, duvet cover. /
Synthetics	**3,5 kg**	Synthetic and mixed fabrics. /
Energy Saver	**8 kg**	Cycle to be used to dry cotton with "cotton cupboard" dryness level, with maximum energy saving. /
Refresh	**1kg**	Refreshing textiles that were in storage.

Programme	Load [1]	Properties / Fabric type[2]
Denim	**4 kg**	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams). /
Sports	**2 kg**	Sportswear, thin and light fabrics, microfiber, polyester. /
Easy Iron	**1 kg (or 5 shirts)**	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to another. Shake the items before putting them in the appliance. When the programme has ended, immediately remove the items and put them on a hanger. /
Shirts	**1,5kg (or 7 shirts)/**	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, Immediately remove the items and put them on a hanger. /
Wool	**1 kg**	Woollen fabrics. Gentle drying for hand-washable woollens. Remove items immediately when the programme is completed.
Delicates	**4 kg**	Delicate fabrics such as viscose, rayon, acrylic, and their blends. /

[1] The maximum weight refers to dry items.

[2] For fabric mark meaning see chapter *HINTS AND TIPS: Preparing the laundry.*

6. OPTIONS

6.1 Dryness Level

This function helps to increase dryness of the laundry. There are 3 options:

- Extra Dry
- Cupboard Dry
- Iron Dry

6.2 Gentle Dry

With this option you can set a delicate drying programme that has a low temperature. Use this option with a fabrics that have the symbol on the fabric label (e.g. acrylic, viscose).

6.3 Extra Anticrease

Extends the anti-crease phase by 60 minutes at the end of the drying cycle. This function reduces creases. The laundry can be removed during the anti-crease phase.

6.4 Time Dry

You can set the programme duration, from a minimum of 10 minutes to a maximum of 2 hours. The required duration is related to the quantity of laundry in the appliance.

We recommend that you set a short duration for small quantities of laundry or for only one item.

6.5 Options table

Programmes[1)]	Dryness Level			Gentle Dry	Extra Anti-crease	Time Dry
	☀	◐	☼			
Favourite ☆	Depends on a memorised programme					
Cottons	■	■	■	■	■	■
Mixed	■	■			■	■
Bedding	■	■	■		■	
Synthetics	■	■	■	■	■	■
Energy Saver		■			■	
Refresh					■	
Denim	■	■			■	
Sports		■			■	
Easy Iron			■	■	■	
Shirts			■		■	
Wool		■				
Delicates		■		■	■	

1) Together with the programme you can set 1 or more options. To activate or deactivate them, press the related touch button.

7. SETTINGS

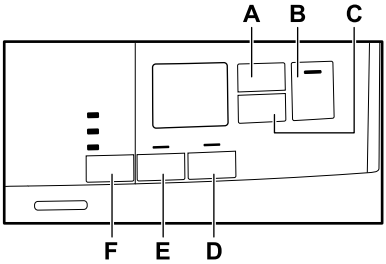

A. Time Dry touch button
B. Start/Pause touch button
C. Delay Start touch button
D. Extra Anticrease touch button
E. Gentle Dry touch button
F. Dryness Level touch button

7.1 Child lock function

This option prevents children playing with the appliance while a programme is operating. The touch buttons are locked.

Only the on/off button is unlocked.

Activating the child lock option:

1. Press the on/off button to activate the appliance.
2. Press and hold touch button (**D**) for a few seconds.

The child lock indicator comes on.

It is possible to deactivate the child lock option while a programme operates. Press and hold the same touch buttons until the child lock indicator goes off. The Child Lock function isn't available for 8 s after switching on the appliance.

7.2 Favourite ☆

You can do your configuration of programme and options and memorise in the appliance memory.

To memorise your configuration:

1. Press the on/off button to activate the appliance
2. Set the programme and available options.
3. Press the (**E**) button for some seconds.

The sound and the message on the display confirm that the configuration is memorised.

To activate your memorised configuration:

1. Press the on/off button to activate the appliance.
2. Use the programme knob to set Favourite ☆ position.

Previously memorised configuration of programme and options will be restore.

7.3 Adjustment of remaining laundry moisture

Every time you enter in the "Adjustment of remaining laundry moisture" mode, previously set degree of remaining moisture will change into next value (e.g previously set - 2 - will change into - 1 -).

To change the default degree of remaining moisture:

1. Press the on/off button to activate the appliance.
2. Use the programme knob to set any programme.
3. Wait approximately 8 seconds.
4. Press and hold buttons (**E**) and (D at the same time.

One of these indicators comes on:

- - 0 - the maximum dryness
- - 1 - the more dry laundry
- - 2 - the standard dry laundry

5. Press and hold buttons (**E**) and (**D**) again until the indicator of the correct level comes on.

If the display returns to the normal mode (the time of the selected programme from step 2. will be displayed), while setting the degree of remaining moisture, press and hold buttons (**E**) and (**D**) once again to enter to the "Adjustment of remaining laundry moisture" mode (previously set degree of remaining moisture will change into next value).

6. After 5 s the display returns to normal mode.

7.4 Water container indicator

By default, the water container indicator is on. It comes on when the programme is completed or when it is necessary to empty the water container.

If a draining kit is installed (additional accessory), the appliance automatically drains the water from the water container. In this case we recommend that you deactivate the indicator of the water container.

Deactivating the water container indicator:

1. Press the on/off button to activate the appliance.
2. Wait approximately 8 seconds.
3. Press and hold touch buttons (**A**) and (C) at the same time.

The display shows one of these 2 configurations:

- The display shows "Off". After 5 s the display returns to normal mode.
- The display shows "On". After 5 s the display returns to normal mode.

7.5 Buzzer on/off

To deactivate or activate the acoustic signals, press and hold for approximately 2 seconds touch buttons (**E**) and (**F**) at the same time.

8. BEFORE FIRST USE

Before you use the appliance for the first time:

- Clean the tumble dryer drum with a moist cloth.
- Start a 1 hour programme with moist laundry.

9. DAILY USE

9.1 Start a programme without delay start

1. Prepare the laundry and load the appliance.

CAUTION!
Make sure that when you close the door, the laundry does not get caught between the appliance door and the rubber seal.

2. Press the on/off button to activate the appliance.
3. Set the correct programme and options for the type of load.

The display shows the programme duration.

The drying time you see on the display, when the cotton programme is selected, is related to the load of 5 kg and standard conditions . Real drying time will depend on type of the load (quantity and composition), the room temperature and the humidity of your laundry after spin drying phase.

4. Press the Start/Pause touch button.

The programme starts.

9.2 Starting the programme with delay start

1. Set the correct programme and options for the type of load.
2. Press the delay start button again and again until the display shows the delay time you want to set.

You can delay the start of a programme from a minimum of 0,5 hour to a maximum of 20 hours.

3. Press the Start/Pause touch button.

The display shows the countdown of the delay start.
When the countdown is completed, the programme starts.

9.3 Change a programme

1. Press the on/off button to deactivate appliance
2. Press the on/off button to activate the appliance.
3. Set the programme.

9.4 At the end of the programme

When the programme is completed:

- An intermittent acoustic signal operates.
- The display shows 0 : 0 0
- The indicator is on.
- The indicators Filter and Tank may come on.
- The Start/Pause indicator is on.

The appliance continues to operate with the anti-crease phase for approximately 30 minutes or more if Extra Anticrease option was set (see chapter *Option - Extra Anticrease*).

The anti-crease phase reduces creasing.

You can remove the laundry before the anti-crease phase is completed. We recommend, for better results, that you remove the laundry when the phase is almost completed.

When the anti-crease phase is completed:

- The display still shows 0 : 0 0
- The indicator is off.
- The indicators Filter and Tank remain on.
- Start/Pause indicator goes off.

1. Press the on/off button to deactivate the appliance.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

Always clean the filter and empty the water container when a programme is completed.

9.5 Stand-by function

To reduce energy consumption, this function automatically deactivates the appliance:

- After 5 minutes if you do not start the programme.
- After 5 minutes from the end of the programme.

10. HINTS AND TIPS

10.1 Preparing the laundry

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.
- Turn items with the internal layer made of cotton inside out. Cotton layer must be faced outwards.
- Always set the programme suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable programme for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in the programmes chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.

Fabric label	Description
	Laundry is suitable for tumble drying.
	Laundry is suitable for tumble drying at higher temperatures.
	Laundry is suitable for tumble drying at low temperatures only.
	Laundry is not suitable for tumble drying.

11. CARE AND CLEANING

11.1 Cleaning the filter

1.

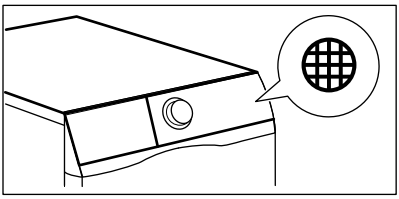

2.

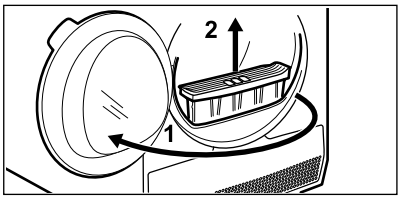

3.

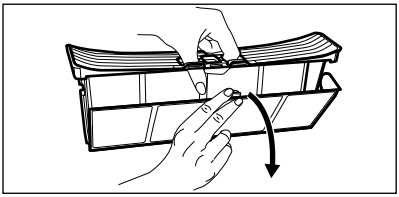

4.

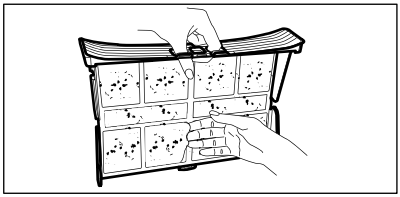

5. 1)

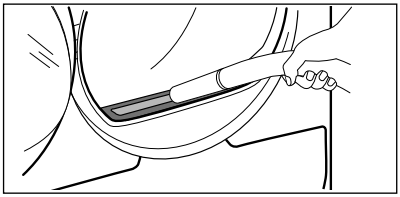

6.

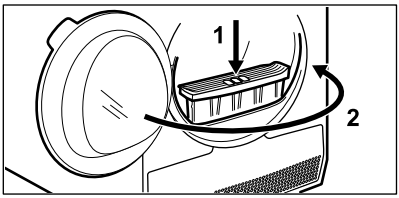

1) If necessary remove fluff from the filter socket and gasket. You can use a vacuum cleaner.

11.2 Emptying the water container

1.

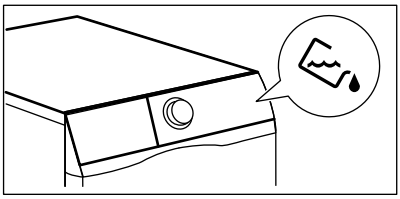

2.

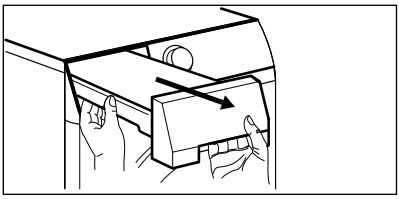

3.

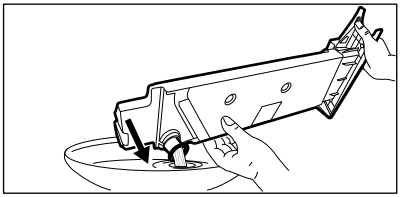

4.

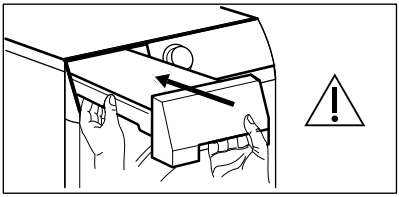

You can use the water from the water container as an alternative to distilled water (e.g. for steam ironing). Before you use the water, remove dirt residues with a filter.

11.3 Cleaning the Heat Exchanger

1.

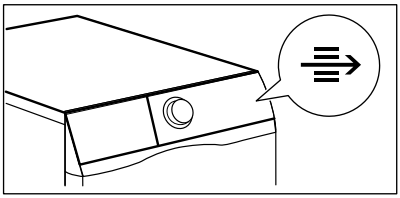

2.

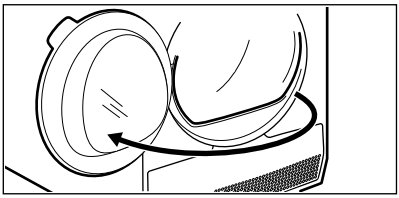

3.

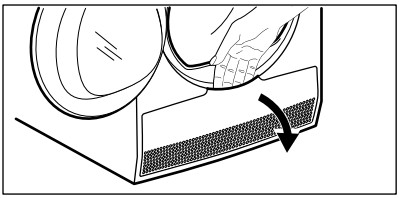

4.

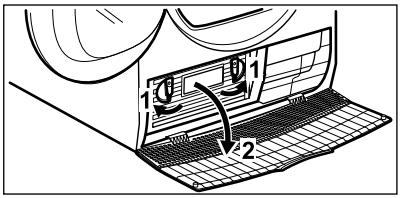

5.

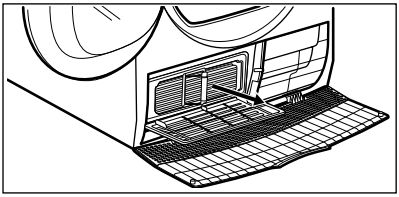

6.

7.

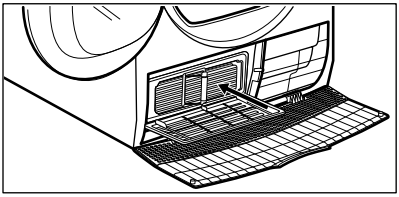

8.

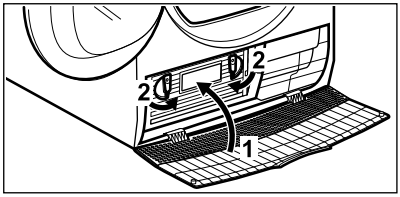

9.

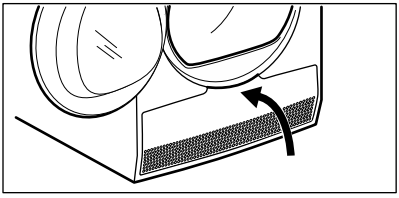

10.

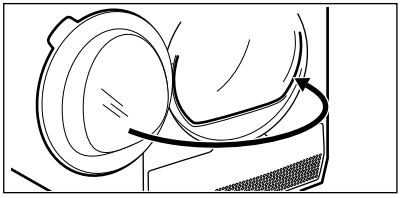

11.4 Cleaning the drum

WARNING!
Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.

CAUTION!
Do not use abrasive materials or steel wool to clean the drum.

11.5 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.

CAUTION!
Do not use furniture cleaning agents or cleaning agents which can cause corrosion.

11.6 Cleaning the airflow slots

Use a vacuum cleaner to remove fluff from the airflow slots.

12. TROUBLESHOOTING

Problem	Possible solution
You cannot activate the appliance.	Make sure that the mains plug is connected to the mains socket.
	Check fuse in fuse box (domestic installation).
The programme does not start.	Press Start/Pause.
	Make sure that the appliance door is closed.
The appliance door does not close.	Make sure that the installation of the filter is correct.
	Make sure that the laundry is not caught between the appliance door and the rubber seal.
The appliance stops during operation.	Make sure that the water container is empty. Press Start/Pause to start the programme again.
	Load is too small, increase the load or use the Time Drying programme.
The cycle time is too long or unsatisfactory drying result.[1)]	Make sure that the weight of the laundry is suitable for the duration of the programme.
	Make sure that the filter is clean.
	The laundry is too wet. Spin the laundry in the washing machine again.
	Ensure that the room temperature is higher than +5°C and lower than +35°C. Optimal room temperature is 19°C to 24°C.
	Set the Time Drying or the Extra Dry programme.[2)]
The display shows ▬ ▬ ▬.	If you want to set a new programme, deactivate and activate the appliance.
	Make sure that the options are suitable for the programme.
The display shows Error code (e.g. **E51**).	Deactivate and activate the appliance. Start a new programme. If the problem occurs again, contact the Service centre.

1) After maximum 5 hours, the programme ends automatically.

2) It can happen that some area remains humid when drying big items (e.g. bed sheets).

12.1 If the drying results are not satisfactory

- The set programme was incorrect.
- The filter is clogged.
- The Heat Exchanger is clogged.
- There was too much laundry in the appliance.
- The drum is dirty.
- Incorrect setting of the conductivity sensor (See chapter "*Settings - Adjustment of the remaining laundry moisture degree* " for better setting).
- The airflow slots are clogged.
- Room temperature is too low or too high (optimal room temperature 19°C to 24°C)

13. TECHNICAL DATA

Height x Width x Depth	850 x 600 x 600 mm (maximum 665 mm)
Max. depth with the appliance door open	1100 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	118 l
Maximum load volume	**8** kg
Voltage	220-230 V
Frequency	50 Hz
Total power	2250 W
Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	**IPX4**

14. QUICK GUIDE

14.1 Daily use

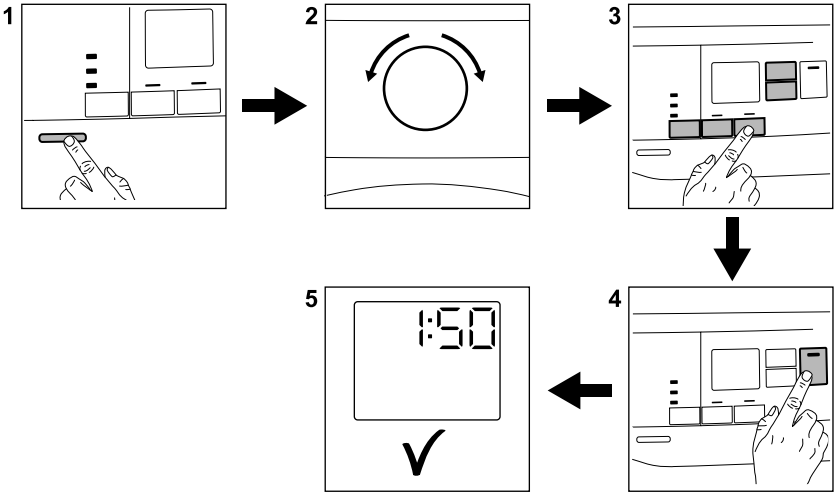

1. Push the On/Off button to turn on the appliance.
2. Use the programme dial to set the programme.
3. Together with the programme you can set 1 or more special options. To activate or deactivate an option touch the relevant button.
4. To start the programme, Touch the **Start/Pause** button.
5. The appliance starts.

14.2 Cleaning the filter

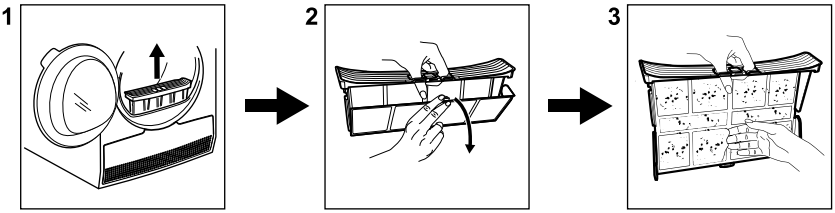

At the end of each cycle the filter symbol appears on the display and you must clean the filter.

14.3 Programme table

Programme	Load 1)	Properties / Fabric type2)
Favourite ☆	Depends on a memorised programme	You can do your configuration of programme and options and memorise in the appliance memory (See chapter "*Settings - Favourite* ☆ ").
Cottons	**8 kg**	Cotton fabrics. /
Mixed	**3kg**	Cotton and synthetic fabrics. Low temperature programme. Delicate programme with warm air. /
Bedding	**3kg**	Bed linen such as single and double sheets, pillowcases, duvet cover. /
Synthetics	**3,5 kg**	Synthetic and mixed fabrics. /
Energy Saver	**8 kg**	Cycle to be used to dry cotton with "cotton cupboard" dryness level, with maximum energy saving. /
Refresh	**1kg**	Refreshing textiles that were in storage.
Denim	**4 kg**	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams). /
Sports	**2 kg**	Sportswear, thin and light fabrics, microfiber, polyester. /
Easy Iron	**1 kg (or 5 shirts)**	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to another. Shake the items before putting them in the appliance. When the programme has ended, immediately remove the items and put them on a hanger. /
Shirts	**1,5kg (or 7 shirts)/**	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, Immediately remove the items and put them on a hanger. /

Programme	Load [1]	Properties / Fabric type[2]
Wool	**1 kg**	Woollen fabrics. Gentle drying for hand-washable woollens. Remove items immediately when the programme is completed.
Delicates	**4 kg**	Delicate fabrics such as viscose, rayon, acrylic, and their blends. /

[1] The maximum weight refers to dry items.

[2] For fabric mark meaning see chapter *HINTS AND TIPS: Preparing the laundry.*

15. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol ♲. Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

สารบัญ

1. ข้อมูลด้านความปลอดภัย..... 22
2. คำแนะนำด้านความปลอดภัย.....25
3. รายละเอียดของผลิตภัณฑ์..... 26
4. แผงควบคุม..... 26
5. โปรแกรมการทำงาน..... 27
6. ตัวเลือก.....28
7. ค่าปรับตั้ง.....30
8. ก่อนการใช้งานครั้งแรก.....31
9. การใช้งานทั่วไป.....31
10. คำแนะนำและเคล็ดลับ..... 32
11. การดูแลรักษาและทำความสะอาด..... 33
12. การแก้ไขปัญหา..... 35
13. ข้อมูลทางเทคนิค..... 36
14. คู่มืออย่างย่อ.....37

เราคิดถึงคุณเสมอ

ขอบพระคุณที่ซื้อเครื่องใช้ไฟฟ้าจาก Electrolux คุณได้เลือกผลิตภัณฑ์ที่ผลิตขึ้นโดยผู้ผลิตที่มีความเชี่ยวชาญและโดดเด่นด้านนวัตกรรมมานับหลายทศวรรษ ผลิตภัณฑ์ของเรามีความโดดเด่นและมีสไตล์ ออกแบบมาโดยคำนึงถึงผู้ใช้โดยเฉพาะ ไม่ว่าคุณจะใช้ผลิตภัณฑ์เมื่อใด คุณจึงมั่นใจได้ว่าจะประสิทธิภาพในการทำงานตามที่คาดหวังทุกครั้ง
แวะไปยังเว็บไซท์ของเราสำหรับ:

รับคำแนะนำในการใช้งาน เอกสารแผ่นพับ ข้อมูลการแก้ไขปัญหาและข้อมูลการให้บริการได้ที่:
www.electrolux.com

ฝ่ายให้บริการและดูแลลูกค้า

ใช้อะไหล่แท้ทุกครั้ง
ขณะติดต่อศูนย์บริการที่ได้รับการรับรองของเรา กรุณาเตรียมข้อมูลต่อไปนี้ให้พร้อม รุ่น PNC ซีเรียลนัมเบอร์
ตรวจสอบข้อมูลได้จากแผ่นข้อมูลสินค้า

⚠ คำเตือน / ข้อควรระวัง-ข้อมูลด้านความปลอดภัย

ⓘ ข้อมูลและคำแนะนำทั่วไป

ข้อมูลด้านสิ่งแวดล้อม

เปลี่ยนแปลงได้ โดยไม่ต้องแจ้งให้ทราบ

1. ⚠ ข้อมูลด้านความปลอดภัย

ก่อนติดตั้งและใช้งานเครื่อง กรุณาอ่านคำแนะนำที่จัดมาให้โดยละเอียดก่อนในเบื้องต้น ผู้ผลิตจะไม่รับผิดชอบใด ๆ ต่อการบาดเจ็บหรือความเสียหายที่เป็นผลมาจากการติดตั้งหรือใช้งานที่ไม่ถูกต้อง เก็บชุดคำแนะนำเพื่อความปลอดภัยไว้ในที่ที่เรียกค้นเพื่ออ้างอิงได้อย่างสะดวก

1.1 ความปลอดภัยต่อเด็กและกลุ่มเสี่ยง

⚠ **คำเตือน**
อาจเสียชีวิตเนื่องจากขาดอากาศหายใจ บาดเจ็บหรือทุพพลภาพถาวรได้

- เครื่องสามารถใช้งานได้โดยเด็กอายุ 8 ปีขึ้นไปหรือบุคคลที่มีข้อจำกัดทางร่างกาย ประสาทสัมผัสหรือสภาพจิต หรือขาดประสบการณ์หากมีผู้คอยกำกับดูแลหรือให้คำแนะนำเกี่ยวกับการใช้เครื่องอย่างปลอดภัย และเข้าใจเกี่ยวกับอันตรายที่อาจเกิดขึ้น
- อย่าให้เด็กอายุ 3 - 8 หรือผู้ที่ทุพพลภาพสูงเข้าใกล้เครื่อง ยกเว้นมีคนดูแลอย่างใกล้ชิด
- อย่าให้เด็กอายุต่ำกว่า 3 ปีเข้าใกล้เครื่อง ยกเว้นมีการกำกับดูแลอย่างต่อเนื่อง
- อย่าให้เด็กเล่นเครื่อง
- แยกบรรจุภัณฑ์ทั้งหมดให้พ้นมือเด็กและทิ้งอย่างเหมาะสม
- เก็บน้ำยาซักฟอกให้พ้นมือเด็ก
- ระวังอย่าให้เด็กหรือสัตว์เลี้ยงอยู่ใกล้ตัวเครื่องขณะประตูเปิดอยู่
- หากเครื่องมีอุปกรณ์นิรภัยสำหรับเด็ก ให้เปิดใช้งานอุปกรณ์เหล่านี้ไว้
- เด็ก ๆ จะต้องไม่ทำความสะอาดหรือดูแลรักษาเครื่องด้วยตัวเองโดยไม่มีผู้ดูแล

1.2 ความปลอดภัยทั่วไป

- ห้ามแก้ไขส่วนประกอบทางเทคนิคของเครื่องนี้
- หากเครื่องอบแห้งวางอยู่ด้านบนของเครื่องซักผ้า ให้ใช้อุปกรณ์สำหรับวางซ้อน อุปกรณ์สำหรับวางซ้อนมีจำหน่ายจากตัวแทนจำหน่ายที่ได้รับอนุญาต โดยให้ใช้กับเครื่องรุ่นที่กำหนดและร่วมกับอุปกรณ์เสริมที่เหมาะสมเท่านั้น อ่านรายละเอียดให้ครบถ้วนก่อนทำการติดตั้ง (ดูในเอกสารแนะนำการติดตั้ง)
- สามารถติดตั้งเครื่องแยกเฉพาะหรือใต้เคาเตอร์ในครัวโดยเว้นระยะอย่างเหมาะสม (ดูในเอกสารคำแนะนำในการติดตั้ง)
- อย่าติดตั้งเครื่องไว้ด้านหลังประตูที่ล็อคได้ ประตูเลื่อนหรือประตูที่มีบานพับฝั่งตรงข้ามซึ่งประตูเครื่องจะไม่สามารถเปิดได้จนสุด

- ช่องเปิดระบายความร้อนที่ฐานจะต้องไม่มีพรมหรือวัสดุปิดคลุมพื้นอุดปิดอยู่ด้านล่าง
- คำเตือน: อย่าจ่ายไฟเครื่องโดยอาศัยอุปกรณ์สั่งการต่อพ่วง เช่น ระบบตั้งเวลา หรือต่อกับวงจรที่ปิดและเปิดโดยระบบสาธารณูปโภคเนประจำ
- ต่อปลั๊กไฟเข้ากับเต้ารับไฟฟ้าเมื่อทำการติดตั้งเสร็จสิ้นแล้วเท่านั้น ปลั๊กไฟจะต้องสามารถเข้าถึงได้ง่ายหลังการติดตั้ง
- หากอุปกรณ์หรือสายไฟเสียหาย ให้ส่งซ่อมกับผู้ผลิต ศูนย์บริการที่ได้รับอนุญาตหรือบุคลากรผู้เชี่ยวชาญเพื่อป้องกันอันตรายจากไฟฟ้าที่อาจเกิดขึ้น
- อย่างใช้งานเกินน้ำหนักสูงสุดที่ 8 กก. (ดูในหัวข้อ “แผนผังโปรแกรมการทำงาน”)
- อย่าใช้เครื่องหากผ้าเลาะสารเคมีทางอุตสาหกรรม
- นำเศษใยผ้าหรือคราบจากบรรจุภัณฑ์ที่สะสมอยู่ตามเครื่องออก
- อย่าเดินเครื่องโดยไม่มีติดตั้งชุดกรอง ทำความสะอาดที่กรองเศษใยผ้าก่อนหรือหลังการใช้งานทุกครั้ง
- ไม่ควรอบแห้ง ผ้าที่ยังไม่ได้ซัก ในเครื่องอบผ้า
- ผ้าที่เปื้อนสิ่งสกปรก อย่างแอซิโทน แอลกอฮอล์ น้ำมันทำอาหาร น้ำมันรถยนต์ น้ำมันก๊าด น้ำยาขจัดคราบ น้ำมันสน ขี้ผึ้ง และน้ำยาขจัดรอยเปื้อนจากขี้ผึ้ง ควรซักในน้ำร้อน โดยใช้ผงซักฟอก ปริมาณมากเป็นพิเศษ ก่อนนำมาอบแห้ง ในเครื่องอบผ้า
- วัสดุอย่างยางโฟม (โฟมลาเท็กซ์), หมวกอาบน้ำ, สิ่งทอประเภทกันน้ำ, วัสดุที่บุด้านหลังด้วยยาง และเสื้อผ้า หรือหมอน ที่ติดแผ่นยางโฟม ไม่ควรนำมาอบแห้ง ในเครื่องอบผ้า
- น้ำยาปรับผ้านุ่ม หรือผลิตภัณฑ์ประเภทเดียวกันนี้ ควรใช้ตามคำแนะนำของผู้ผลิตผลิตภัณฑ์เท่านั้น
- นำวัตถุต่าง ๆ ทั้งหมดที่อาจจุดติดไฟออก เช่น ไฟแช็คหรือไม้ขีดไฟ
- คำเตือน: ห้ามหยุดเครื่อง ก่อนจะสิ้นสุดการอบแห้ง เว้นแต่จะนำผ้าทั้งหมด ออกจากเครื่อง อย่างรวดเร็ว และคลี่ผ้าออกเพื่อคลายความร้อน
- ก่อนทำการซ่อมบำรุง ให้ปิดเครื่องและปลดสายไฟออกจากเต้ารับไฟฟ้า

2. คำแนะนำด้านความปลอดภัย

2.1 การติดตั้ง

- นำบรรจุภัณฑ์ออกทั้งหมด
- อย่าติดตั้งหรือใช้เครื่องที่เสียหาย
- ปฏิบัติตามคำแนะนำในการติดตั้งที่จัดมาให้พร้อมกับเครื่อง
- ระมัดระวังขณะเคลื่อนย้ายเครื่อง เนื่องจากเครื่องมีน้ำหนักมาก ใช้ถุงมือนิรภัยและรองเท้าที่มิดชิดทุกครั้ง
- อย่าติดตั้งหรือใช้เครื่องหากอุณหภูมิต่ำกว่า 5°C หรือสูงกว่า 35°C
- พื้นที่ต้องติดตั้งเครื่องจะต้องเรียบ มั่นคง ทนความร้อนและสะอาด
- อากาศจะต้องสามารถไหลเวียนได้ระหว่างตัวเครื่องและพื้น
- เครื่องจะต้องตั้งตรงขณะเคลื่อนย้ายเท่านั้น
- พื้นผิวด้านหลังของเครื่องจะต้องวางชิดติดกับผนัง
- ขณะติดตั้งเครื่องแบบถาวร ให้ตรวจสอบว่าพื้นได้ระนาบโดยใช้ระดับน้ำ หากไม่ได้ระนาบ ให้ปรับจนกว่าจะได้ระนาบที่เหมาะสม

2.2 การต่อระบบไฟ

คำเตือน
อาจเกิดเพลิงไหม้หรือไฟฟ้าช็อตได้

- เครื่องจะต้องต่อสายดิน
- พารามิเตอร์ต่าง ๆ ที่ผ่านป้ายข้อมูลจะต้องตรงกับพิกัดทางไฟฟ้าสำหรับแหล่งจ่ายไฟที่ใช้
- ใช้เต้ารับแบบทนแรงกระแทกที่ติดตั้งได้อย่างถูกต้อง
- อย่าใช้หัวต่อหลายทางและสายพ่วง
- อย่าดึงที่สายไฟเพื่อปิดเครื่อง ดึงที่หัวปลั๊กไฟทุกครั้ง
- อย่าสัมผัสโดนสายจ่ายไฟหรือปลั๊กไฟขณะมือเปียก
- เครื่องได้มาตรฐานตามหลักเกณฑ์ E.E.C. Directives

2.3 การใช้งาน

คำเตือน
ความเสี่ยงต่อการบาดเจ็บ ไฟฟ้าช็อต เพลิงไหม้หรือความเสียหายต่อเครื่อง

- นี่เป็นเครื่องใช้สำหรับใช้งานในครัวเรือนเท่านั้น
- อย่าอบแห้งผ้าที่เสียหาย (ขาดหรือรุ่ย) ซึ่งมีวัสดุหรือไส้ยัดอยู่ภายใน
- อบเฉพาะผ้าที่เหมาะสำหรับเครื่องอบผ้าเท่านั้น ปฏิบัติตามคำแนะนำที่แจ้งบนชิ้นผ้า
- หากซักผ้าโดยใช้น้ำยาขจัดคราบ ให้เริ่มรอบการซักน้ำเพิ่มเติมก่อนเริ่มการอบแห้ง
- อย่าดื่มเครื่องดื่มหรือเตรียมอาหารโดยใช้น้ำจากการควบแน่น/น้ำกลั่น เนื่องจากอาจทำให้เกิดปัญหาสุขภาพกับคนและสัตว์ได้
- อย่านั่งหรือยืนบนประตูเครื่องที่เปิดอยู่
- อย่าใช้ผ้าเปียกน้ำชุ่มเช็ดด้านในเครื่องอบผ้า

2.4 การดูแลและทำความสะอาด

คำเตือน
ความเสี่ยงต่อการบาดเจ็บ หรือความเสียหายต่อเครื่อง

- อย่าใช้เครื่องพ่นสเปรย์ไอน้ำหรือไอน้ำร้อนเพื่อทำความสะอาดเครื่องใช้
- ทำความสะอาดเครื่องโดยใช้ผ้าเนื้อนุ่มชุบน้ำบิดหมาด ใช้เฉพาะน้ำยาทำความสะอาดที่เป็นกลาง อย่าใช้ผลิตภัณฑ์ที่มีฤทธิ์กัดกร่อน แผ่นขัดที่หยาบ สารละลาย หรือวัตถุโลหะที่อาจทำให้เกิดความเสียหาย

2.5 การทิ้ง

คำเตือน
ความเสี่ยงต่อการบาดเจ็บหรือขาดอากาศหายใจ

- ถอดปลั๊กจากเต้ารับไฟฟ้าและจุดจ่ายน้ำ
- ตัดสายไฟหลักที่อยู่ติดกับเครื่องและแยกทิ้ง
- ถอดตัวล็อคประตูเพื่อป้องกันเด็กหรือสัตว์เลี้ยงติดค้างในถังดรัม
- ทิ้งเครื่องตามข้อกำหนดในท้องถิ่นด้านการทิ้งอุปกรณ์ไฟฟ้าหรืออิเล็กทรอนิกส์ (WEEE)

3. รายละเอียดของผลิตภัณฑ์

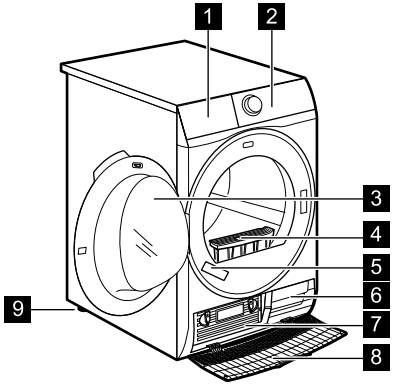

1 ที่เก็บน้ำ
2 แผงควบคุม
3 ฝาเครื่อง
4 Filter (ตัวกรอง)
5 แผ่นข้อมูล
6 ช่องถ่ายเทอากาศ
7 ฝาปิดตัวแลกเปลี่ยนความร้อน
8 ฝาครอบตัวแลกเปลี่ยนความร้อน
9 ขาตั้งปรับได้

เพื่อให้ใส่ผ้าหรือติดตั้งได้ง่าย ประตูจะสามารถกลับด้านได้ (ดูในเอกสารแยก)

4. แผงควบคุม

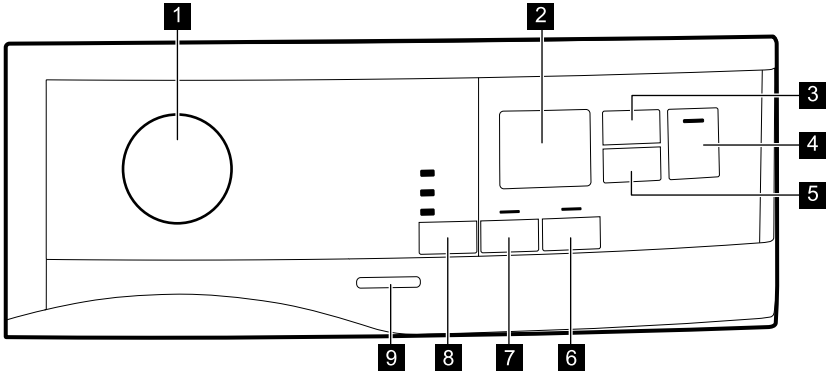

1 แป้นตั้งโปรแกรม
2 จอแสดงผล
3 Time Dry (ตั้งเวลาอบ) ปุ่มกดสัมผัส
4 Start/Pause (เริ่ม/หยุดชั่วคราว) ปุ่มกดสัมผัส
5 Delay Start (หน่วงเวลา) ปุ่มกดสัมผัส
6 Extra Anticrease (เพิ่มเวลาลดรอยยับ) ปุ่มกดสัมผัส
7 Gentle Dry (อบอุณหภูมิต่ำ) ปุ่มกดสัมผัส
8 Dryness Level (ระดับ ความแห้ง) ปุ่มกดสัมผัส
9 ปุ่มเปิด/ปิด

กดปุ่มโดยใช้นิ้วมือในจุดที่มีสัญลักษณ์หรือชื่อฟังก์ชั่นการใช้งาน อย่าสวมถุงมือขณะใช้งานแผงควบคุม แผงควบคุมจะต้องแห้งและสะอาดอยู่เสมอ

4.1 จอแสดงผล

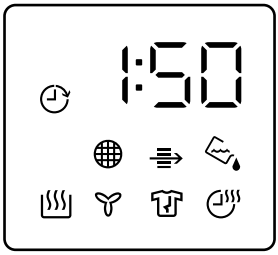

สัญลักษณ์ที่จอแสดงผล	รายละเอียดสัญลักษณ์
	ใช้ตัวเลือกเวลาในการอบแห้ง
	ใช้ตัวเลือกหน่วงเวลาเริ่มทำงาน
	ไฟสถานะ: *ตรวจสอบอุปกรณ์แลกเปลี่ยนความร้อน*
	ไฟสถานะ: *ทำความสะอาดตัวกรอง*
	ไฟสถานะ: *ระบายน้ำในที่เก็บน้ำออก*
	ไฟสถานะ: *ขั้นตอนการอบแห้ง*
	ไฟสถานะ: *ขั้นตอนการระบายความร้อน*
	ไฟสถานะ: *ขั้นตอนการลดรอยยับ*
	เปิดล็อคป้องกันเด็ก
— — —	เลือกรายการไม่ถูกต้อง
2:00	ระยะเวลาการทำงาน
:10-2:00	ระยะเวลาอบแห้งตั้งเวลา
1h-20h	ระยะเวลาเริ่มการทำงานแบบหน่วงเวลา

5. โปรแกรมการทำงาน

โปรแกรม	น้ำหนัก 1)	คุณสมบัติ / ประเภทของผ้า2)
Favourite (อบประจำ) ☆	ขึ้นอยู่กับ-โปรแกรม-การทำงาน-ที่บันทึกไว้	คุณสามารถตั้งโปรแกรมการทำงานและตัวเลือกต่าง ๆ และบันทึกไว้ในหน่วยความจำของเครื่อง (ดูใน-หัวข้อ "*ค่าปรับตั้ง - รายการโปรด*☆ ")
Cottons (ผ้าฝ้าย)	**8 กก.**	ผ้าฝ้าย /

โปรแกรม	น้ำหนัก 1)	คุณสมบัติ / ประเภทของผ้า2)	
Mixed (ผ้าผสม)	**3 กก.**	ผ้าฝ้ายและใยสังเคราะห์ โปรแกรมอุณหภูมิต่ำ โปรแกรมสำหรับผ้าบางโดยใช้ลมอุ่น	/
Bedding (เครื่องนอน)	**3 กก.**	อบแห้งผ้าปูเตียง เช่น ผ้าปูเตียงหนึ่งและสองชิ้น ปลอกหมอน ปลอกผ้านวม	/
Synthetics (ผ้าใยสังเคราะห์)	**3,5 กก.**	ผ้าใยสังเคราะห์และผ้าเนื้อผสม	/
Energy Saver (อบประหยัด)	**8 กก.**	รอบการทำงานสำหรับอบแห้งผ้าฝ้ายที่ระดับความแห้ง “สำหรับผ้าฝ้ายที่พับเก็บเข้าตู้” โดยเน้นการประหยัดพลังงานในระดับสูงสุด	/
Refresh (ลดรอยยับ)	**1 กก.**	ให้ความสดชื่นแก่ผ้าที่จัดเก็บไว้นาน	
Denim (ผ้ายีนส์)	**4 กก.**	สำหรับผ้าลำลอง เช่น ยีนส์ เสื้อแขนยาว ที่ใช้วัสดุหนาต่างกัน (เช่น ที่คอ ข้อมือและตะเข็บ)	/
Sports (ชุดกีฬา)	**2 กก.**	ชุดกีฬา ผ้าเนื้อบางเบา ไมโครไฟเบอร์ โพลิเอสเตอร์	/
Easy Iron (รีดง่าย)	**1 กก. (หรือเสื้อเชิ้ต 5 ตัว)**	ผ้าที่ดูแลได้ง่ายซึ่งไม่ต้องใช้ความร้อนสูงในการรีด ผลการอบแห้งอาจแตกต่างกันไปตามชนิดของผ้า กระจายผ้าก่อนใส่เข้าในเครื่อง หลังจากสิ้นสุดโปรแกรม ให้นำผ้าออกทันทีแล้วแขวนไว้	/
Shirts (เสื้อเชิ้ต)	**1.5 กก. (หรือเสื้อเชิ้ต 7 ตัว)/**	ผ้าที่ดูแลได้ง่ายซึ่งไม่ต้องใช้ความร้อนสูงในการรีด ผลการอบแห้งอาจแตกต่างกันไปตามชนิดของผ้า กระจายผ้าก่อนใส่เข้าในเครื่อง หลังจากสิ้นสุดโปรแกรม ให้นำผ้าออกทันทีแล้วแขวนไว้	/
Wool (ผ้าขนสัตว์)	**1 กก.**	ผ้าขนสัตว์ อบแห้งผ้าขนสัตว์แบบซักมือได้อย่างอ่อนโยน นำออกทันทีเมื่อสิ้นสุดโปรแกรม	
Delicates (ผ้าเนื้อบาง)	**4 กก.**	ผ้าเนื้อบาง เช่น วิสโคส เรยอน อะคริลิคและผ้าเนื้อผสมเหล่านี้	/

1) น้ำหนักสูงสุดใช้กับผ้าแห้ง

2) ดูรายละเอียดเครื่องหมายกำกับสำหรับผ้าได้จากหัวข้อ *เคล็ดลับและคำแนะนำ: การจัดเตรียมผ้า*

6. ตัวเลือก

6.1 Dryness Level (ระดับ ความแห้ง)

ฟังก์ชั่นนี้ช่วยทำให้ผ้าแห้งดีขึ้น มีตัวเลือก 3 ตัวเลือกได้แก่

- Extra Dry (แห้งพิเศษ)
- Cupboard Dry (แห้งพับใส่ตู้)
- Iron Dry (อบแห้งเพื่อรีด)

6.2 Gentle Dry (อบอุณหภูมิต่ำ)

ตัวเลือกนี้ช่วยให้สามารถตั้งค่าการอบแห้งแบบอ่อนโยนโดยใช้อุณหภูมิต่ำ ใช้ตัวเลือกนี้กับผ้าที่มีสัญลักษณ์ ⊡ ที่ฉลากของผ้า (เช่น อะคริลิค วิสโคส)

6.3 Extra Anticrease (เพิ่มเวลาลดรอยยับ)

เพิ่มรอบการลดรอยยับเป็น 60 นาทีในตอนท้ายของรอบการอบแห้ง ฟังก์ชั่นนี้ทำหน้าที่ช่วยลดรอยยับ สามารถนำผ้าออกได้ระหว่างรอบการลดรอยยับ

6.4 Time Dry (ตั้งเวลาอบ)

คุณสามารถตั้งระยะเวลาการทำงานระหว่าง 10 นาทีถึงสูงสุด 2 ชั่วโมง การตั้งค่าระยะเวลาจะสัมพันธ์กับปริมาณผ้าในเครื่อง

ℹ ขอแนะนำให้ตั้งเวลาช่วงสั้น ๆ สำหรับผ้าที่มีจำนวนน้อยหรือผ้าชิ้นเดียว

6.5 ตารางตัวเลือกฟังก์ชั่นการทำงาน

โปรแกรม[1)]	Dryness Level (ระดับความแห้ง)			Gentle Dry (อบ-อุณหภูมิต่ำ)	Extra Anticrease (เพิ่มเวลา-ลดรอยยับ)	Time Dry (ตั้งเวลาอบ)
	☀	◐	☼			
Favourite (อบประจำ) ☆	ขึ้นอยู่กับโปรแกรมการทำงานที่บันทึกไว้					
Cottons (ผ้าฝ้าย)	■	■	■	■	■	■
Mixed (ผ้าผสม)	■	■			■	■
Bedding (เครื่องนอน)	■	■	■		■	
Synthetics (ผ้าใย-สังเคราะห์)	■	■	■	■	■	■
Energy Saver (อบ-ประหยัด)		■			■	
Refresh (ลดรอยยับ)					■	
Denim (ผ้ายีนส์)	■	■			■	
Sports (ชุดกีฬา)		■			■	
Easy Iron (รีดง่าย)			■	■	■	
Shirts (เสื้อเชิ้ต)			■		■	
Wool (ผ้าขนสัตว์)		■				

โปรแกรม1)	Dryness Level (ระดับความแห้ง)	Gentle Dry (อบ-อุณหภูมิต่ำ)	Extra Anticrease (เพิ่มเวลา-ลดรอยยับ)	Time Dry (ตั้งเวลาอบ)
Delicates (ผ้าเนื้อบาง)	■	■	■	

1) นอกเหนือจากการตั้งโปรแกรม คุณยังสามารถตั้งค่าตัวเลือกได้เพิ่มอีก 1 รายการขึ้น ไป เปิดหรือปิด-ใช้งานฟังก์ชั่นโดยกดปุ่มที่เกี่ยวข้อง

7. ค่าปรับตั้ง

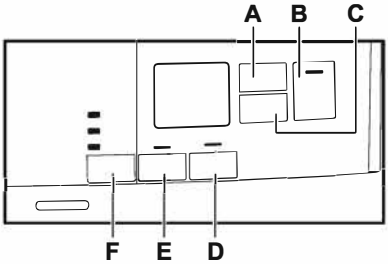

A. Time Dry (ตั้งเวลาอบ) ปุ่มกดสัมผัส
B. Start/Pause (เริ่ม/หยุดชั่วคราว) ปุ่มกดสัมผัส
C. Delay Start (หน่วงเวลา) ปุ่มกดสัมผัส
D. Extra Anticrease (เพิ่มเวลาลดรอยยับ) ปุ่มกดสัมผัส
E. Gentle Dry (อบอุณหภูมิต่ำ) ปุ่มกดสัมผัส
F. Dryness Level (ระดับ ความแห้ง) ปุ่มกดสัมผัส

7.1 ฟังก์ชั่นล็อคป้องกันเด็ก

ตัวเลือกนี้ช่วยป้องกันไม่ให้เด็กเล่นเครื่องขณะโปรแกรมกำลังทำงาน ปุ่มกดสัมผัสจะถูกล็อคไว้

เฉพาะปุ่มเปิด/ปิดเท่านั้นที่จะถูกปลดล็อค

การเปิดใช้ระบบล็อคป้องกันเด็ก:

1. กดปุ่มเปิด/ปิดเพื่อเปิดใช้งานเครื่อง
2. กดปุ่มค้างไว้ (D) สองถึงสามวินาที

ไฟสถานะล็อคป้องกันเด็กจะติดสว่าง

สามารถปิดระบบล็อคป้องกันเด็กได้ขณะโปรแกรมทำงาน กดแป้นกดเดียวกันค้างไว้จนกว่าสัญลักษณ์ล็อคป้องกันเด็กจะดับลง ฟังก์ชั่นล็อคป้องกันเด็กจะไม่สามารถใช้การได้เป็นเวลา 8 วินาทีหลังจากเปิดเครื่อง

7.2 Favourite (อบประจำ) ☆

คุณสามารถตั้งค่าโปรแกรมและฟังก์ชั่นการทำงาน รวมทั้งบันทึกไว้ในหน่วยความจำของเครื่อง

การบันทึกค่าปรับตั้งของคุณ:

1. กดปุ่มเปิด/ปิดเพื่อเปิดใช้งานเครื่อง
2. ตั้งโปรแกรมและฟังก์ชั่นการท างานต่าง ๆ
3. กดปุ่ม (E) ครู่หนึ่ง

เสียงและข้อความที่จอแสดงผลจะมีขึ้นเพื่อ ยืนยันว่ามีการบันทึกค่าปรับตั้งแล้ว

การเปิดใช้ค่าที่บันทึกไว้:

1. กดปุ่มเปิด/ปิดเพื่อเปิดใช้งานเครื่อง
2. ใช้ลูกบิดเลือกโปรแกรมการทำงานเพื่อปรับไปที่ตำแหน่ง Favourite (อบประจำ) ☆

การตั้งค่าโปรแกรมการทำงานที่บันทึกไว้ก่อนหน้าและตัวเลือกต่าง ๆ จะถูกเรียกคืน

7.3 การปรับระดับความชื้นผ้าที่เหลือ

ทุกครั้งที่เข้าสู่โหมด “การปรับความชื้นผ้าที่เหลือ” ระดับความชื้นที่เหลือของผ้าที่ระบุไว้ก่อนหน้าจะเปลี่ยนเป็นค่าใหม่ (เช่น - 2 - ค่าที่ปรับไว้ก่อนหน้าจะเปลี่ยนเป็น - 1 -).

การปรับระดับความชื้นเริ่มต้นที่เหลือสำหรับผ้า:

1. กดปุ่มเปิด/ปิดเพื่อเปิดใช้งานเครื่อง
2. ใช้ลูกบิดเลือกโปรแกรมเพื่อตั้งค่าโปรแกรมที่ต้องการ
3. รอประมาณ 8 วินาที

4. กดค้างที่ปุ่ม (**E**) และ (**D**) พร้อม ๆ กัน ไฟสถานะต่อไปนี้จะติดสว่าง:

- - 0 - ความแห้งระดับสูงสุด
- - 1 - ผ้าแห้งจ านวนมากกว่า
- - 2 - ผ้าแห้งจ านวนมาตรฐาน

5. กดปุ่ม (**E**) และ (**D**) ค้างไว้อีกครั้งจนกว่าไฟสถานะระดับที่ต้องการจะติดสว่าง

หากจอแสดงผลกลับเข้าสู่โหมดปกติ (เวลาสำหรับโปรแกรมที่เลือกจากขั้นตอนที่ 2 จะปรากฏขึ้น) ขณะก าหนดระดับความชื้น ที่เหลือ ให้กดปุ่ม (**E**) และ (**D**) ค้างไว้อีกครั้งเพื่อเข้าไปยังโหมด “การปรับความชื้นที่เหลือของผ้า” (ระดับความชื้นหลงเหลือที่ระบุก่อนหน้านี้จะปรับเป็นค่าใหม่)

6. หลังผ่านไป 5 วินาที จอแสดงผลจะกลับเข้าสู่โหมดปกติ

7.4 ไฟสถานะที่ช่องเก็บน้ำ

ตามค่าเริ่มต้นไฟสถานะของช่องเก็บน้ำจะติดสว่าง โดยจะติดสว่างเมื่อสิ้นสุดโปรแกรมหรือเมื่อต้องระบายที่เก็บน้ำ

หากติดตั้งชุดระบาย (อุปกรณ์เสริม) ไว้ เครื่องจะระบายน้ำจากที่เก็บน้ำอัตโนมัติ ในกรณีนี้เราขอแนะนำให้คุณปิดสัญลักษณ์แจ้งสำหรับที่เก็บน้ำ

การปิดสัญลักษณ์ของที่เก็บน้ำ:

1. กดปุ่มเปิด/ปิดเพื่อเปิดใช้งานเครื่อง
2. รอประมาณ 8 วินาที
3. กดค้างที่ปุ่มสัมผัส (**A**) และ (**C**) พร้อมกัน จอแสดงภาพแสดงค่าปรับตั้ง 2 ค่าต่อไปนี้

- จอแสดงผลระบุเป็น “Off” (ปิด) หลังผ่านไป 5 วินาที จอแสดงผลจะกลับเข้าสู่โหมดปกติ
- จอแสดงผลแสดงข้อความ “On” (เปิด) หลังผ่านไป 5 วินาที จอแสดงผลจะกลับเข้าสู่โหมดปกติ

7.5 เปิด/ปิดเสียงเตือน

ปิดหรือเปิดใช้สัญญาณเสียงโดยกดคค้างที่ปุ่ม (**E**) และ (**F**) พร้อมกันประมาณ 2 วินาที

8. ก่อนการใช้งานครั้งแรก

ก่อนใช้เครื่องเป็นครั้งแรก:

- ทำความสะอาดถังอบแห้งโดยใช้ผ้าชุบน้ำบิดหมาด
- เริ่มโปรแกรมการทำงาน 1 ชั่วโมงสำหรับผ้าที่มีความชื้น

9. การใช้งานทั่วไป

9.1 เริ่มโปรแกรมโดยไม่หน่วงการเริ่มทำงาน

1. จัดเตรียมผ้า จากนั้นใส่ผ้าลงในเครื่อง

ข้อควรระวัง
ขณะปิดฝาเครื่อง ผ้าจะต้องไม่ติดค้างที่ฝาเครื่องและซีลยาง

2. กดปุ่มเปิด/ปิดเพื่อเปิดใช้งานเครื่อง
3. ตั้งโปรแกรมและตัวเลือกในการทำงานที่เหมาะสมกับผ้า

จอแสดงผลจะแสดงระยะเวลาการทำงานของโปรแกรม

เวลาในการอบแห้งที่แสดงบนหน้าจอขณะเลือกโปรแกรมสำหรับผ้าฝ้ายพิจารณาจากผ้าน้ำหนัก 5 กก. ภายใต้เงื่อนไขปกติ เวลาในการอบแห้งจริงจะขึ้นอยู่กับประเภทของผ้า (จำนวนและองค์ประกอบ) อุณหภูมิห้องและความชื้นของผ้าหลังจากรอบการปั่นหมาด

4. กดปุ่มสัมผัส Start/Pause (เริ่ม/หยุดชั่วคราว)

โปรแกรมเริ่มทำงาน

9.2 การเริ่มโปรแกรมโดยหน่วงการเริ่มการทำงาน

1. ตั้งโปรแกรมและตัวเลือกในการทำงานที่เหมาะสมกับผ้า
2. กดปุ่มเริ่มการทำงานแบบหน่วงเวลาซ้ำ ๆ กันจนกระทั่งจอแสดงผลแสดงระยะเวลาหน่วงการทำงานที่คุณต้องการ

คุณสามารถหน่วงเวลาเริ่มการทำงานได้ตั้งแต่ 0,5 ชั่วโมงถึงไม่เกิน 20 ชั่วโมง

3. กดปุ่มสัมผัส Start/Pause (เริ่ม/หยุดชั่วคราว)

จอแสดงผลจะนับเวลาถอยหลังการเริ่มการทำงานแบบหน่วงเวลา
หลังจากนับถอยหลังเสร็จสิ้น โปรแกรมจะเริ่มการทำงาน

9.3 เปลี่ยนโปรแกรม

1. กดปุ่มเปิด/ปิดเพื่อปิดเครื่อง
2. กดปุ่มเปิด/ปิดเพื่อเปิดใช้งานเครื่อง
3. การตั้งค่าโปรแกรม

9.4 เมื่อสิ้นสุดโปรแกรม

หลังจากโปรแกรมทำงานเสร็จสิ้น:

- เสียงจะเตือนให้ทราบเป็นระยะ ๆ
- จอแสดงผลแสดงข้อความ 0 : 0 0
- ไฟสถานะ ติดสว่าง
- ไฟสถานะไส้กรอง และถังบรรจุ จะติดสว่าง
- ไฟสถานะ Start/Pause (เริ่ม/หยุดชั่วคราว) ติดสว่าง

เครื่องจะทำงานต่อไปพร้อมกับโหมดการลดรอยยับประมาณ 30 นาทีขึ้นไปหากตั้งค่าตัวเลือก Extra Anticrease (เพิ่มเวลาลดรอยยับ) ไว้ (ดูในหัวข้อ *ตัวเลือก - Extra Anticrease (เพิ่มเวลาลดรอยยับ)*)

โหมดลดรอยยับจะช่วยในการลดรอยยับของผ้า

คุณสามารถนำผ้าออกได้ก่อนสิ้นสุดโหมดลดรอยยับ เพื่อให้การอบแห้งดีที่สุด ขอแนะนำให้นำผ้าออกหลังจากรอบลดรอยยับเกือบสิ้นสุดแล้วเท่านั้น

เมื่อโหมดลดรอยยับทำงานเสร็จสิ้น:

- จอแสดงผลแสดงข้อความ 0 : 0 0
- ไฟสถานะ จะดับลง
- ไฟสถานะไส้กรอง และถังบรรจุ จะติดสว่างค้างอยู่
- Start/Pause (เริ่ม/หยุดชั่วคราว) ไฟสถานะจะดับลง

1. กดปุ่มเปิด/ปิดเพื่อปิดเครื่อง
2. เปิดประตูเครื่อง
3. นำผ้าออกจากเครื่อง
4. ปิดฝาเครื่อง

ทำความสะอาดตัวกรองและระบายที่เก็บน้ำทุกครั้งเมื่อโปรแกรมสิ้นสุด

9.5 ฟังก์ชั่นสแตนด์บาย

เพื่อลดการสิ้นเปลืองพลังงาน ฟังก์ชั่นนี้จะปิดการทำงานของเครื่องอัตโนมัติ:

- หลังจาก 5 นาที หากคุณไม่เริ่มการทำงานของโปรแกรม
- หลังจาก 5 นาทีหลังจากสิ้นสุดโปรแกรม

10. คำแนะนำและเคล็ดลับ

10.1 การจัดเตรียมผ้า

- รูปซิป
- รูดปิดตัวยึดคลุมผ้านวม
- อย่าอบแห้งสายเชือกหรือริบบิ้นหลวมอิสระออกมา (เช่น เชือกของผ้ากันเปื้อน) มัดไว้ก่อนเริ่มโปรแกรม
- นำสิ่งของออกจากช่องเก็บหรือกระเป๋า
- หากผ้ามีชั้นบุด้านในจากฝ้าย ให้พลิกกลับด้าน ชั้นผ้าฝ้ายจะต้องหันออกด้านนอก
- ตั้งโปรแกรมการทำงานที่เหมาะสมกับประเภทของผ้าทุกครั้ง
- อย่าใส่ผ้าสีเข้มและสีอ่อนรวมกัน
- ใช้โปรแกรมที่เหมาะสมสำหรับผ้าฝ้ายเจอร์ซี่ เสื้อถักเพื่อป้องกันการหดตัว
- อย่าใส่ผ้าเกินเกณฑ์น้ำหนักที่กำหนดในหัวข้อสำหรับโปรแกรมการทำงานหรือจากที่แสดงผลบนหน้าจอ
- อบแห้งเฉพาะผ้าที่สามารถอบแห้งได้เท่านั้น ดูรายละเอียดจากฉลากที่ติดไว้กับชุดหรือผ้า
- อย่าอบแห้งผ้าชิ้นใหญ่และชิ้นเล็กด้วยกัน ผ้าชิ้นเล็กอาจติดค้างอยู่ในผ้าชิ้นใหญ่ และยังคงเปียกอยู่เหมือนเดิม

ฉลากสำหรับผ้า	รายละเอียด
	ผ้าเหมาะสำหรับการอบแห้ง
	ผ้าเหมาะสำหรับการอบแห้งที่อุณหภูมิสูงกว่า
	ผ้าเหมาะสำหรับการอบแห้งที่อุณหภูมิต่ำเท่านั้น
	ผ้าไม่เหมาะสำหรับการอบแห้ง

11. การดูแลรักษาและทำความสะอาด

11.1 การทำความสะอาดตัวกรอง

1.

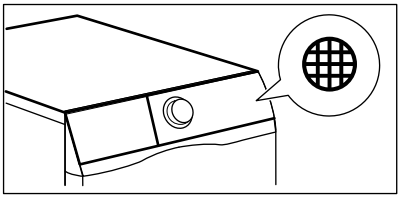

2.

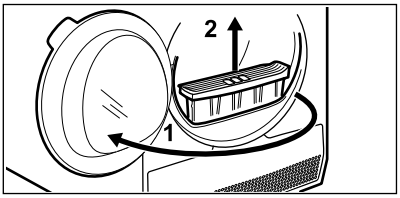

3.

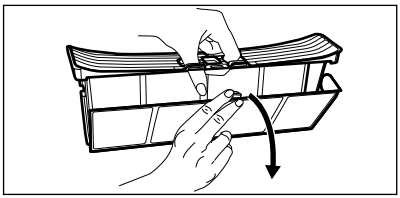

4.

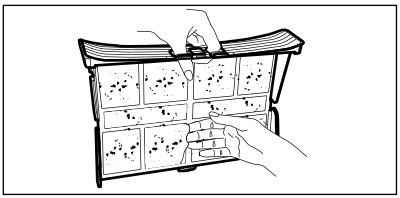

5. 1)

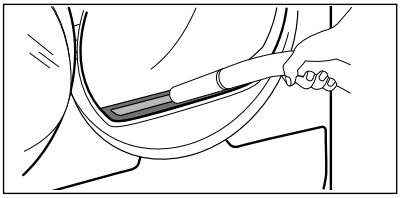

6.

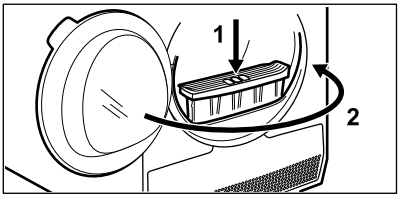

1) ในกรณีที่จำเป็น ให้นำเศษสิ่งสกปรกออกจากช่องตัวกรองและปะเก็น สามารถใช้เครื่องดูดฝุ่นได้

11.2 ระบายน้ำในที่เก็บออก

1.

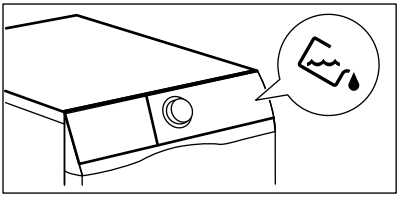

2.

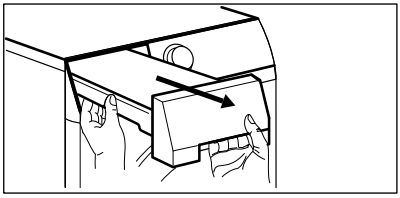

3.

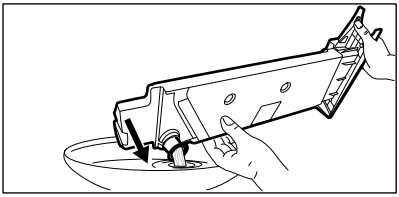

4.

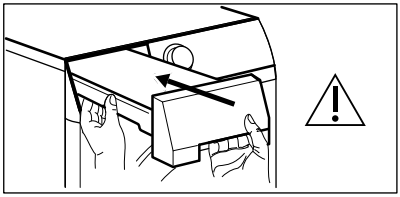

คุณสามารถใช้น้ำจากที่เก็บน้ำแทนน้ำกลั่น (เช่น สำหรับรีดไอน้ำ) ก่อนใช้น้ำดังกล่าว ให้ขจัดสิ่งตกค้างที่ตัวกรองออก

11.3 การทำความสะอาดตัวแลกเปลี่ยนความร้อน

1.

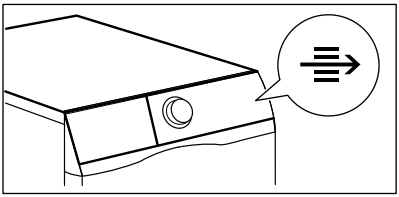

2.

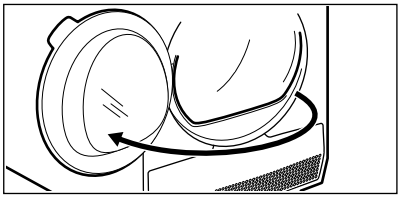

3.

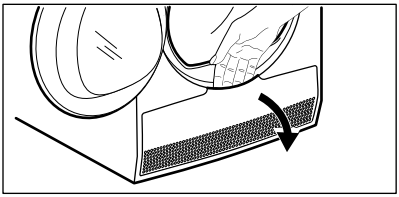

4.

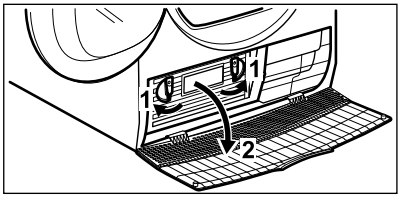

5.

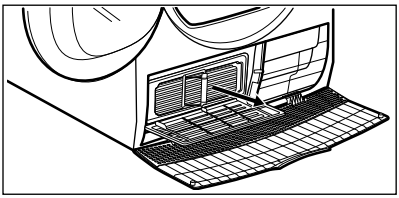

6.

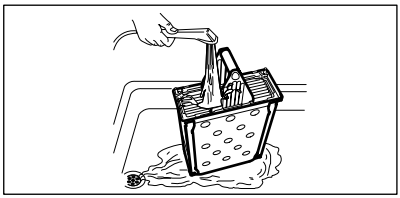

7.

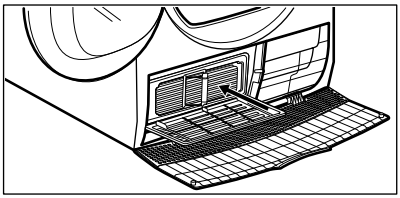

8.

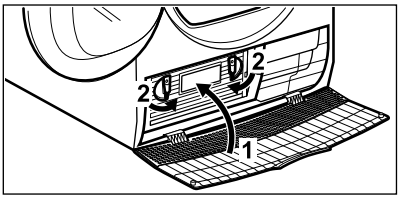

9.

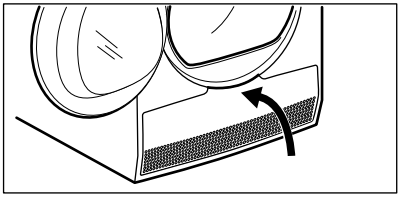

10.

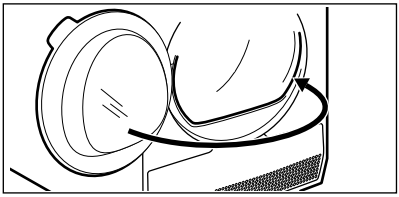

11.4 การทำความสะอาดถังอบ

คำเตือน
ถอดปลั๊กเครื่องก่อนทำความสะอาด

ใช้น้ำยาหรือสบู่มาตรฐานที่เป็นกลางเพื่อทำความสะอาดพื้นผิวด้านในของถังและตัวยกถัง เช็ดพื้นผิวที่ทำความสะอาดแล้วโดยใช้ผ้าเนื้อนุ่ม

ข้อควรระวัง
อย่าใช้วัสดุขัด หรือใยเหล็ก ขัดทำความสะอาดตัวถัง

11.5 ทำความสะอาดแผงควบคุมและตัวเรือน

ใช้น้ำยาหรือสบู่มาตรฐานที่เป็นกลางเพื่อทำความสะอาดแผงควบคุมและตัวเครื่อง ใช้ผ้าชุบน้ำบิดหมาดเพื่อทำความสะอาด เช็ดพื้นผิวที่ทำความสะอาดแล้วโดยใช้ผ้าเนื้อนุ่ม

ข้อควรระวัง
อย่าใช้น้ำยาทำความสะอาดเฟอร์นิเจอร์หรือน้ำยาทำความสะอาดที่มีฤทธิ์กัดกร่อน

11.6 การทำความสะอาดช่องไหลเวียนอากาศ

ใช้เครื่องดูดฝุ่นเพื่อขจัดเศษใยผ้าออกจากช่องไหลเวียนอากาศ

12. การแก้ไขปัญหา

ปัญหา	วิธีแก้ไขที่อาจช่วยแก้ปัญหาได้
ไม่สามารถเปิดเครื่องได้	ปลั๊กจะต้องเสียบอยู่กับเต้ารับไฟฟ้า
	ตรวจดูฟิวส์ในกล่องฟิวส์ (การติดตั้งในบ้าน)
โปรแกรมไม่ยอมเริ่มทำงาน	กด Start/Pause (เริ่ม/หยุดชั่วคราว)
	ฝาเครื่องจะต้องปิดอยู่
ฝาเครื่องไม่ได้ปิดอยู่	ตรวจสอบว่าการติดตั้งตัวกรองถูกต้อง

ปัญหา	วิธีแก้ไขที่อาจช่วยแก้ปัญหาได้
	ตรวจสอบว่าผ้าไม่ติดค้างระหว่างฝาเครื่อง-และซีลยาง
เครื่องหยุดทำงานไปเฉย ๆ	ตรวจสอบว่าที่เก็บน้ำว่างเปล่า กด Start/ Pause (เริ่ม/หยุดชั่วคราว) เพื่อเริ่มโปรแกรม-การทำงานอีกครั้ง
	น้ำหนักน้อยเกินไป ให้เพิ่มน้ำหนักผ้าหรือใช้-โปรแกรม Time Drying (ตั้งเวลาอบแห้ง)
รอบการทำงานนานเกินไปหรือผลการอบแห้ง-ไม่น่าพอใจ[1]	ตรวจสอบว่าน้ำหนักของผ้าเหมาะสมกับระยะ-เวลาการทำงานของโปรแกรม
	ตัวกรองจะต้องสะอาด
	ผ้าเปียกเกินไป ปั่นแห้งผ้าที่เครื่องซักผ้าอีกครั้ง
	อุณหภูมิห้องจะต้องสูงกว่า +5°C และไม่เกิน +35°C อุณหภูมิห้องที่เหมาะสมคือ 19°C ถึง 24°C
	ตั้งโปรแกรม Time Drying (ตั้งเวลาอบแห้ง) หรือ Extra Dry (แห้งพิเศษ)[2]
จอแสดงผลจะแสดงข้อความ — — —	หากต้องการตั้งโปรแกรมใหม่ ให้ปิดและเปิด-เครื่องอีกครั้ง
	ฟังก์ชั่นการทำงานจะต้องรองรับสำหรับ-โปรแกรมดังกล่าว
จอแสดงผลแจ้งรหัสข้อผิดพลาดขึ้น (เช่น **E51**)	ปิดและเปิดเครื่องใหม่ เริ่มโปรแกรมใหม่ หาก-ยังเกิดปัญหาขึ้นอีก ให้ติดต่อศูนย์บริการ

[1] หลังผ่านไปสูงสุด 5 ชั่วโมง โปรแกรมจะหยุดการทำงานอัตโนมัติ

[2] บางส่วนอาจยังชื้นอยู่หากเป็นการอบแห้งผ้าชิ้นใหญ่ (เช่น ผ้าปูเตียง)

12.1 หากผลการอบผ้าที่ได้ ไม่น่าพอใจ

- แสดงว่าตั้งโปรแกรมไม่ถูกต้อง
- ตัวกรองอุดตัน
- อุปกรณ์แลกเปลี่ยนความร้อนอุดตัน
- มีผ้าในเครื่องมากเกินไป
- ถังสกปรก
- การตั้งค่าเซ็นเซอร์การนำไฟฟ้าไม่ถูกต้อง (ดูในหัวข้อ "*ค่าปรับตั้ง - การปรับระดับความชื้นหลงเหลือของผ้า*" เพื่อให้ได้ค่าที่เหมาะสมกว่า)
- ช่องไหลเวียนอากาศอุดตัน
- อุณหภูมิห้องต่ำหรือสูงเกินไป (อุณหภูมิห้องที่เหมาะสมคือ 19°C ถึง 24°C)

13. ข้อมูลทางเทคนิค

สูง X กว้าง X หนา	850 x 600 x 600 มม. (สูงสุด 665 มม.)
ความหนาสูงสุดขณะเปิดประตูเครื่อง	1100 มม.
ความกว้างสูงสุดขณะเปิดประตูเครื่อง	950 มม.
ความสูงปรับได้	850 มม. (+ 15 มม. - ปรับฐานได้)

ความจุถัง	118 l
ปริมาณบรรจุสูงสุด	**8** กก.
แรงดันไฟฟ้า	220-230 V
ความถี่	50 Hz
กำลังไฟทั้งหมด	2250 W
ประเภทการใช้งาน	ครัวเรือน
อุณหภูมิโดยรอบที่เหมาะสม	+ 5°C ถึง + 35°C
ระดับการป้องกันจากการเล็ดรอดของอนุภาคแข็งและความชื้นจากฝาครอบป้องกันยกเว้นในกรณีที่อุปกรณ์แรงดันไฟต่ำไม่มีชิ้นส่วนสำหรับป้องกันความชื้น	**IPX4**

14. คู่มืออย่างย่อ

14.1 การใช้งานทั่วไป

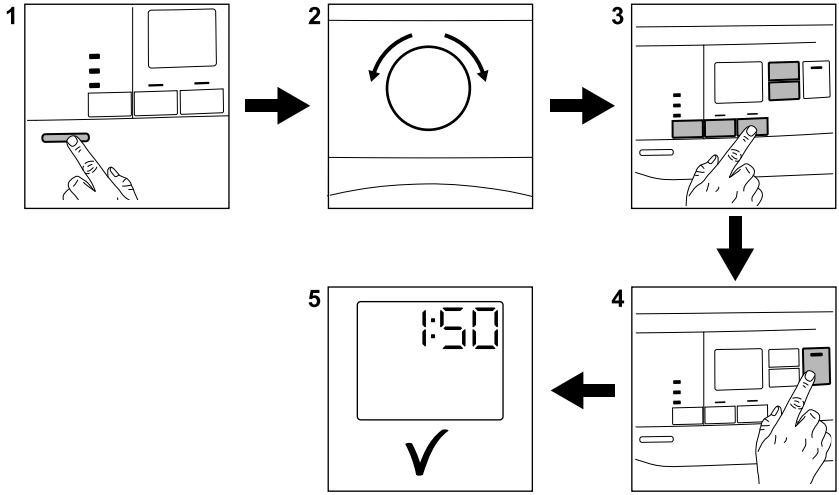

1. กดปุ่มเปิด/ปิดเพื่อเปิดเครื่อง
2. ใช้หน้าจอตั้งโปรแกรมเพื่อตั้งค่าโปรแกรมการทำงาน
3. นอกเหนือจากการตั้งโปรแกรม คุณยังสามารถตั้งค่าตัวเลือกพิเศษได้เพิ่มอีก 1 รายการขึ้นไป เปิดหรือปิดใช้งานตัวเลือกในการตั้งค่าโดยกดปุ่มที่เกี่ยวข้อง
4. เริ่มโปรแกรมการทำงานโดยกดที่ปุ่ม **Start/Pause** (เริ่ม/หยุดชั่วคราว)
5. เครื่องจะเริ่มการทำงาน

14.2 การทำความสะอาดตัวกรอง

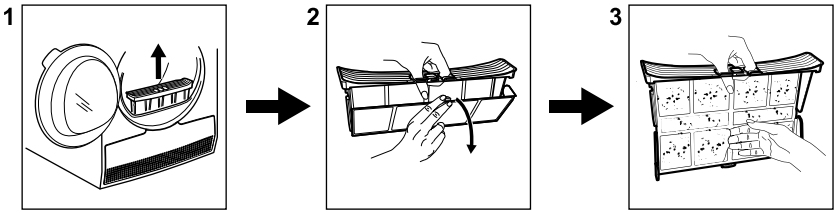

ในตอนท้ายของแต่ละรอบการทำงาน สัญลักษณ์ของตัวกรอง ⊞ จะปรากฏขึ้นที่จอแสดงผลโดยคุณจะต้องทำความสะอาดตัวกรอง

14.3 โปรแกรมการทำงาน

โปรแกรม	น้ำหนัก 1)	คุณสมบัติ / ประเภทของผ้า2)	
Favourite (อบประจำ) ☆	ขึ้นอยู่กับโปรแกรมการทำงานที่บันทึกไว้	คุณสามารถตั้งโปรแกรมการทำงานและตัวเลือกต่าง ๆ และบันทึกไว้ในหน่วยความจำของเครื่อง (ดูในหัวข้อ "*ค่าปรับตั้ง - รายการโปรด*☆ ")	
Cottons (ผ้าฝ้าย)	**8 กก.**	ผ้าฝ้าย	/
Mixed (ผ้าผสม)	**3 กก.**	ผ้าฝ้ายและใยสังเคราะห์ โปรแกรมอุณหภูมิต่ำ โปรแกรมสำหรับผ้าบางโดยใช้ลมอุ่น	/
Bedding (เครื่องนอน)	**3 กก.**	อบแห้งผ้าปูเตียง เช่น ผ้าปูเตียงหนึ่งและสองชิ้น ปลอกหมอน ปลอกผ้านวม	/
Synthetics (ผ้าใยสังเคราะห์)	**3,5 กก.**	ผ้าใยสังเคราะห์และผ้าเนื้อผสม	/
Energy Saver (อบประหยัด)	**8 กก.**	รอบการทำงานสำหรับอบแห้งผ้าฝ้ายที่ระดับความแห้ง “สำหรับผ้าฝ้ายที่พับเก็บเข้าตู้” โดยเน้นการประหยัดพลังงานในระดับสูงสุด	/
Refresh (ลดรอยยับ)	**1 กก.**	ให้ความสดชื่นแก่ผ้าที่จัดเก็บไว้นาน	
Denim (ชุดกีฬา)	**4 กก.**	สำหรับผ้าลำลอง เช่น ยีนส์ เสื้อแขนยาว ที่ใช้วัสดุหนาต่างกัน (เช่น ที่คอ ข้อมือและตะเข็บ)	/
Sports (ชุดกีฬา)	**2 กก.**	ชุดกีฬา ผ้าเนื้อบางเบา ไมโครไฟเบอร์ โพลิเอสเตอร์	/
Easy Iron (รีดง่าย)	**1 กก. (หรือเสื้อเชิ้ต 5 ตัว)**	ผ้าที่ดูแลได้ง่ายซึ่งไม่ต้องใช้ความร้อนสูงในการรีด ผลการอบแห้งอาจแตกต่างกันไปตามชนิดของผ้า กระจายผ้าก่อนใส่เข้าในเครื่อง หลังจากสิ้นสุดโปรแกรม ให้นำผ้าออกทันทีแล้วแขวนไว้	/

โปรแกรม	น้ำหนัก 1)	คุณสมบัติ / ประเภทของผ้า2)
Shirts (เสื้อเชิ้ต)	**1.5 กก. (หรือเสื้อเชิ้ต 7 ตัว)/**	ผ้าที่ดูแลได้ง่ายซึ่งไม่ต้องใช้ความร้อนสูงในการรีด ผลการอบแห้งอาจแตกต่างกันไปตามชนิดของผ้า กระจายผ้าก่อนใส่เข้าในเครื่อง หลังจากสิ้นสุดโปรแกรม ให้นำผ้าออกทันทีแล้วแขวนไว้ /
Wool (ผ้าขนสัตว์)	**1 กก.**	ผ้าขนสัตว์ อบแห้งผ้าขนสัตว์แบบซักมือได้อย่างอ่อนโยน นำออกทันทีเมื่อสิ้นสุดโปรแกรม
Delicates (ผ้าเนื้อบาง)	**4 กก.**	ผ้าเนื้อบาง เช่น วิสโคส เรยอน อะคริลิคและผ้าเนื้อผสมเหล่านี้ /

1) น้ำหนักสูงสุดใช้กับผ้าแห้ง

2) ดูรายละเอียดเครื่องหมายกำกับสำหรับผ้าได้จากหัวข้อ *เคล็ดลับและคำแนะนำ: การจัดเตรียมผ้า*

15. ข้อมูลเพื่อการรักษาสิ่งแวดล้อม

รีไซเคิลวัสดุที่มีสัญลักษณ์ ♲ ใส่บรรจุภัณฑ์ลงในภาชนะบรรจุที่เหมาะสมเพื่อนำไปรีไซเคิล ช่วยปกป้องสิ่งแวดล้อมและสุขภาพของมนุษย์ และเพื่อรีไซเคิลขยะอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ อย่าทิ้งอุปกรณ์ที่มีเครื่องหมายสัญลักษณ์ รวมกับขยะในครัวเรือน ส่งคืนผลิตภัณฑ์ไปยังโรงงานรีไซเคิลในท้องถิ่น หรือติดต่อสำนักงานเทศบาลของคุณ

www.electrolux.com/shop

136958131-A-042019

CE